


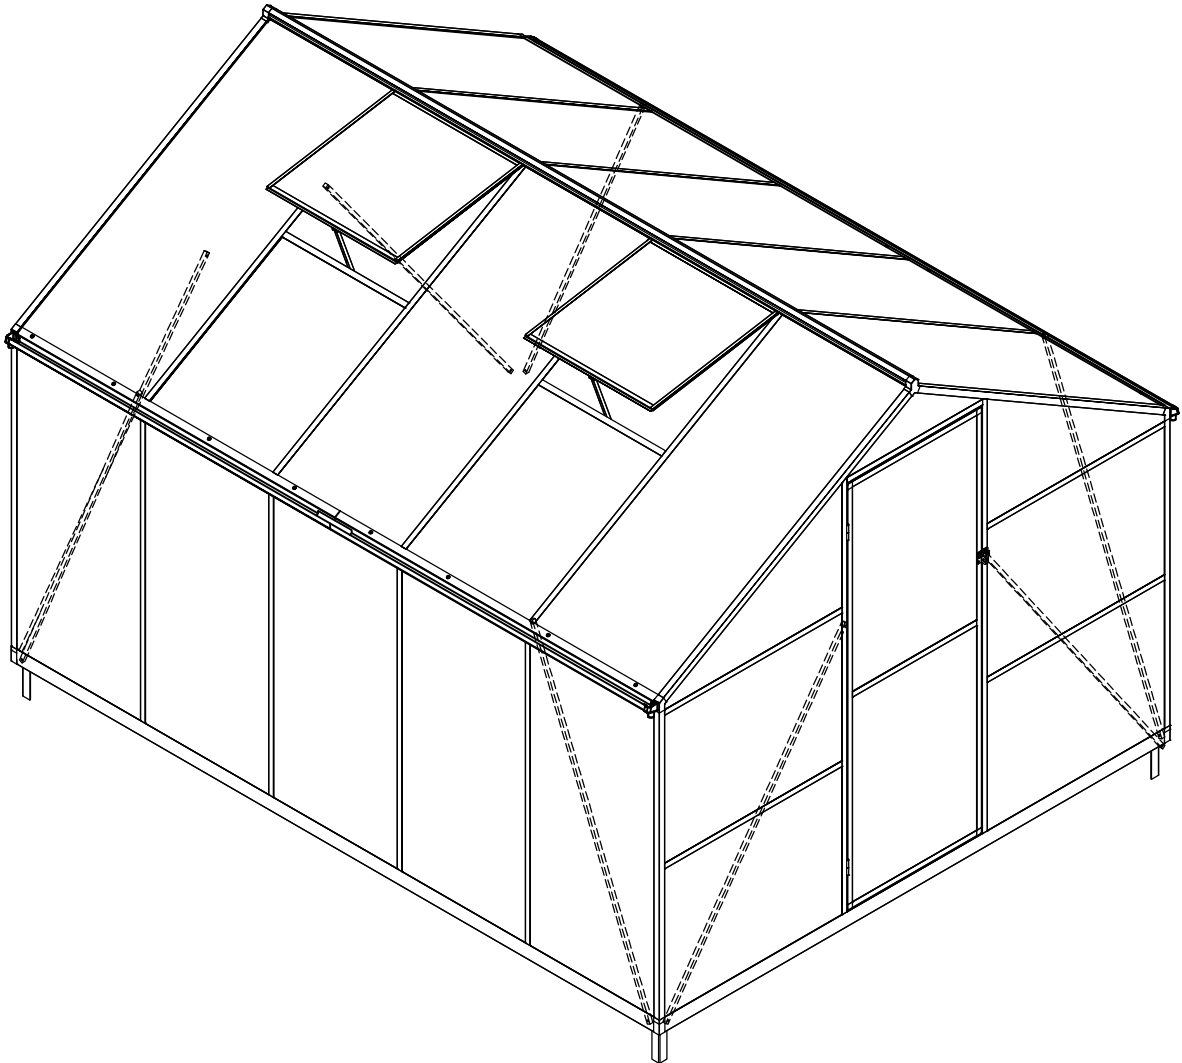


Nordgro Greenhouses









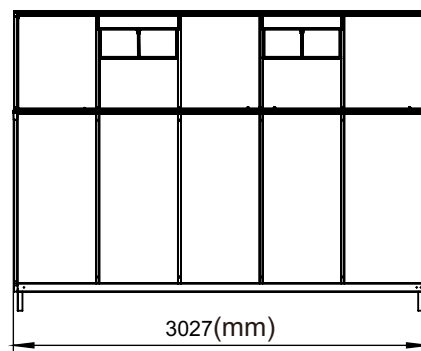









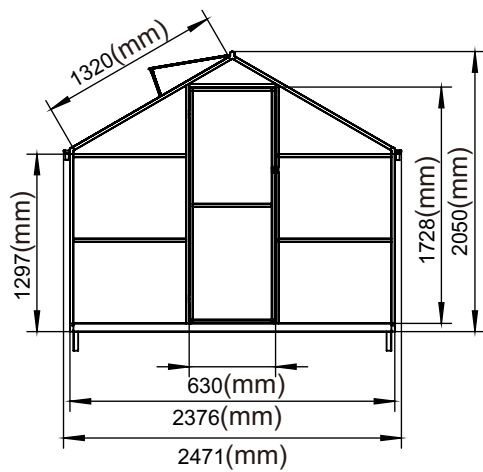


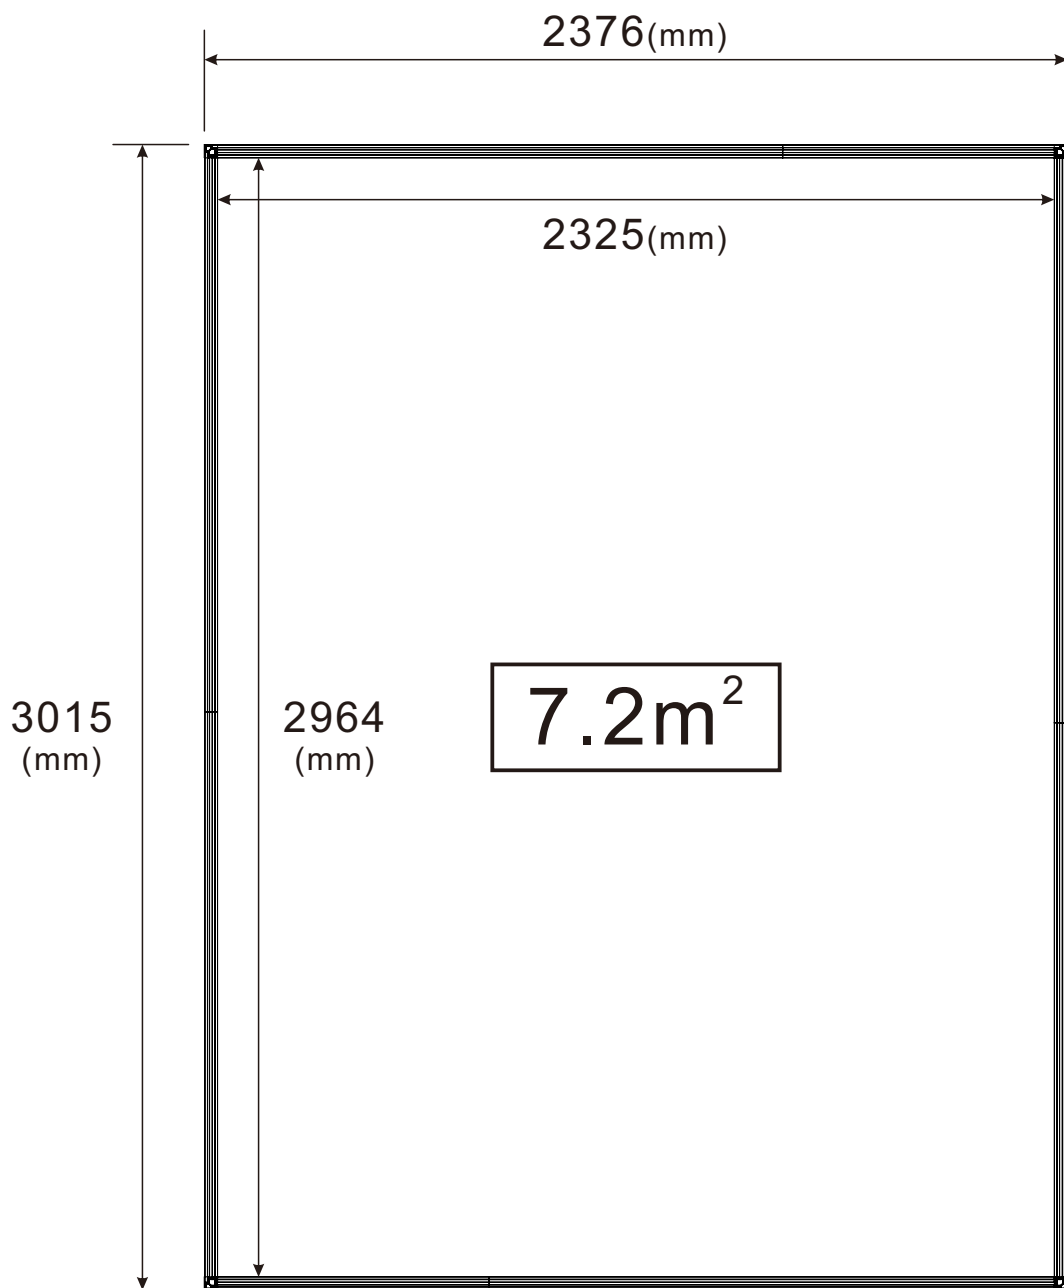

A1-1		x2
A1-2		x2
A2-1		x2
A2-2		x2
A3-1		x2
A3-2		x2
A4		x2
A5-1		x2
A5-2		x2
A6-1		x1

A6-2		x1
A7-1		x1
A7-2		x1
A8-1		x1
A8-2		x1
A9		x1
A10-1		x2
A10-2		x2
A11-1		x1
A11-2		x1

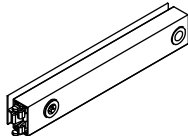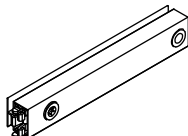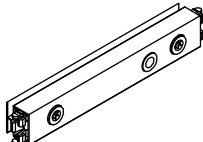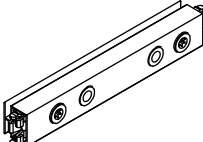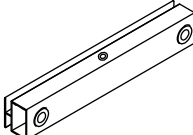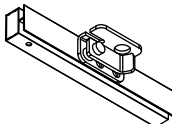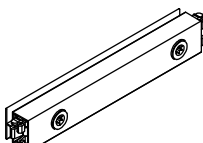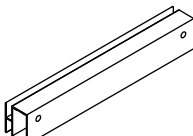A12		x4
A13		x4
A15		x8
A16		x4
A17		x2
A18-1		x1
A18-2		x1
A19		x2
A20		x2

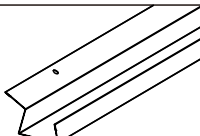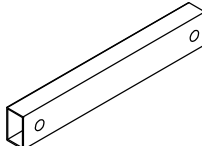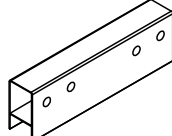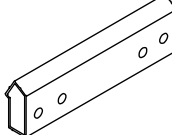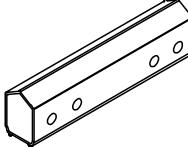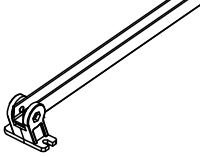
A21		x4
A23		x8
A24		x4
A25		x4
A26		x8
A27		x4
A28		x2
A29		x1
A30		x2

H1		x4
H2		x2
H3		x2


H4		x2
H5		x2

H6		x22	M6x30
H7		x1	
H8		x66	M6x12
H9		x30	M6
H11		x12	ST4x8
H12		x8	ST5x10
H13		x16	ST5x16

H14		x1	
H15		x1	
H16		x2	
H17		x4	
H18		x24	M6x20
H19		x2	
H20		x2	M4x40
H21		x12	

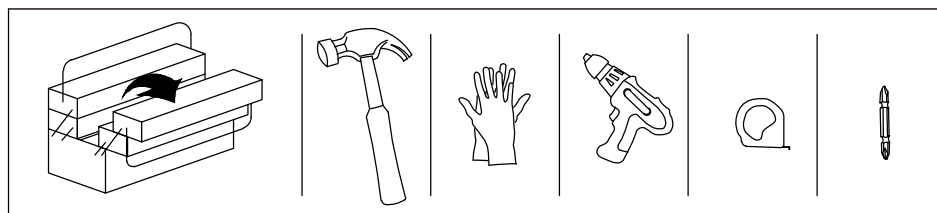


Not included in package.


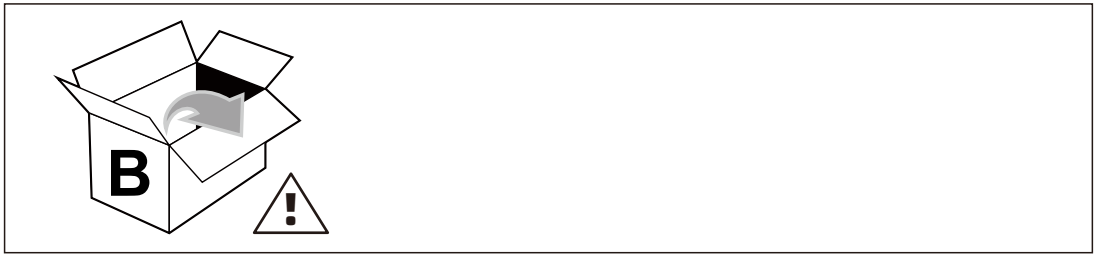




B1		4
B2		4
B3		10
B4		8
B5		2
B6		3
B7-1		1
B7-2		1

B8		1
B9-1		1
B9-2		1
B10		1
B11		2

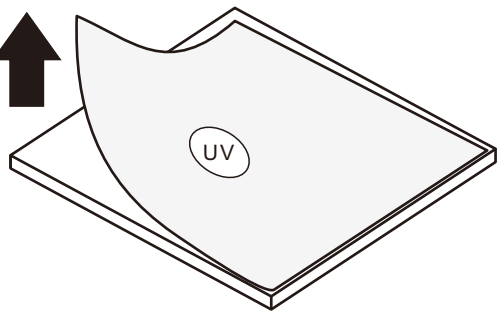


UV-Label side to be installed outside;
Film on both sides to be peeled off
before installation.

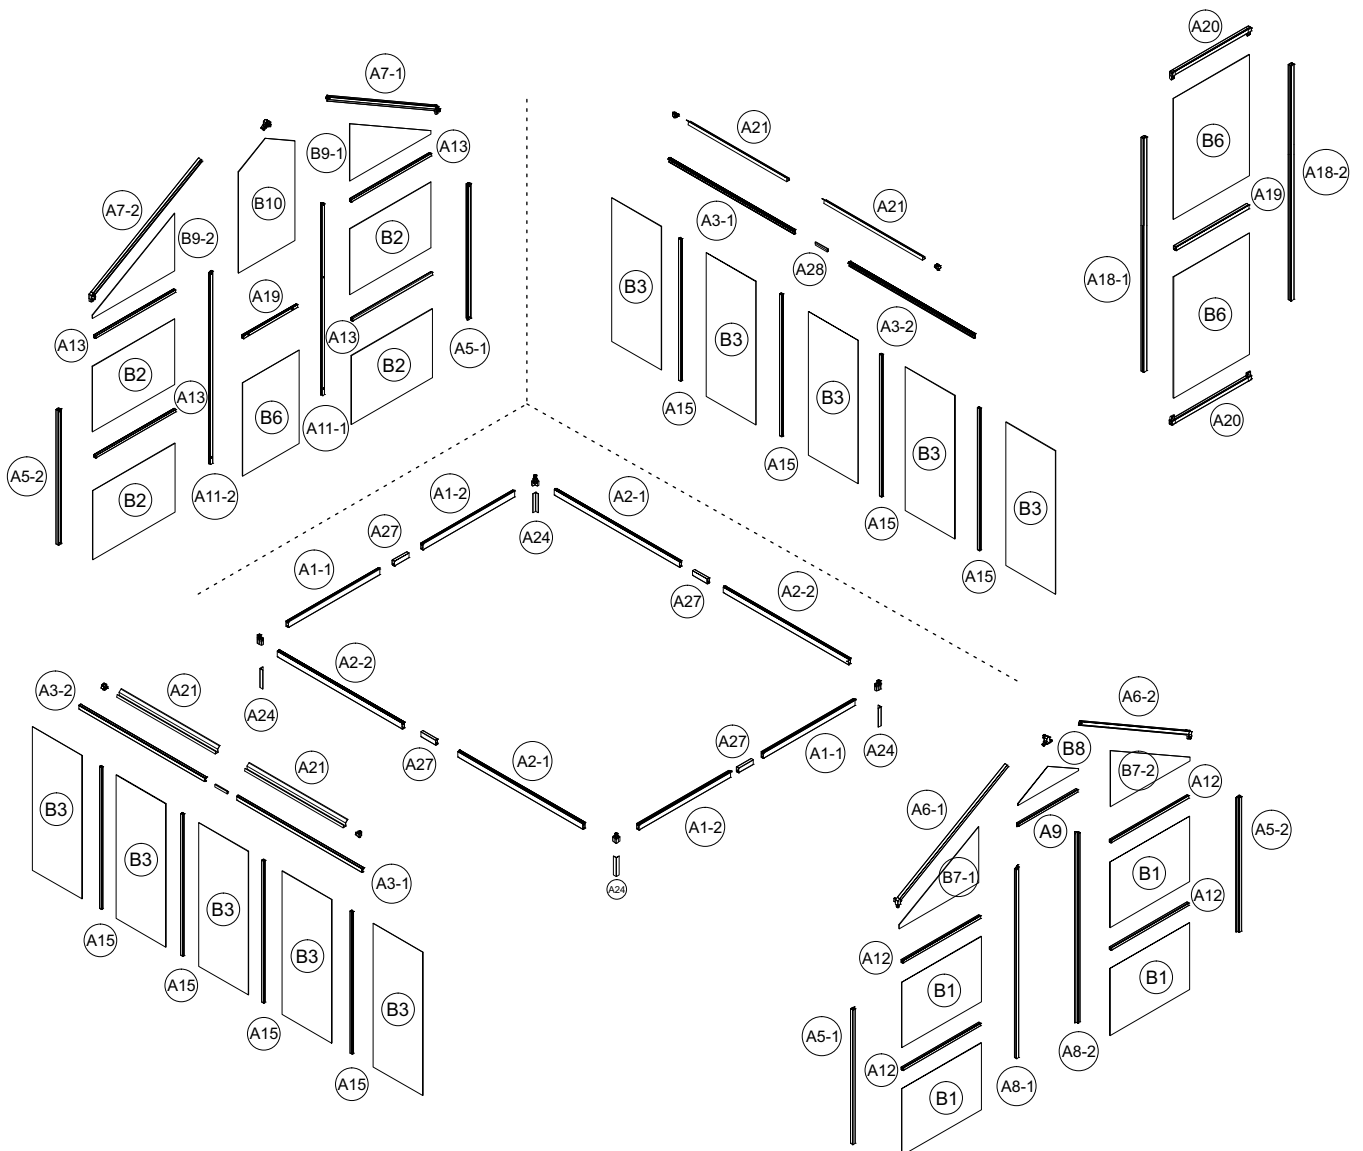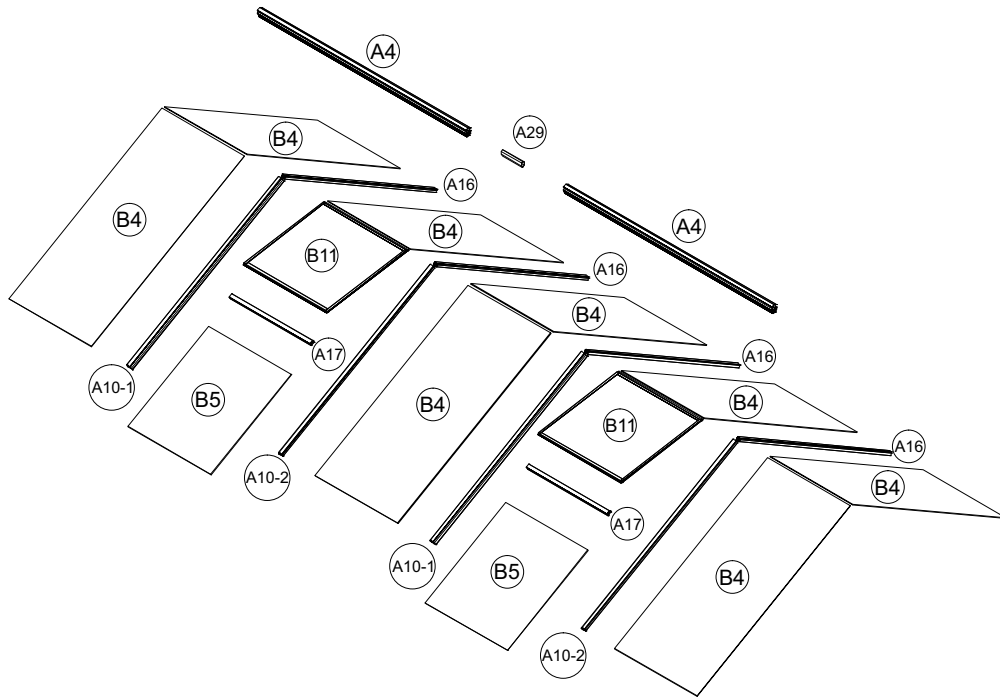

	A1-1	x2
	A1-2	x2
	A2-1	x2
	A2-2	x2
	A27	x4




	M6x30	H6	x16
	M6	H9	x16

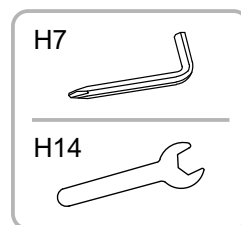


1







Please merge the fittings until there is no gap before tightening the screws.

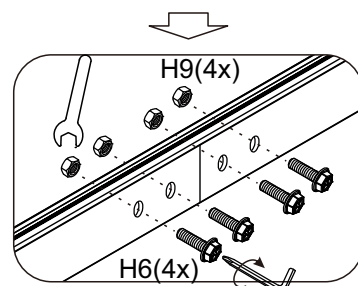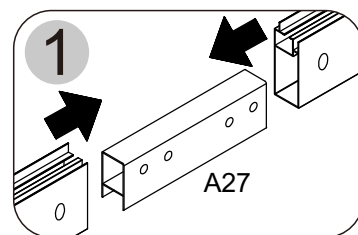
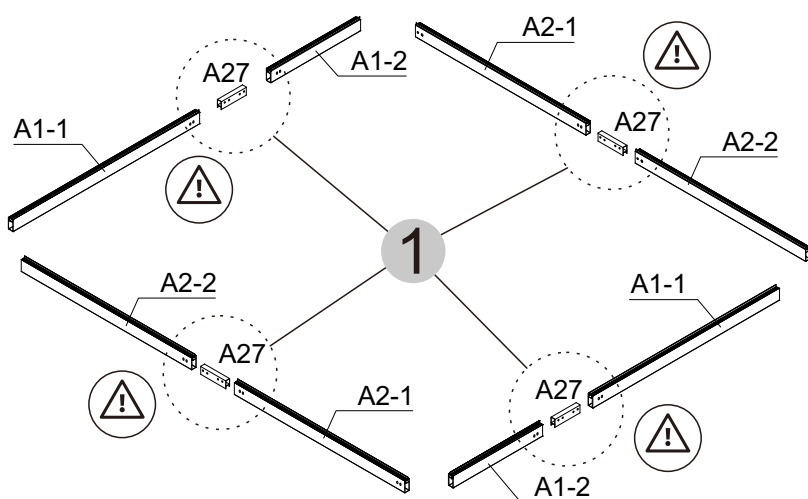


	H1	x4
 M6x12	H8	x8
	A24	x4



2

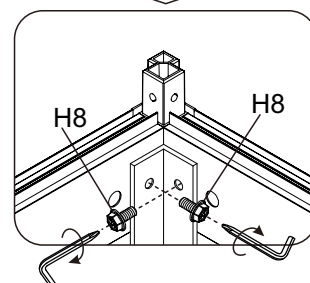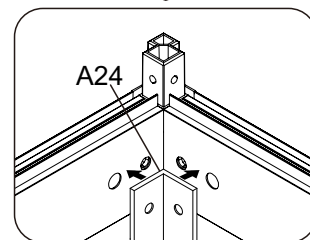
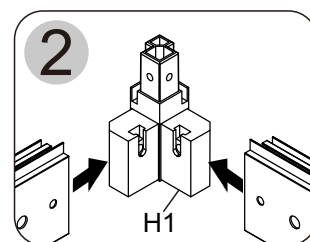
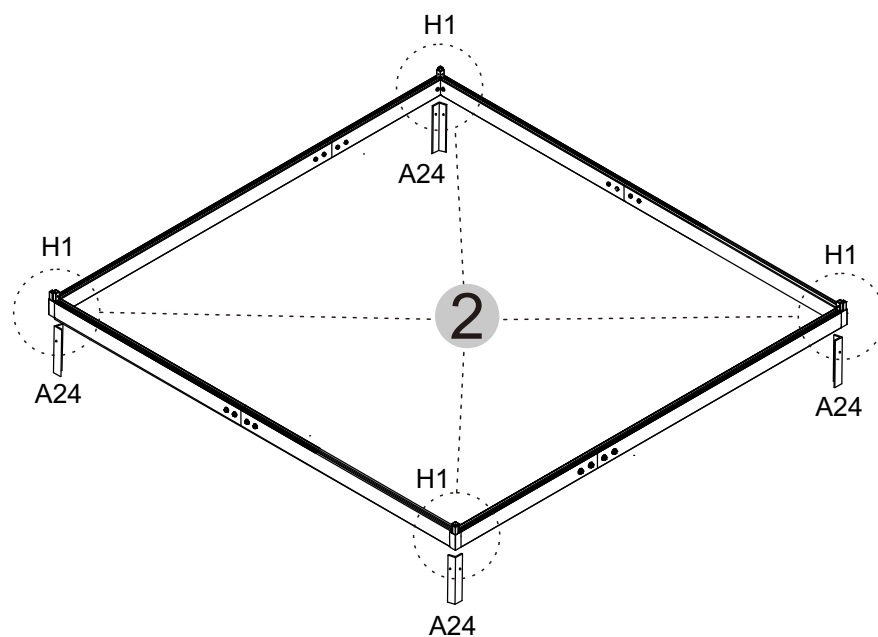


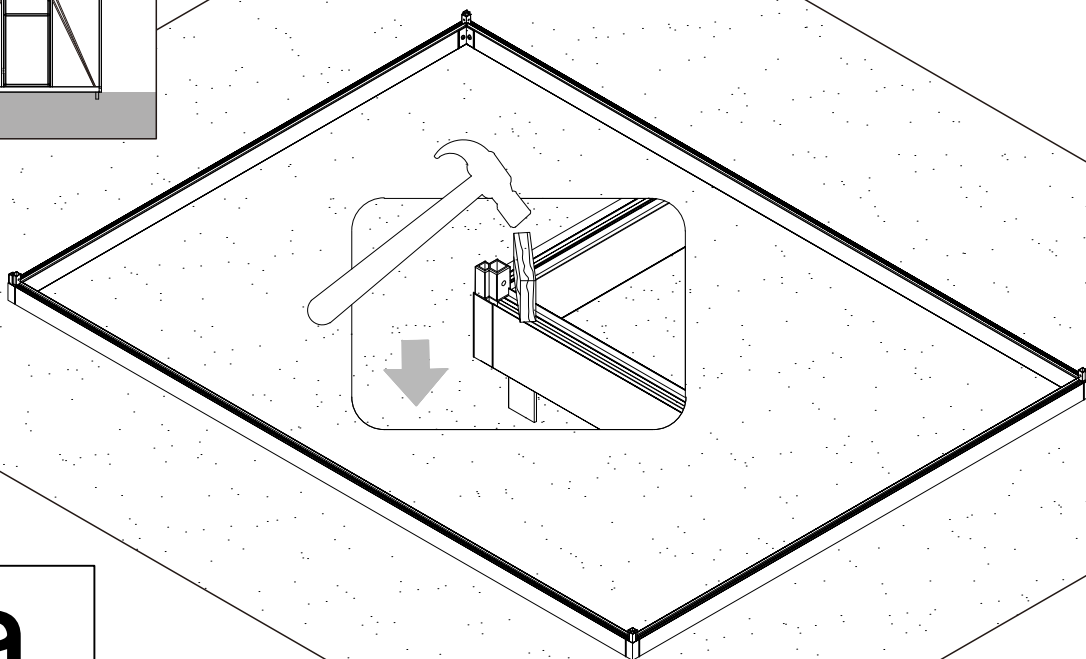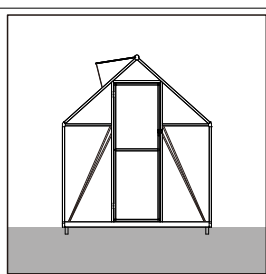


a

3



b

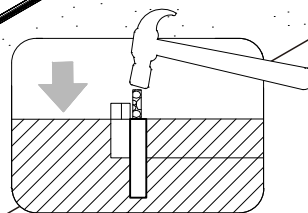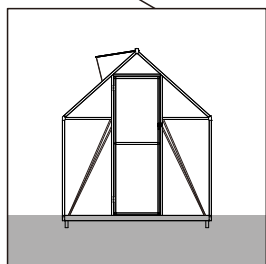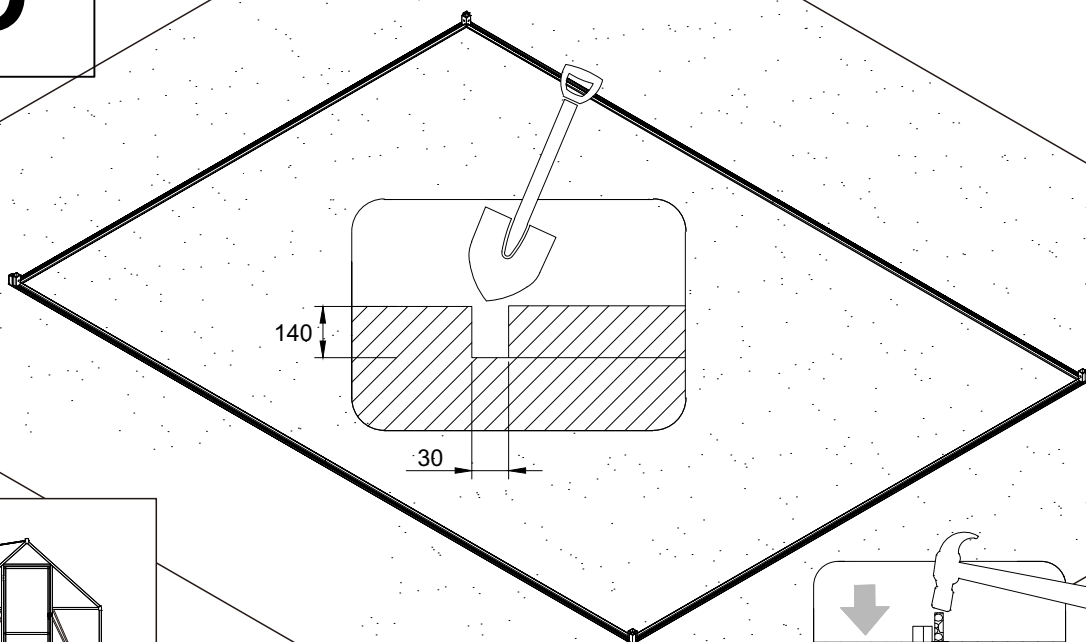

	A5-1	x2
	A5-2	x2
	H8	x4

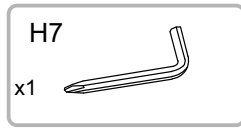



4

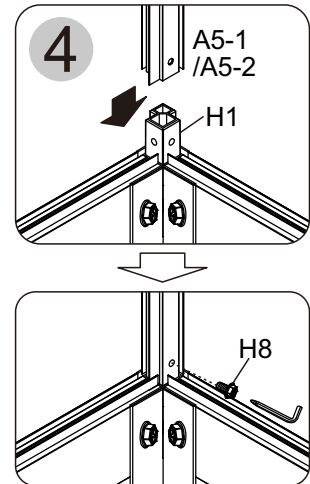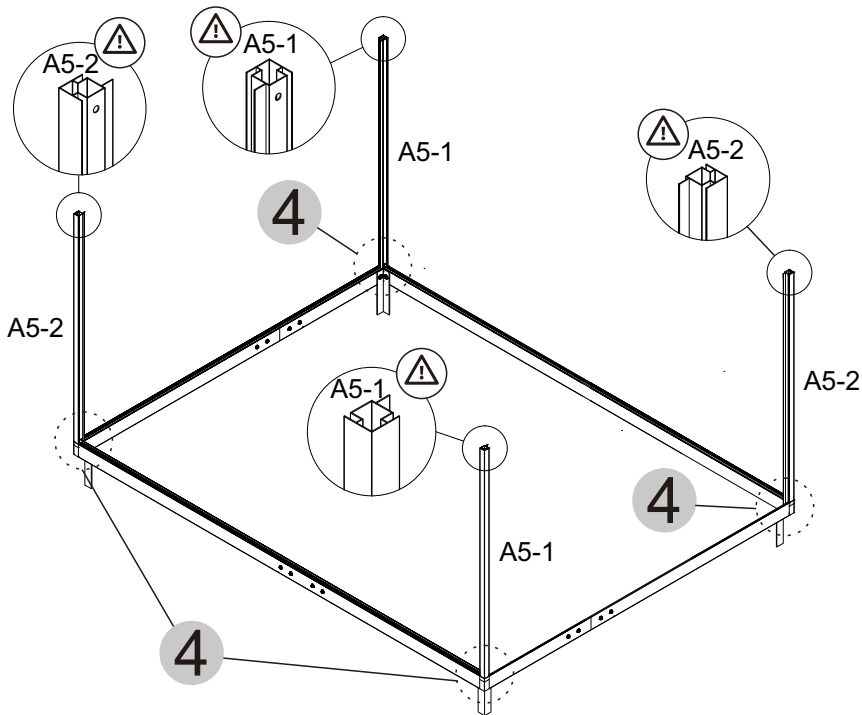




Please note the A4 orientation.


	A8-1	x1
	A8-2	x1






	B1	x2
---	----	----












5-6

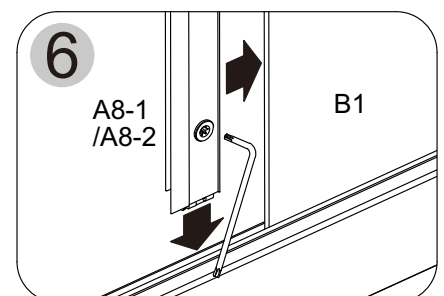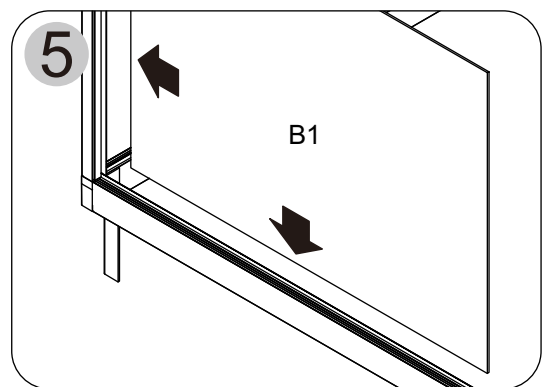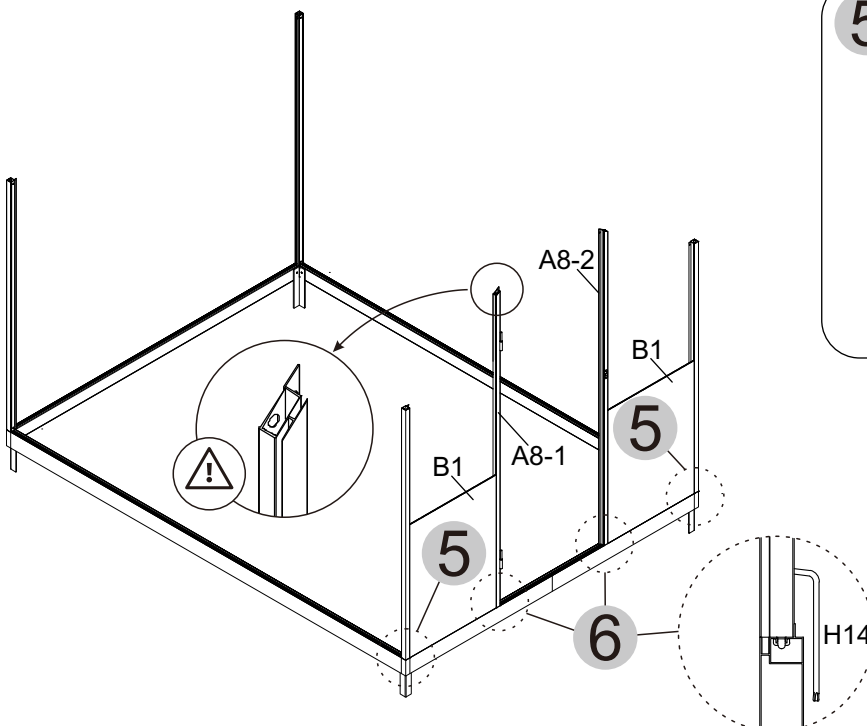

	A12	x2
 M6x12	H8	x2
	B1	x2

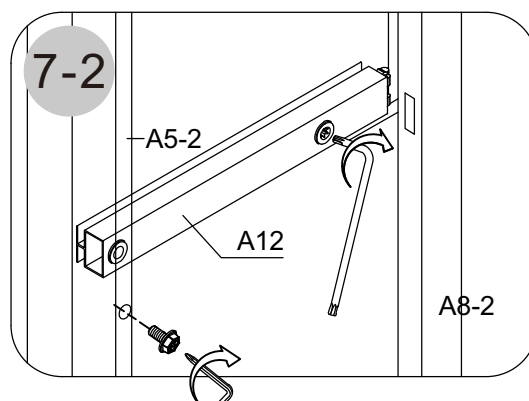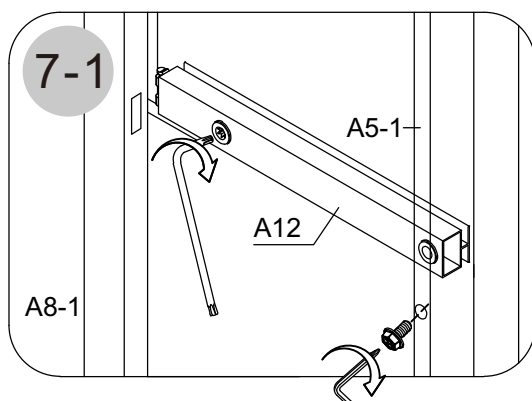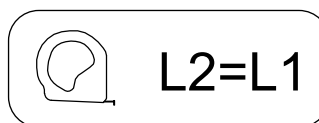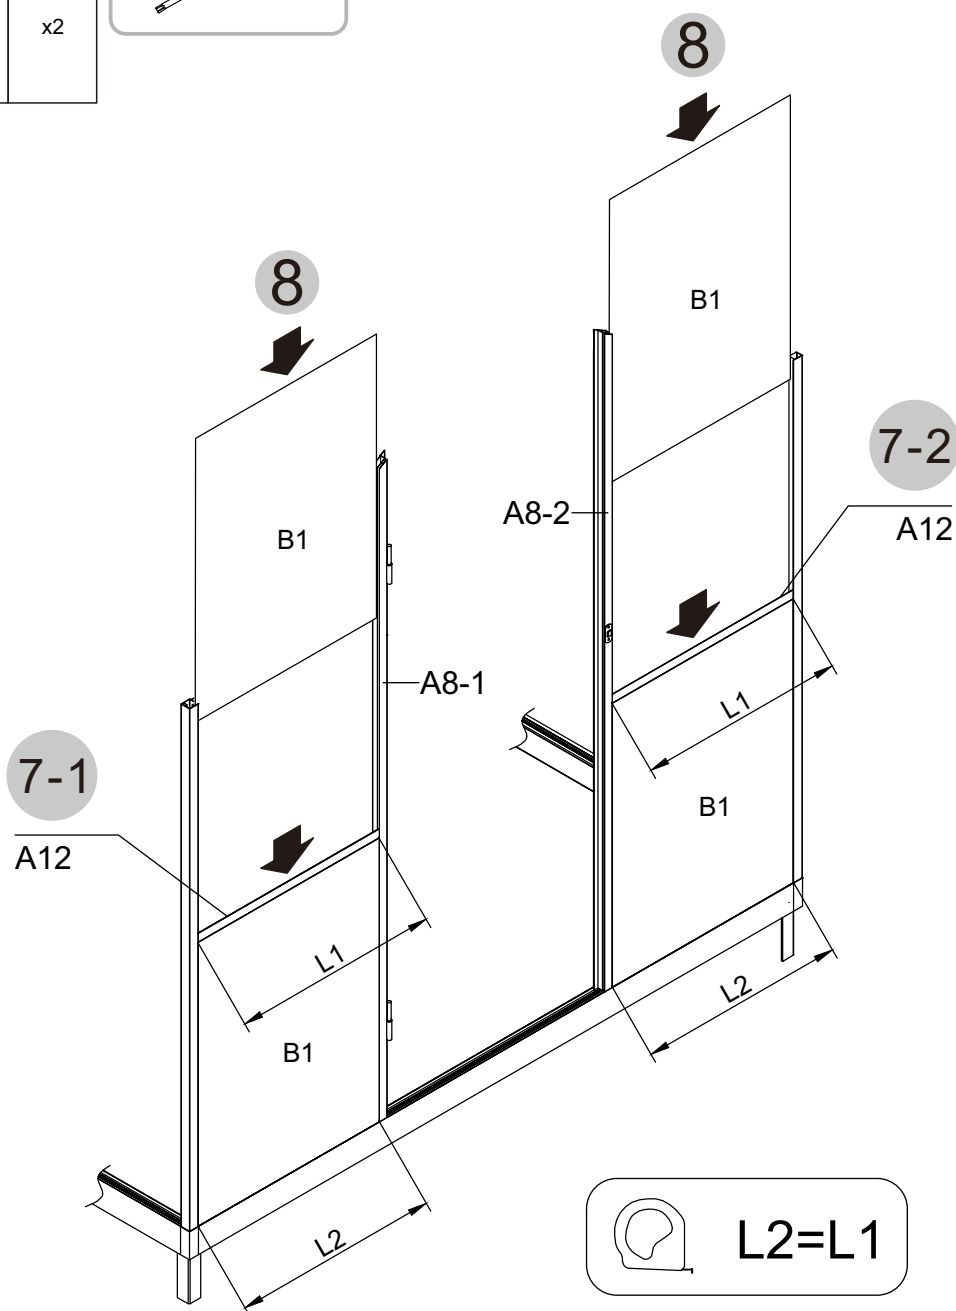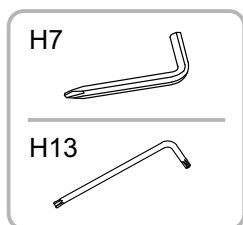



	A9	x1
	A12	x2
 M6x12	H8	x4
	B7-1	x1
	B7-1	x1

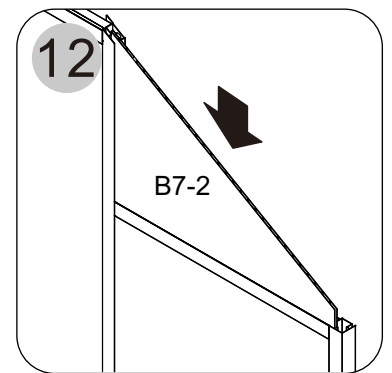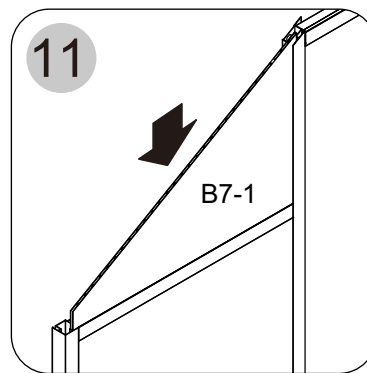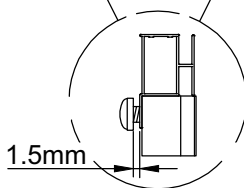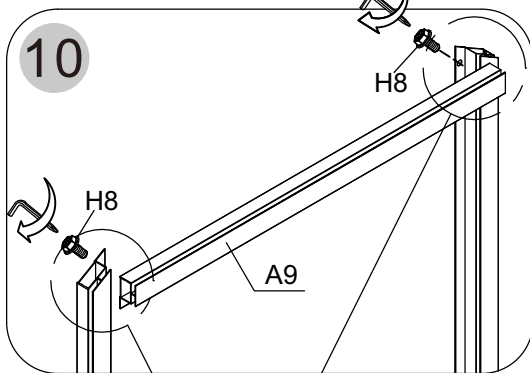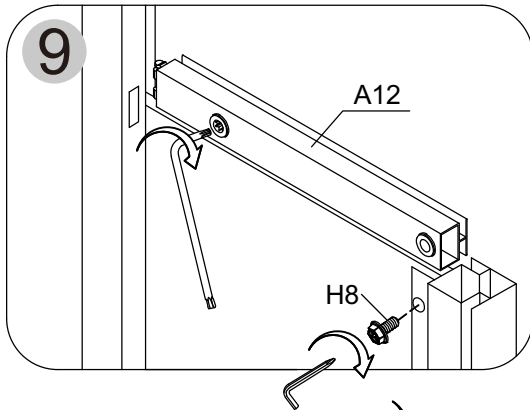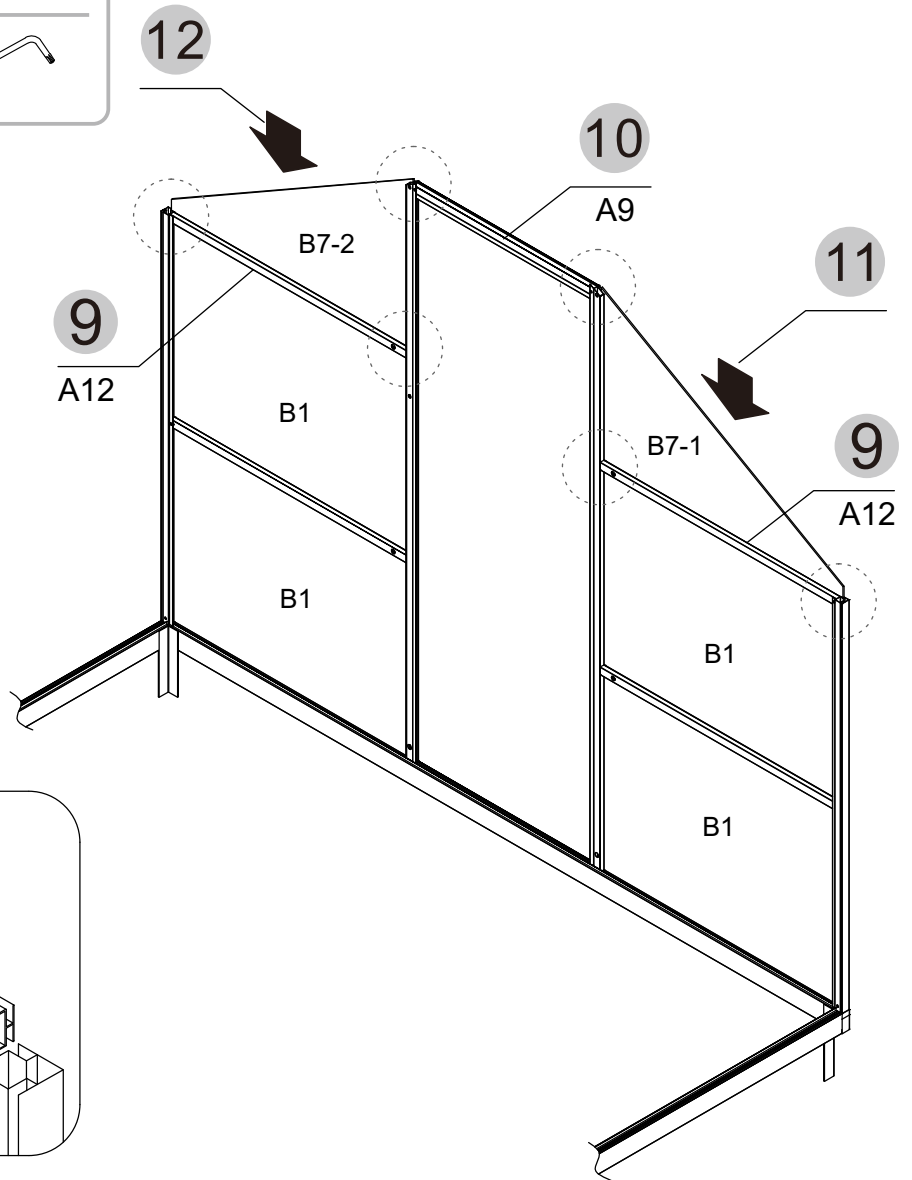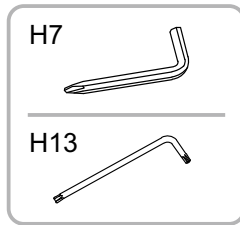







Do not tighten H8 screw well in Step 10 until Step 15 is done successfully.

	A6-1	x1
	A6-2	x1
	H2	x1
	H3	x1
	H8	x4
M6x12		

	B8	x1
---	----	----

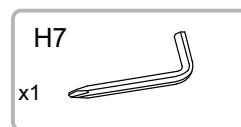

13-15

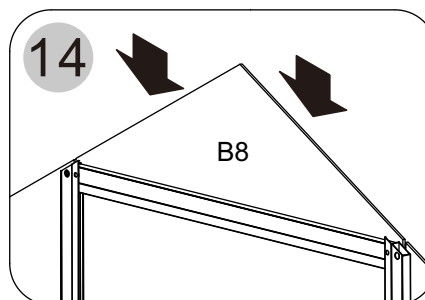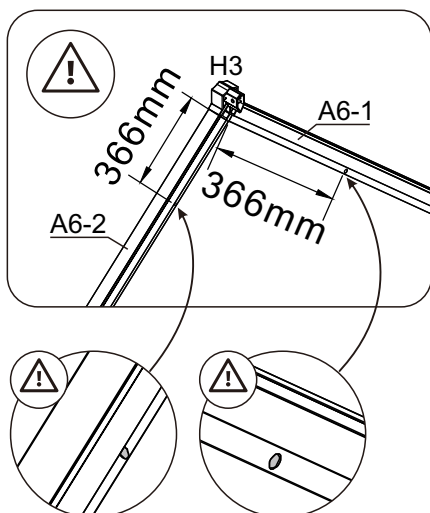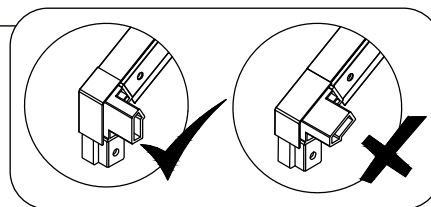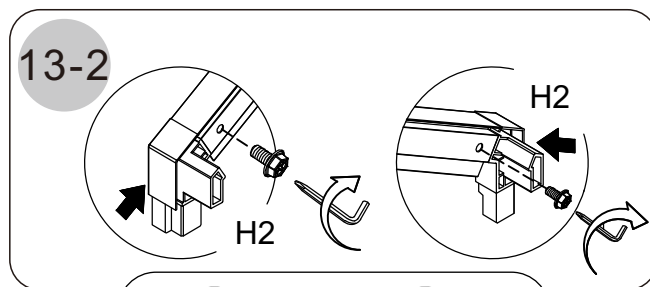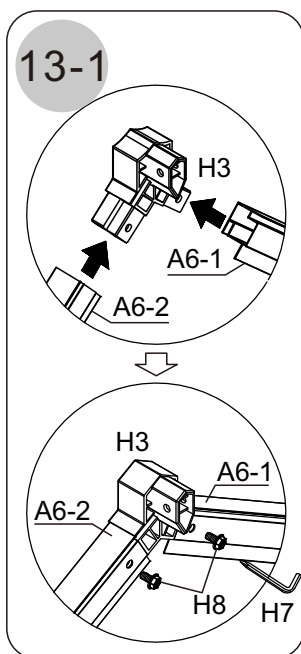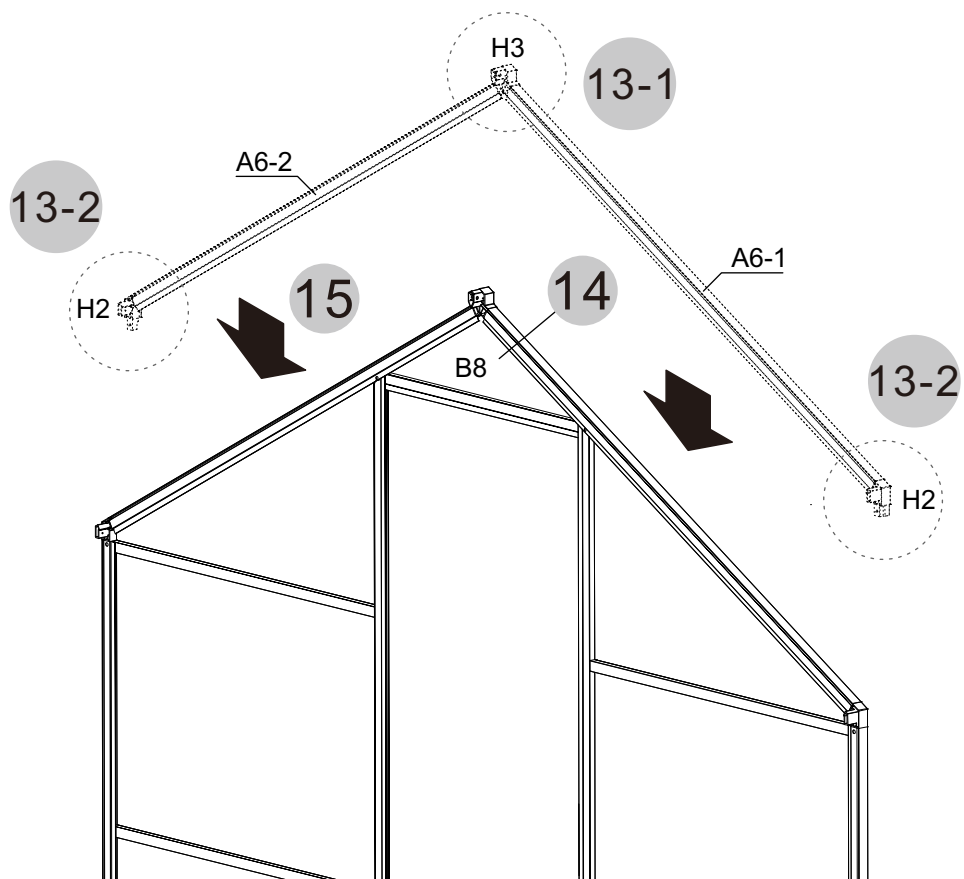


	H8	x4
--	----	----

M6x12

H7	
x1	

16

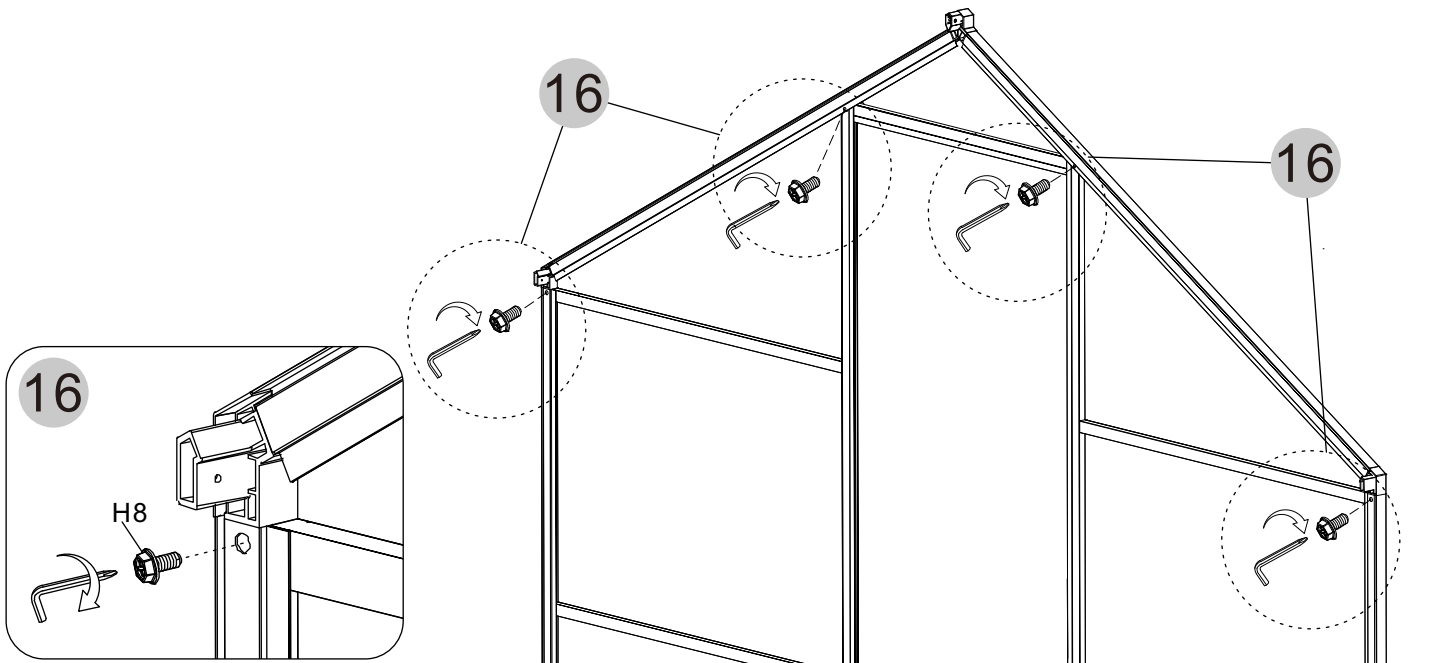


	A11-1	x1
	A11-2	x1



60°

	B2	x2
---	----	----


H13









17-18

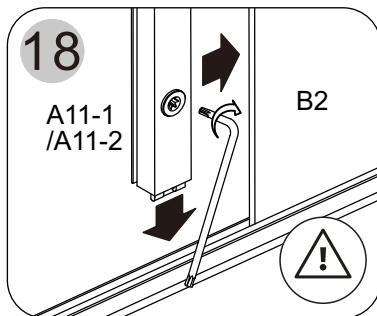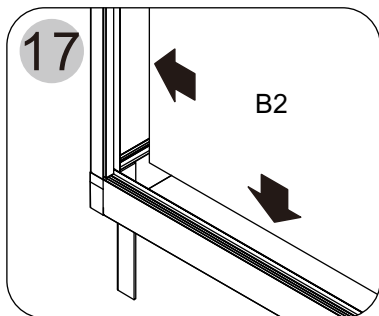


Please press the plate into place before locking it.

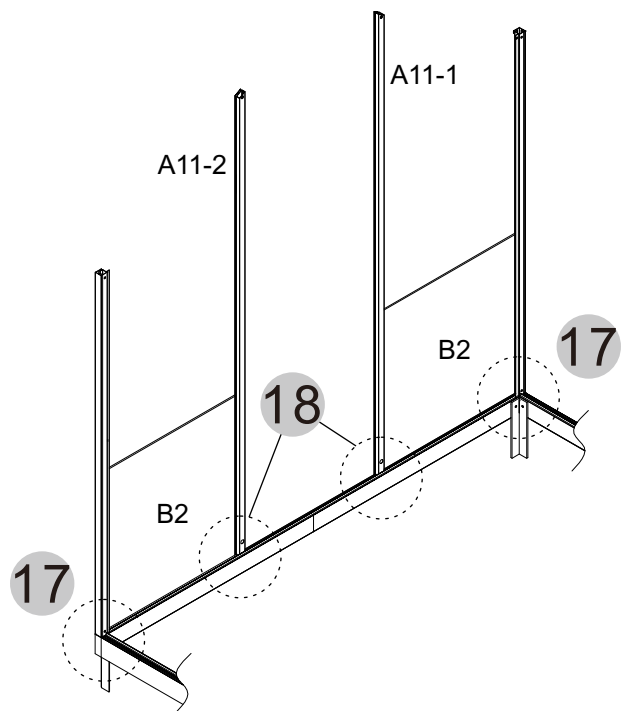





	A13	x2
	A19	x1
	H8	x2
	B6	x1

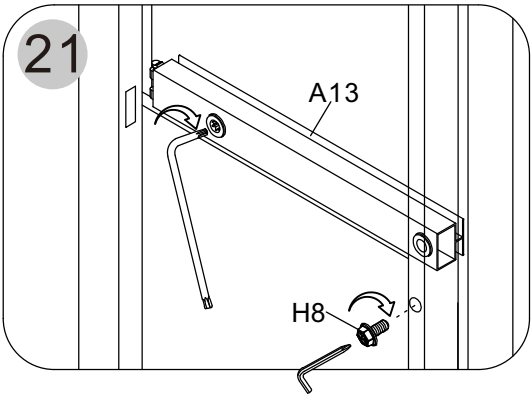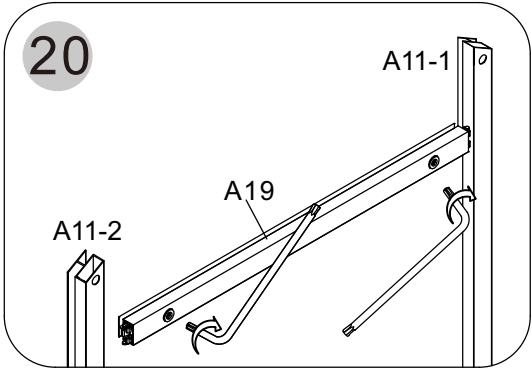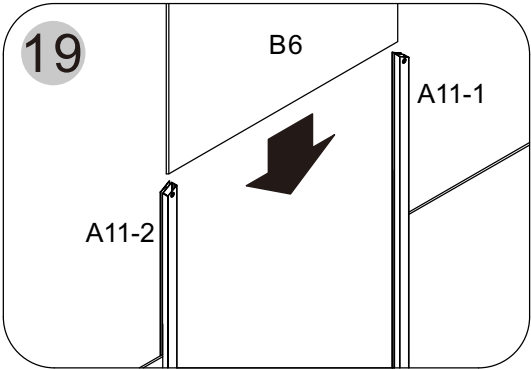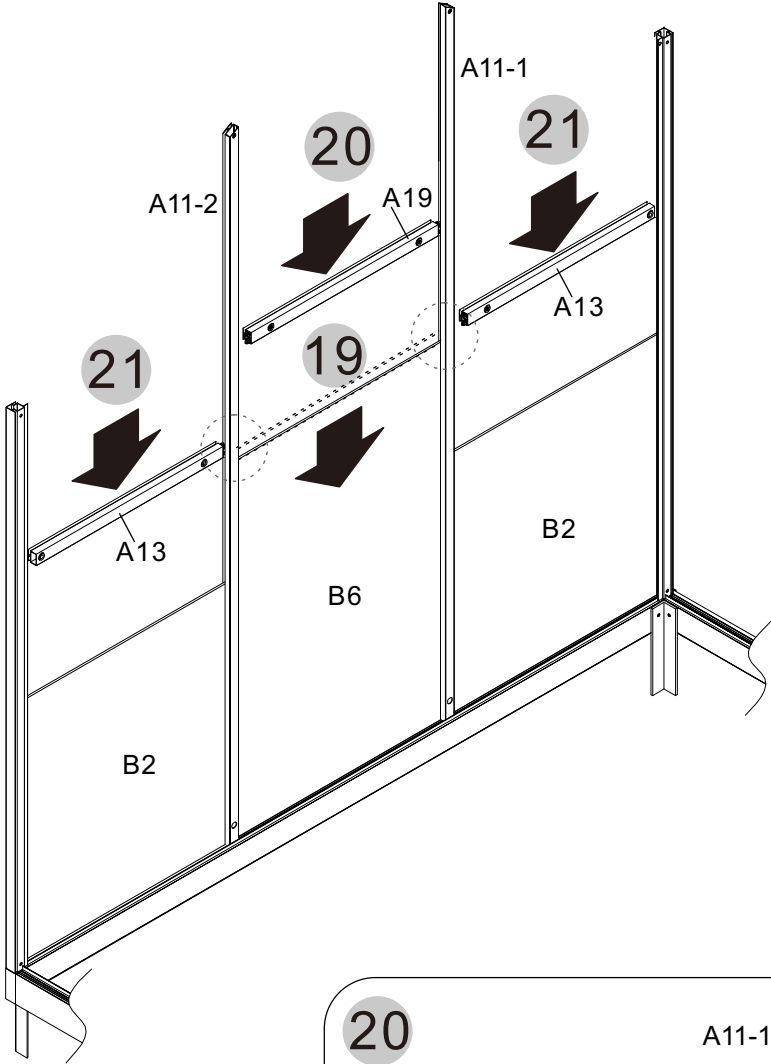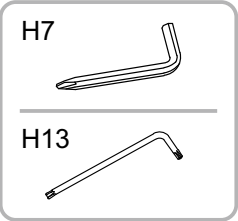


	A13	x2
	H8	x2
	B2	x2
	B10	x1

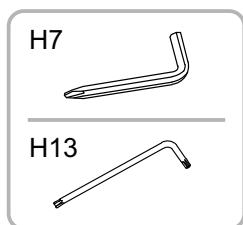



22-24

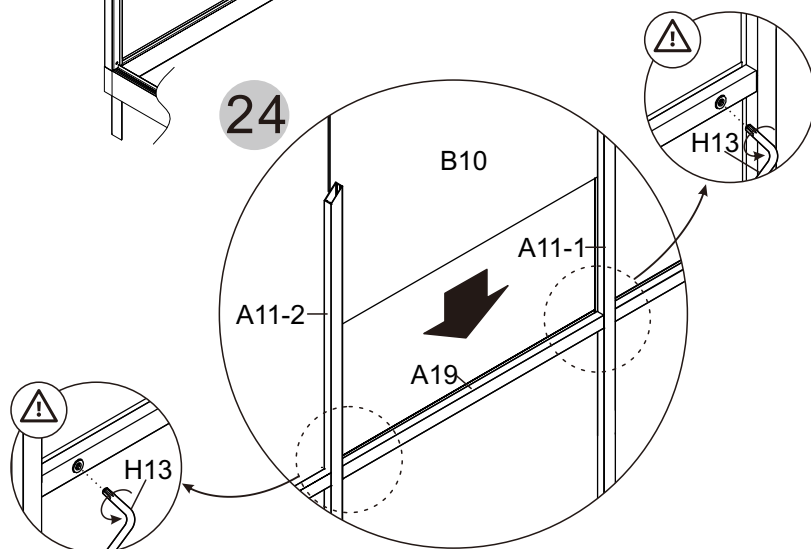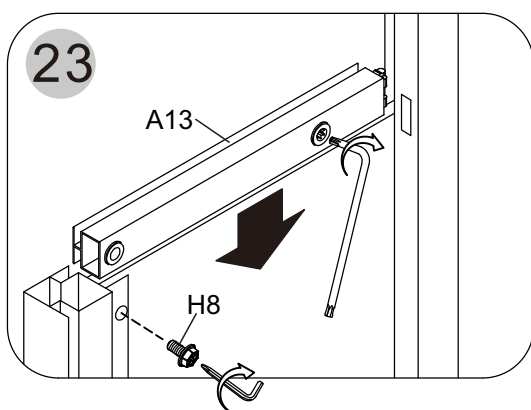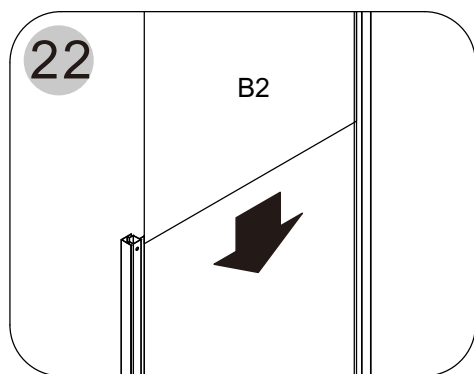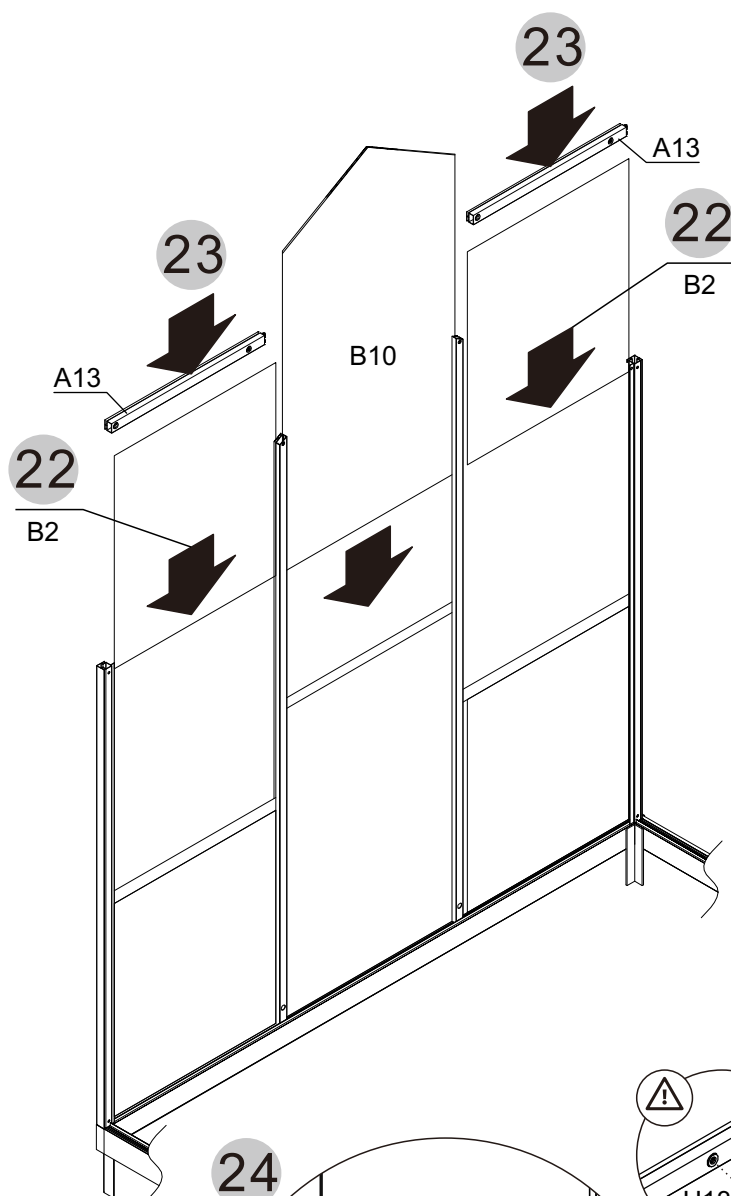


For better B10 installation, loose screws a bit, insert B10 and then tighten the screws again.





	A7-1	x1
	A7-2	x1
	H2	x1
	H3	x1
	H8	x8

M6x12

	B9-1	x1
	B9-2	x1




25-27



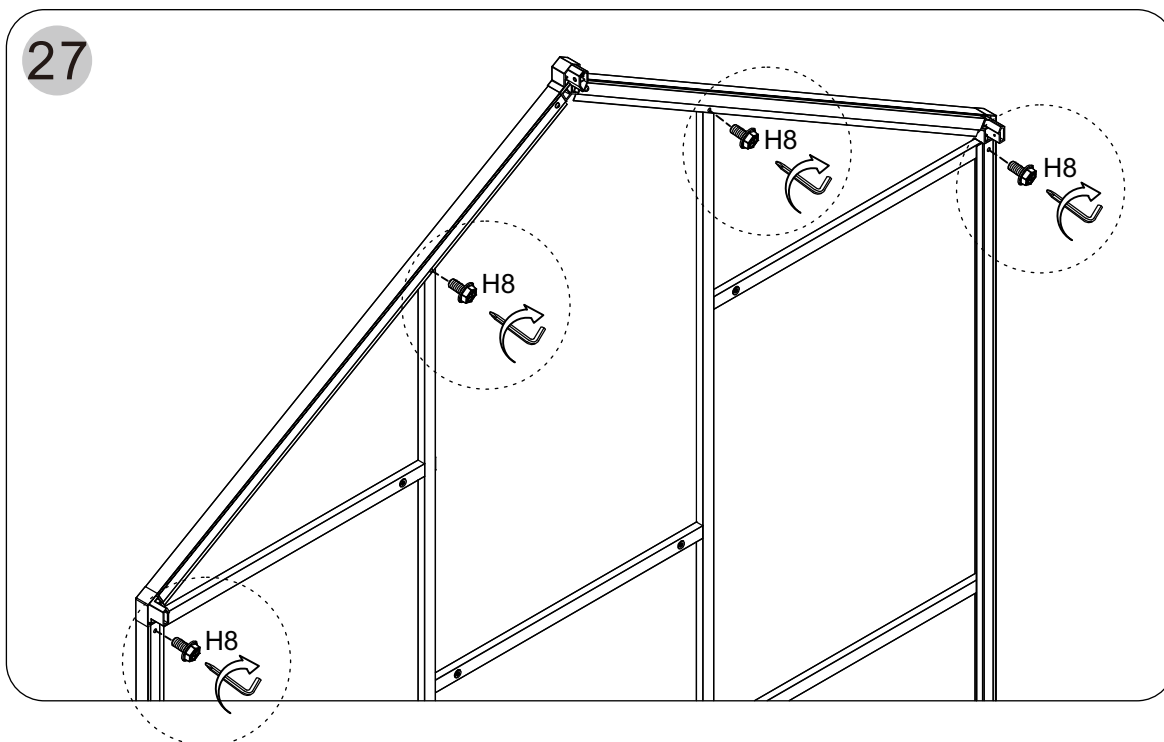
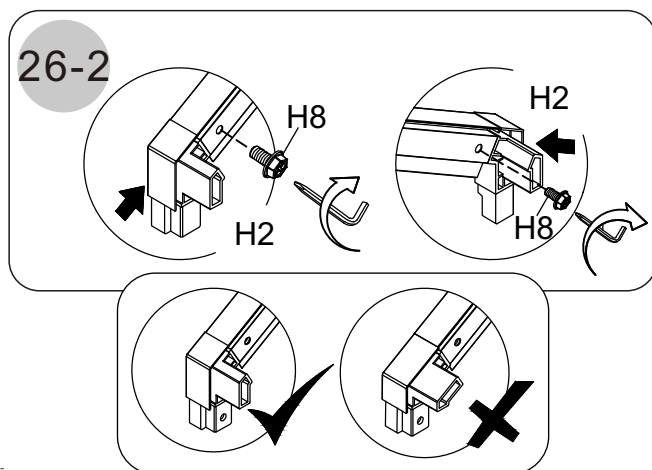
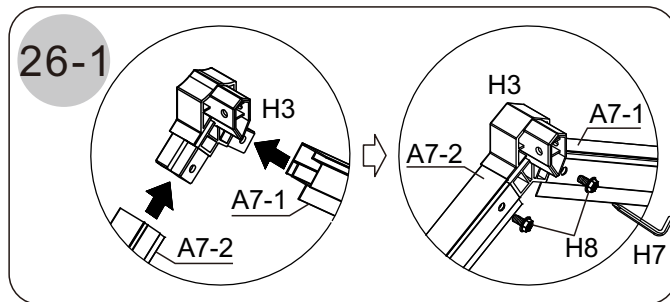
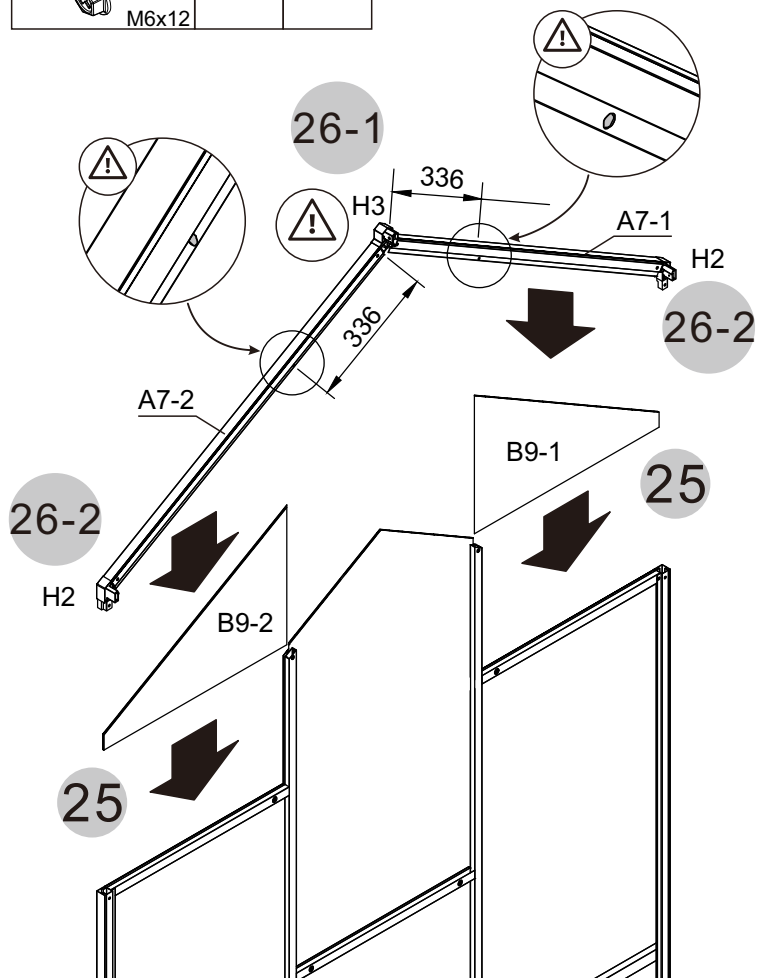


	A3-1	x2
	A3-2	x2
	A4	x2
	A28	x2


	A29	x1
 M6x30	H6	x4
 M6	H9	x12
 M6x20	H18	x8






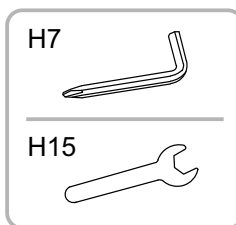


28-29

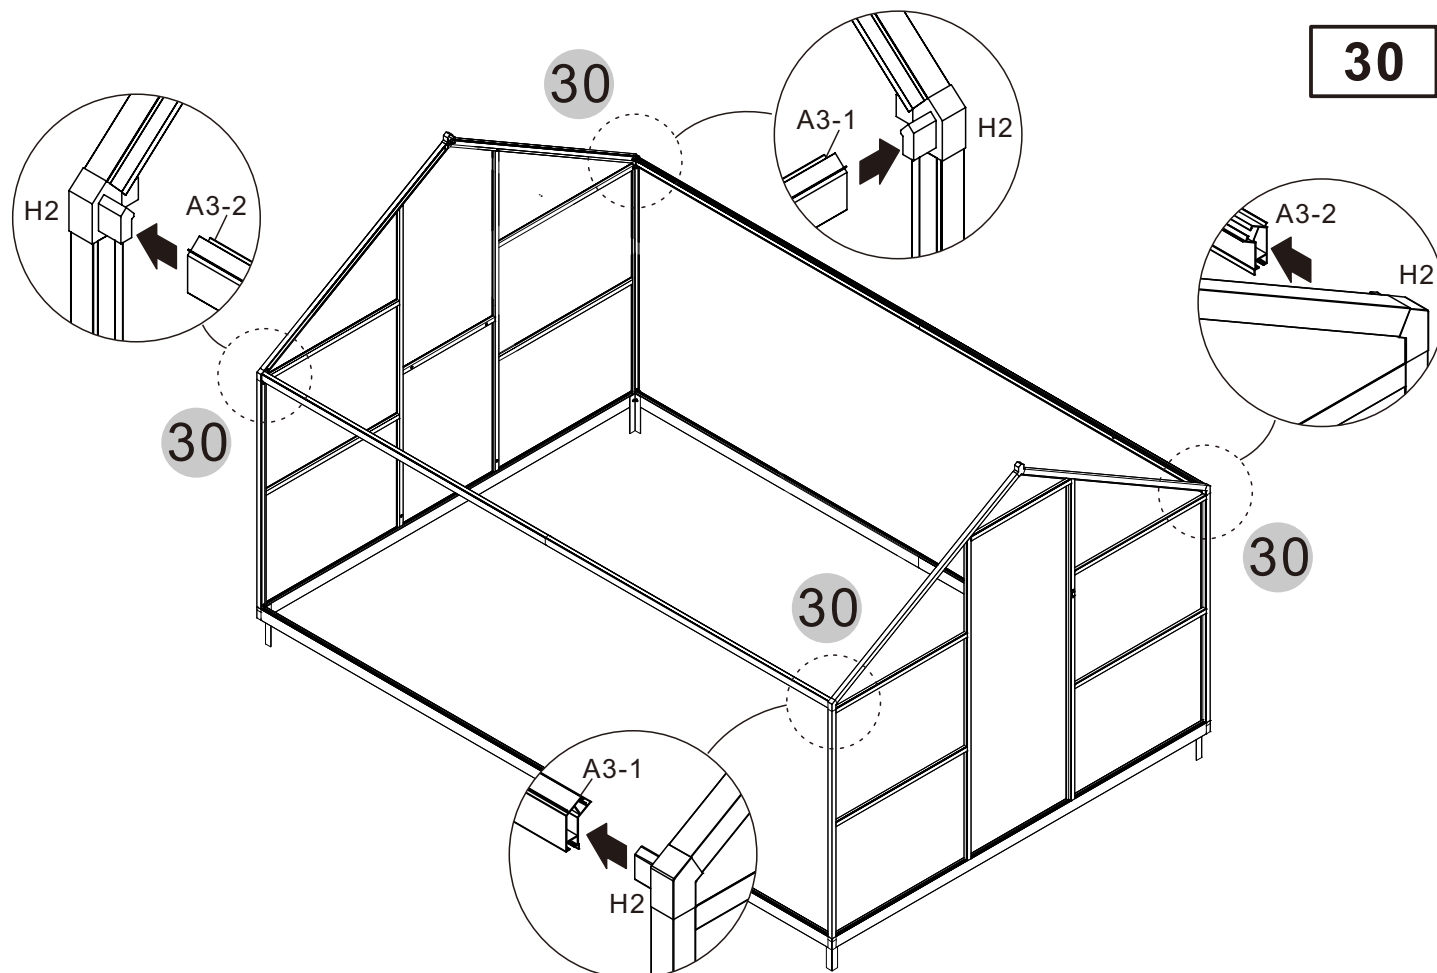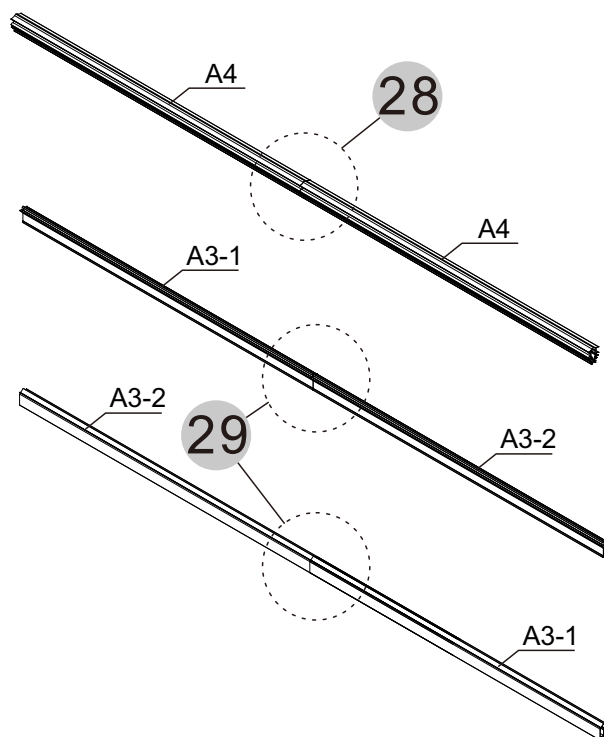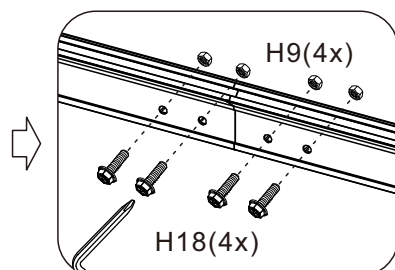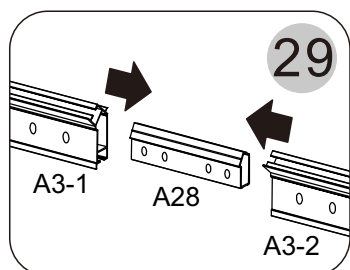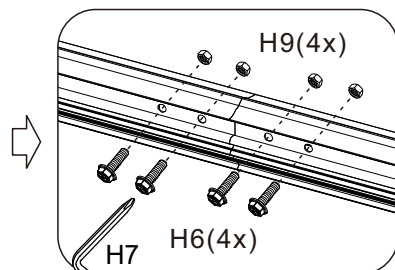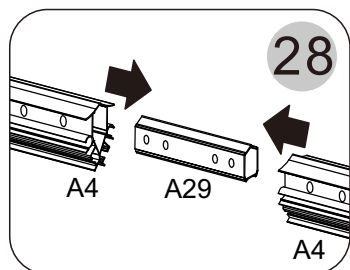


	A30	x2
	H6	x2
	H9	x4
	H11	x4
	H12	x4


	H17	x4
	B11	x2

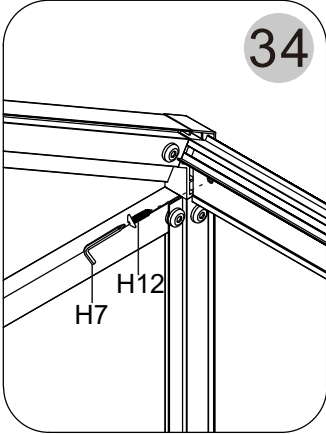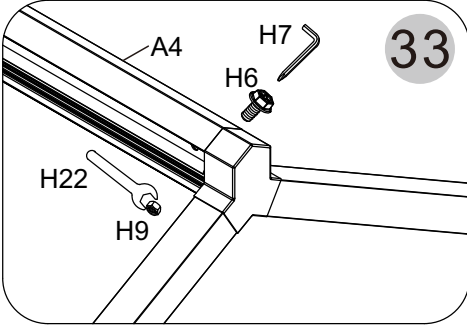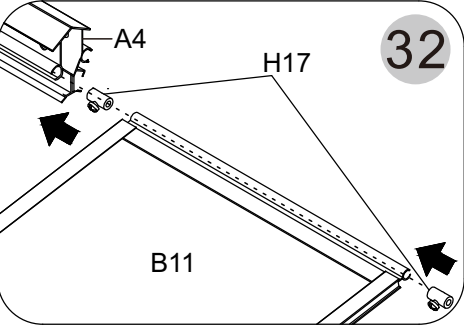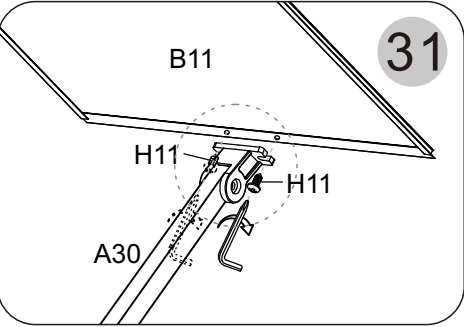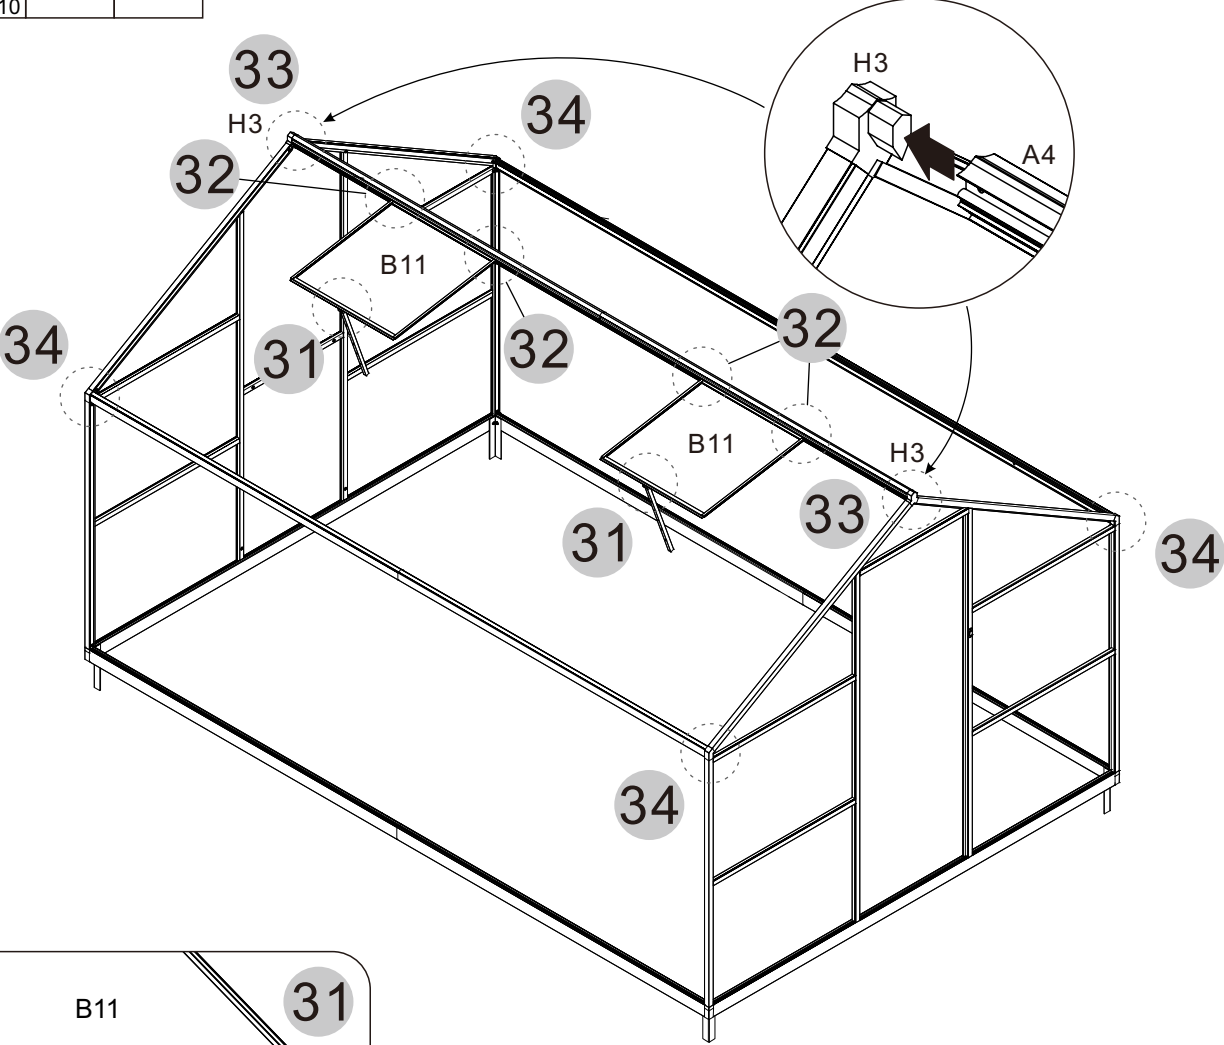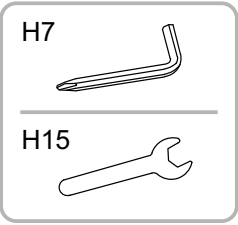




	A15	x8
	B3	x10







35-37

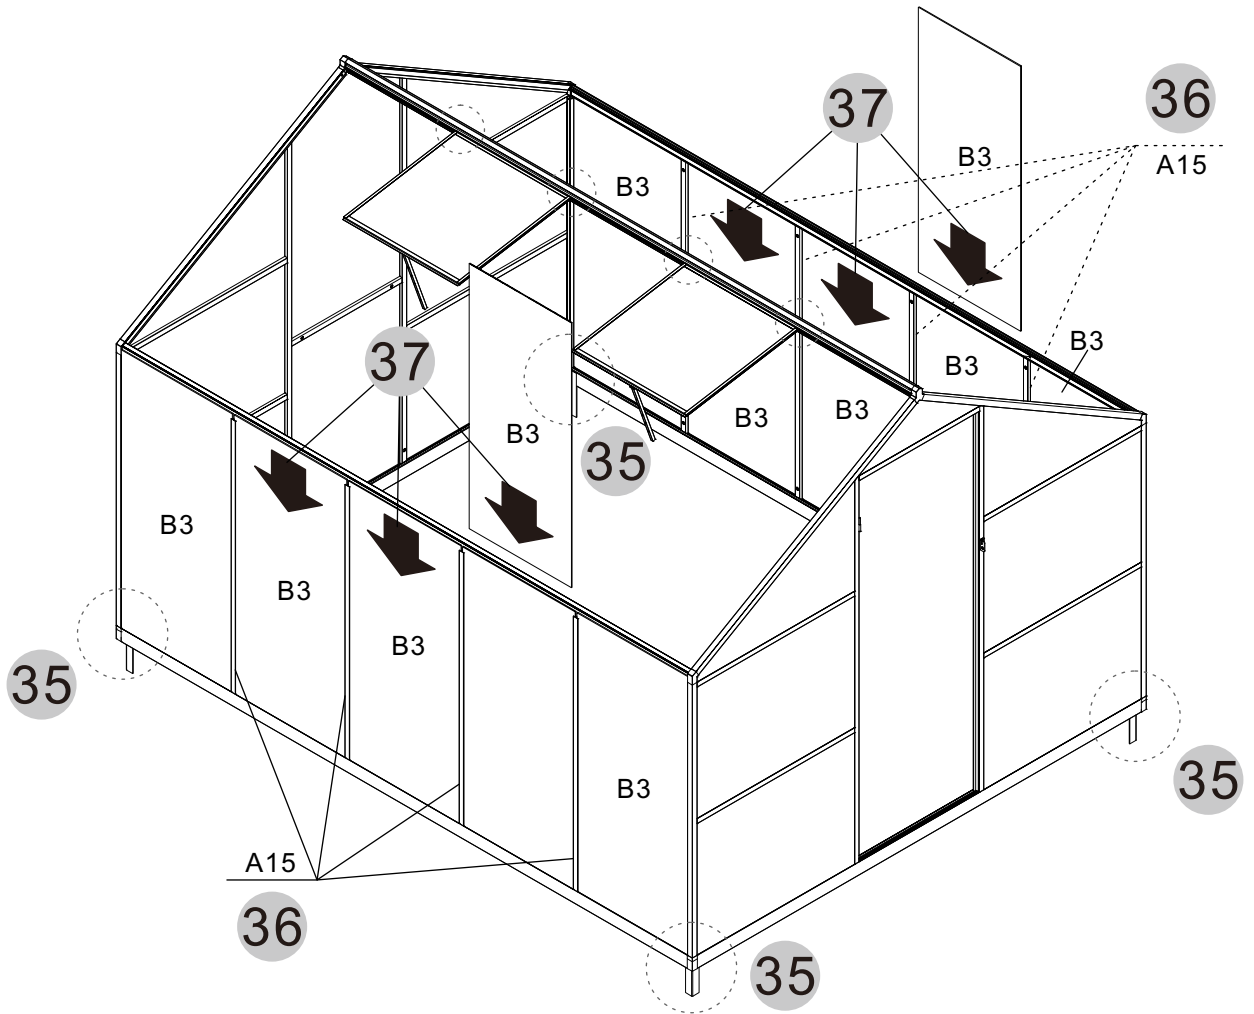


Please install both sides first and then the center.


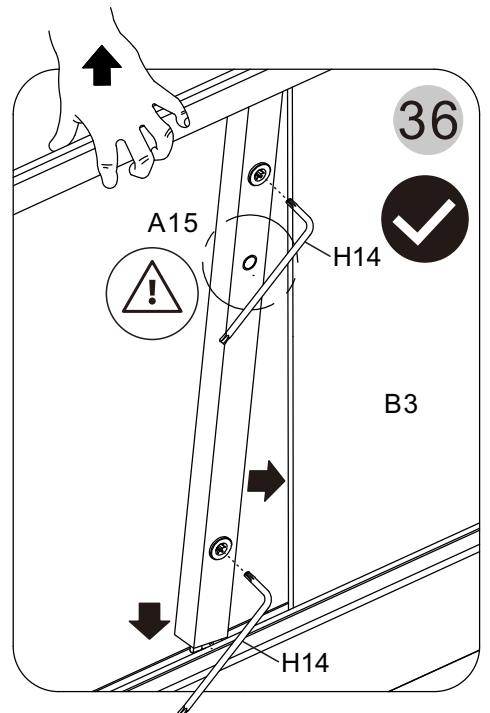
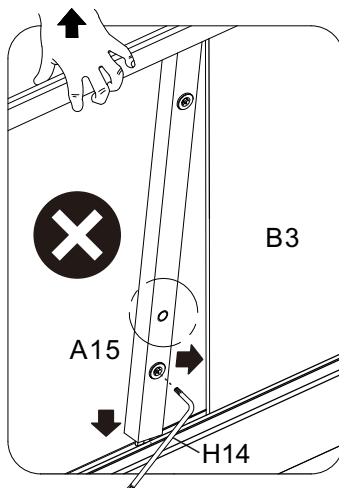
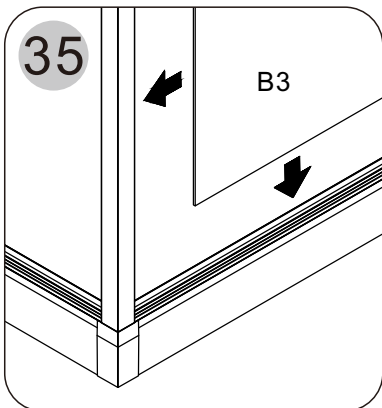



	A10-1	x2
	A10-2	x2
	A16	x4
	A17	x2
 M6x12	H8	x4
	B4	x8


	B5	x2
--	----	----

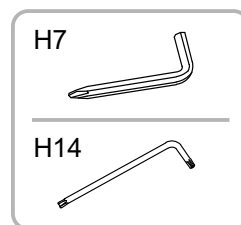








38-41

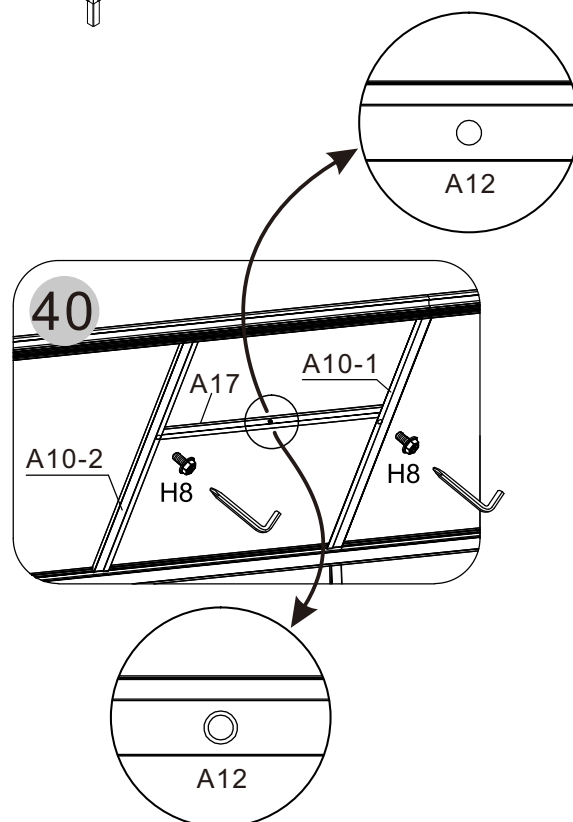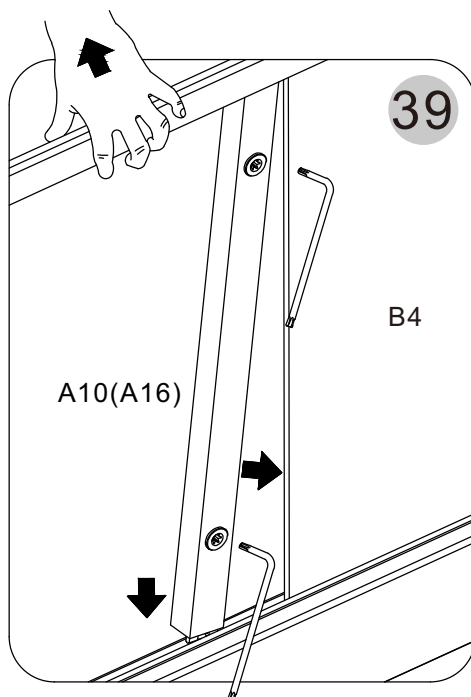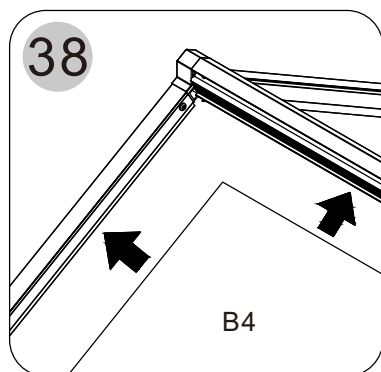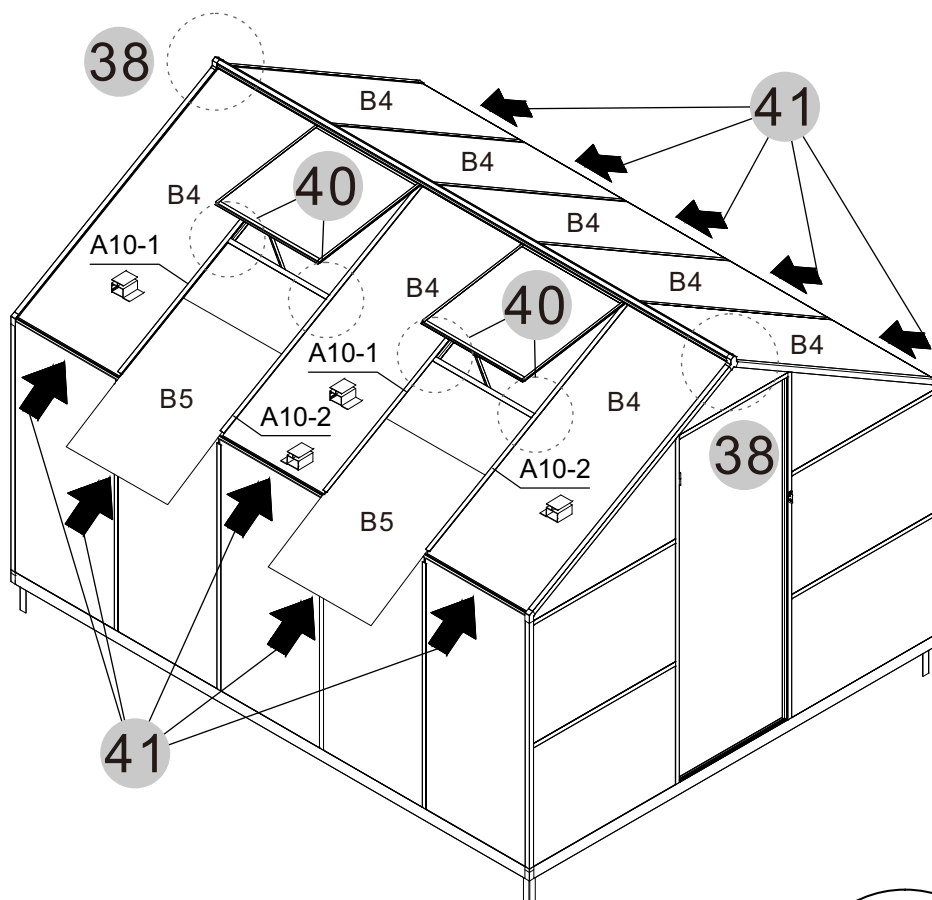


	A21	x4
	H5	x2
	H12	x4
	H13	x16
	H19	x2







42-45

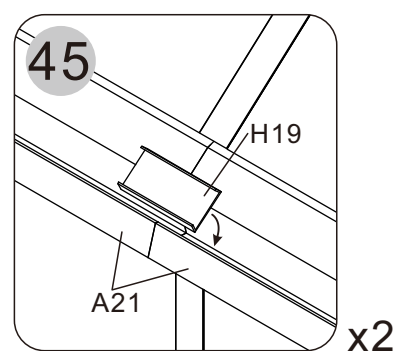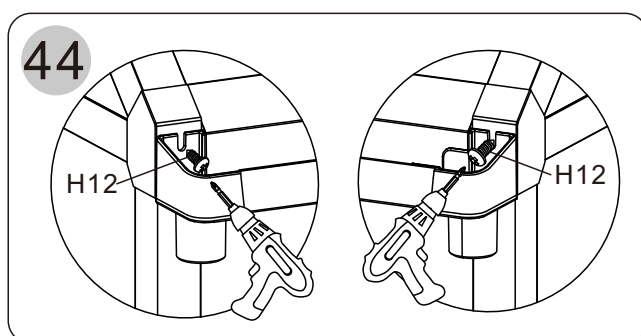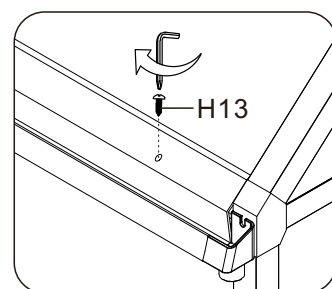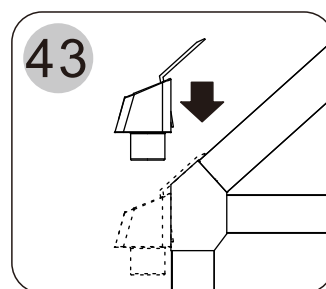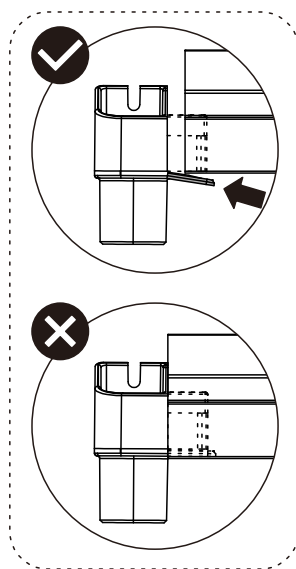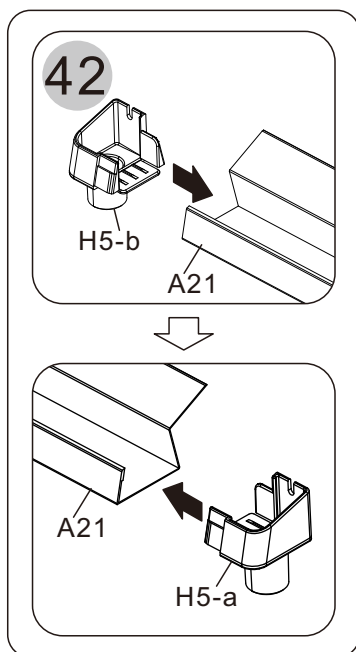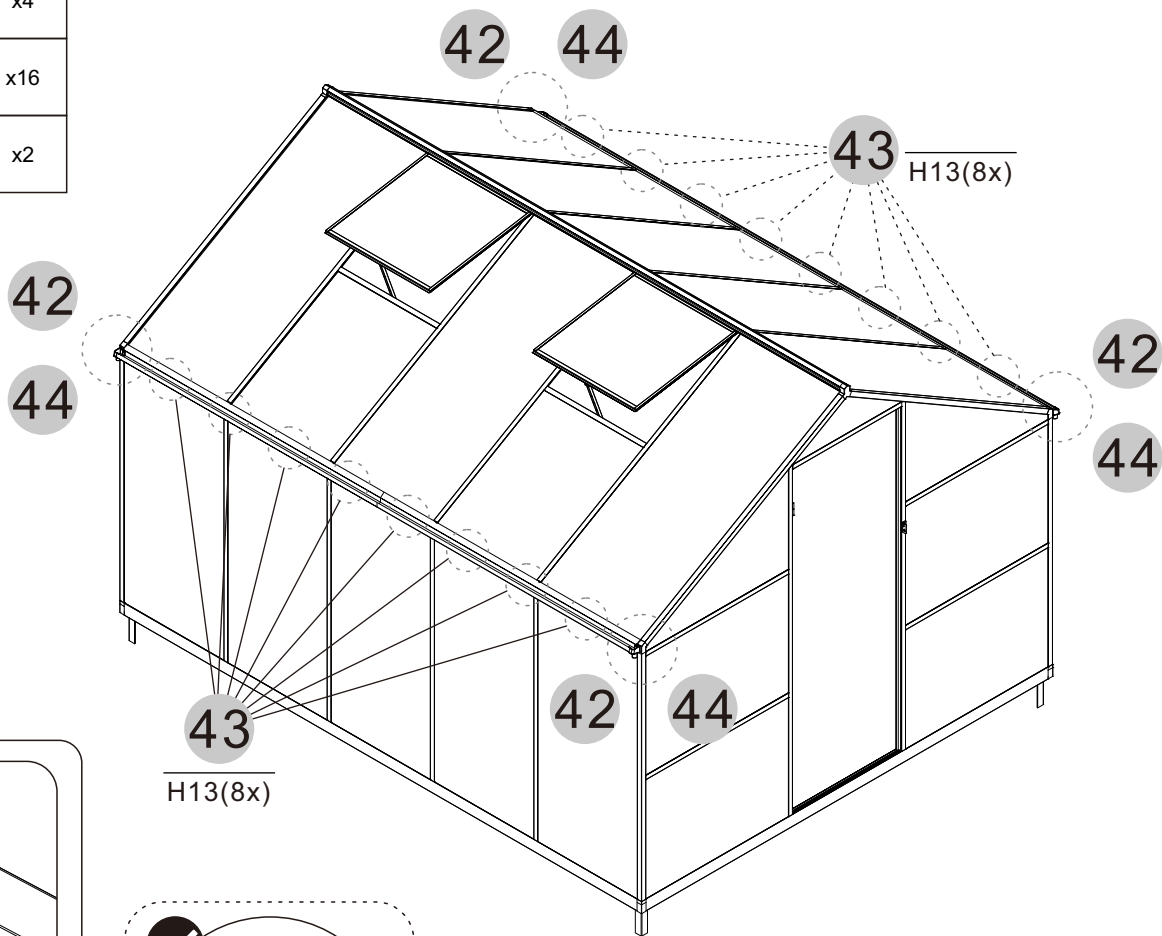



	H16	x2
	M4x40	x2






46-47

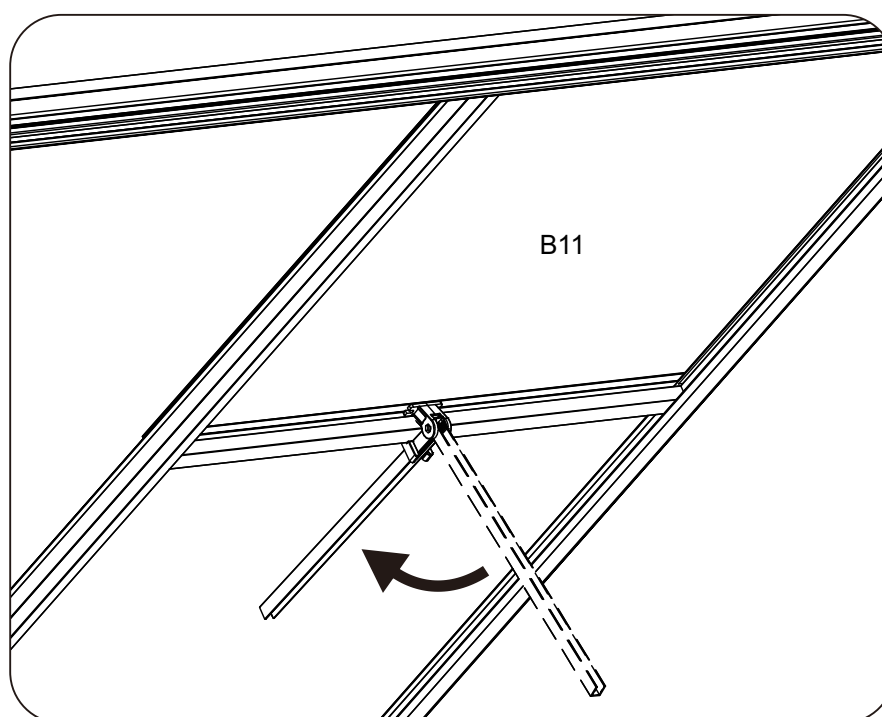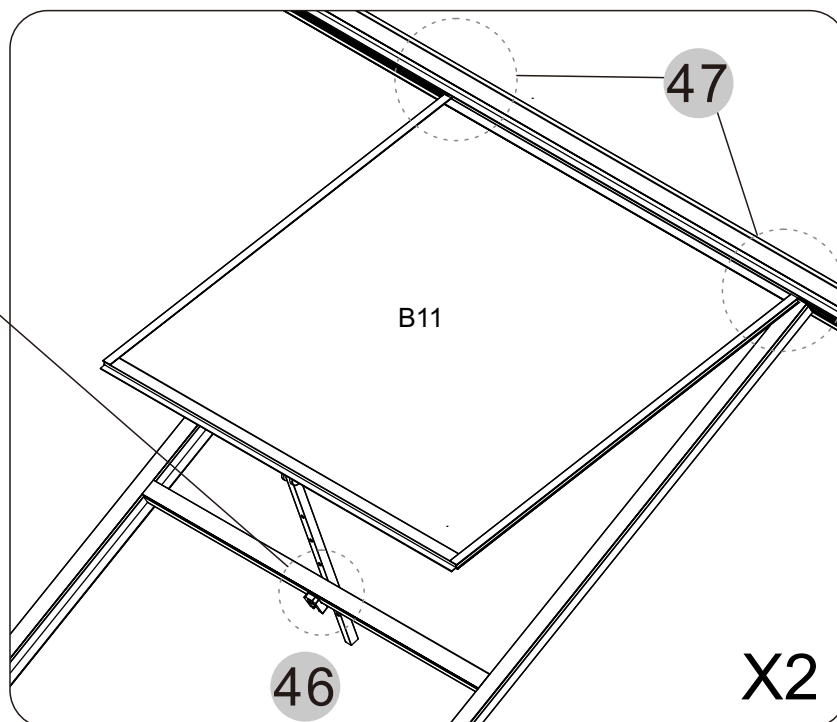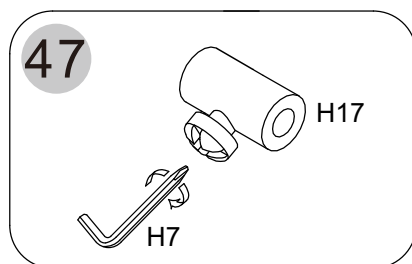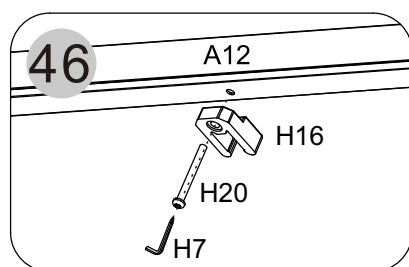



	A18-1	x1
	A18-2	x1
	A19	x1
	B6	x2








48-49

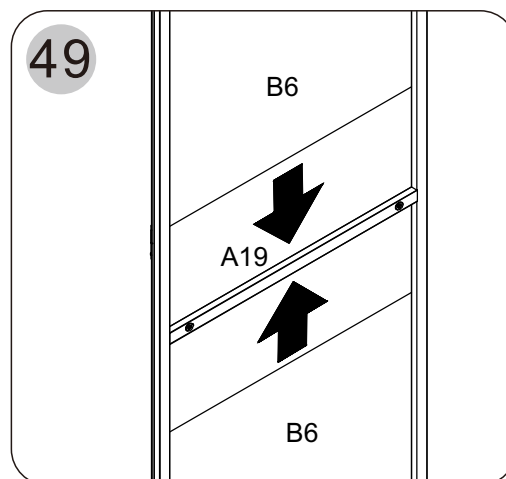
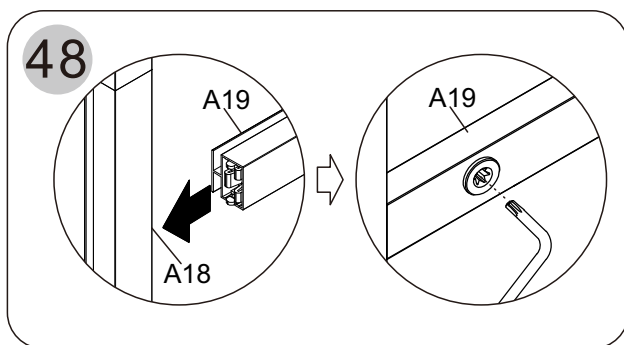
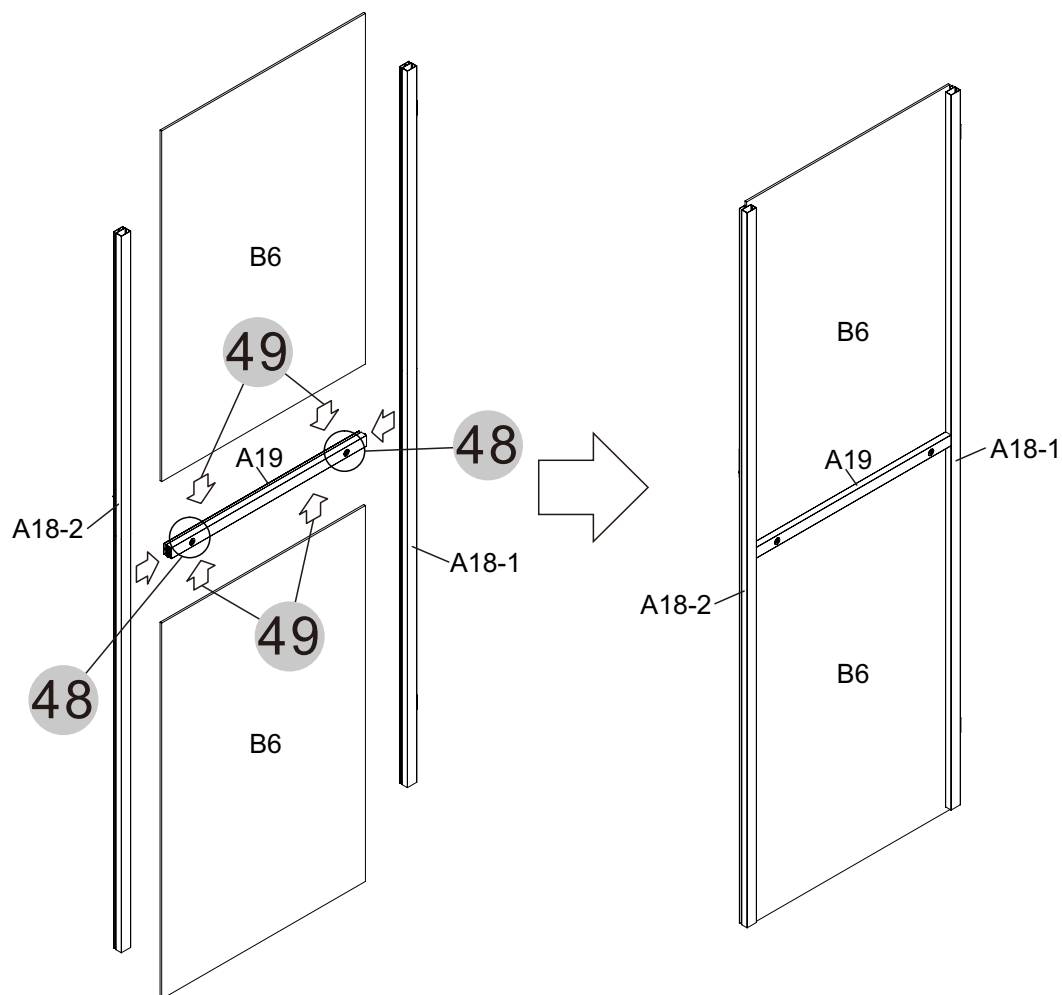


	A20	x2
	H4	x2
	H11	x8

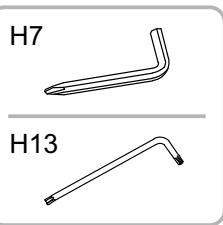

50-52

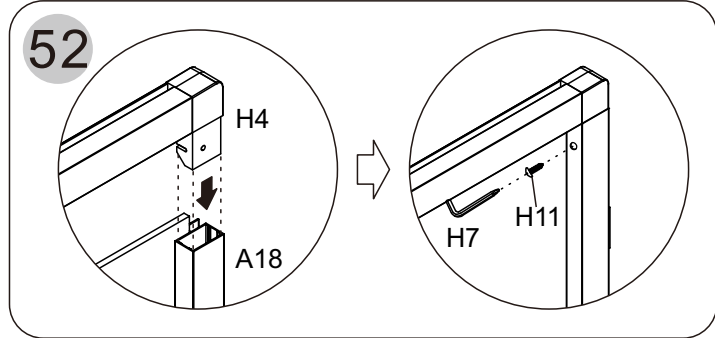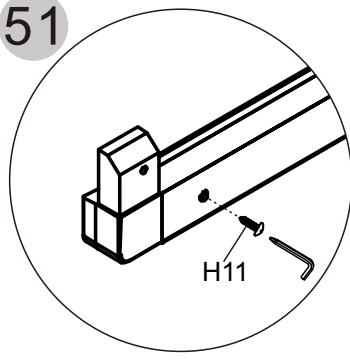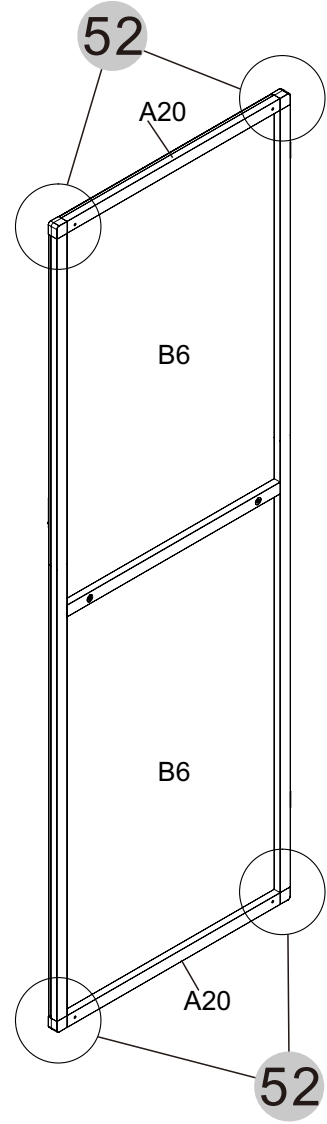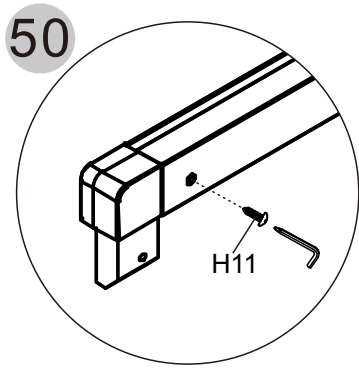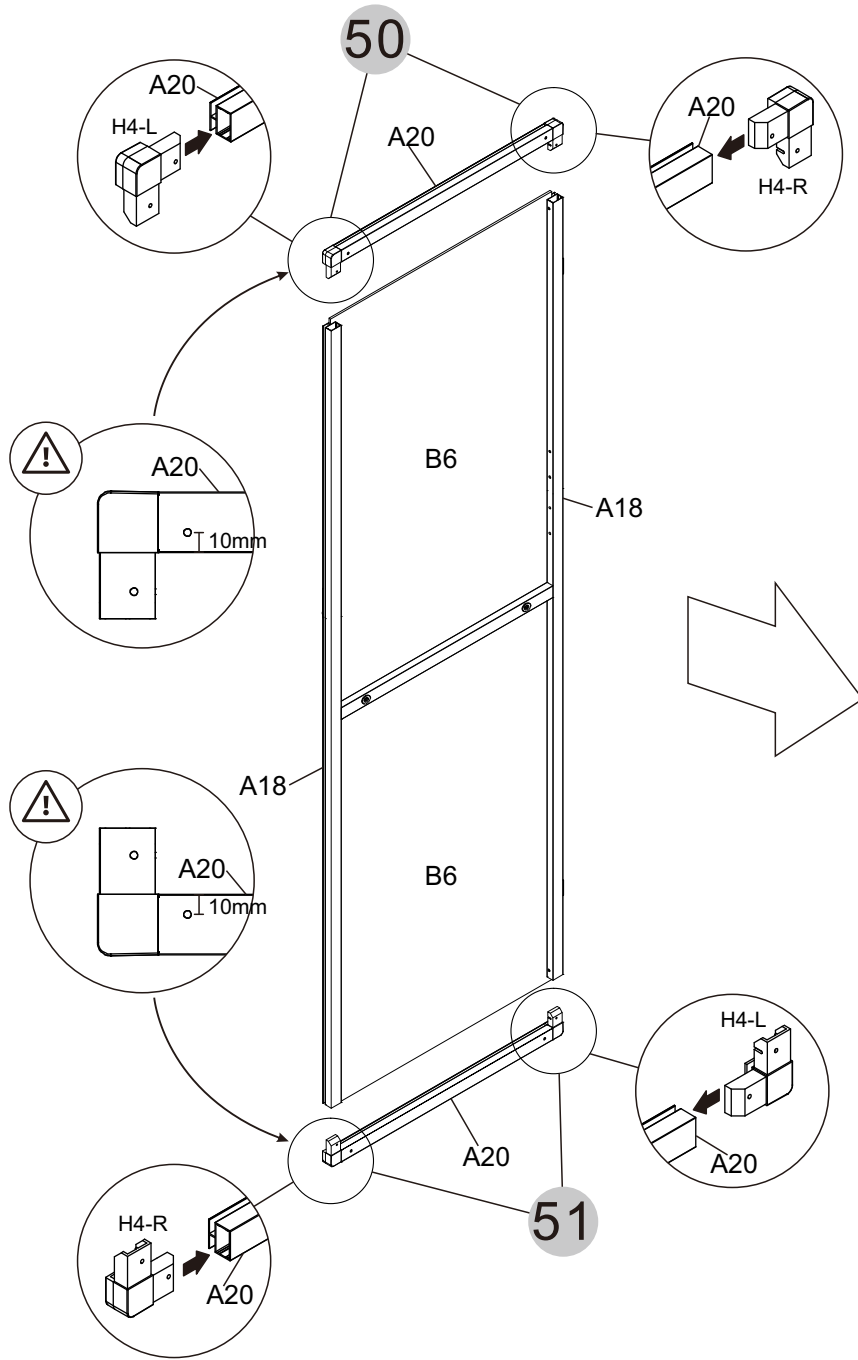

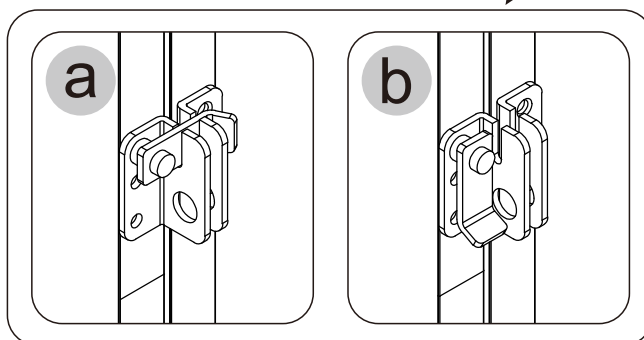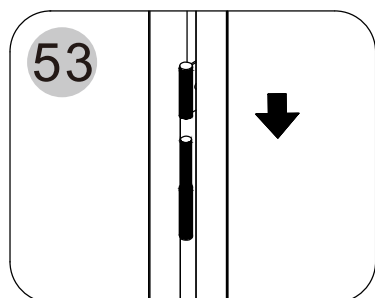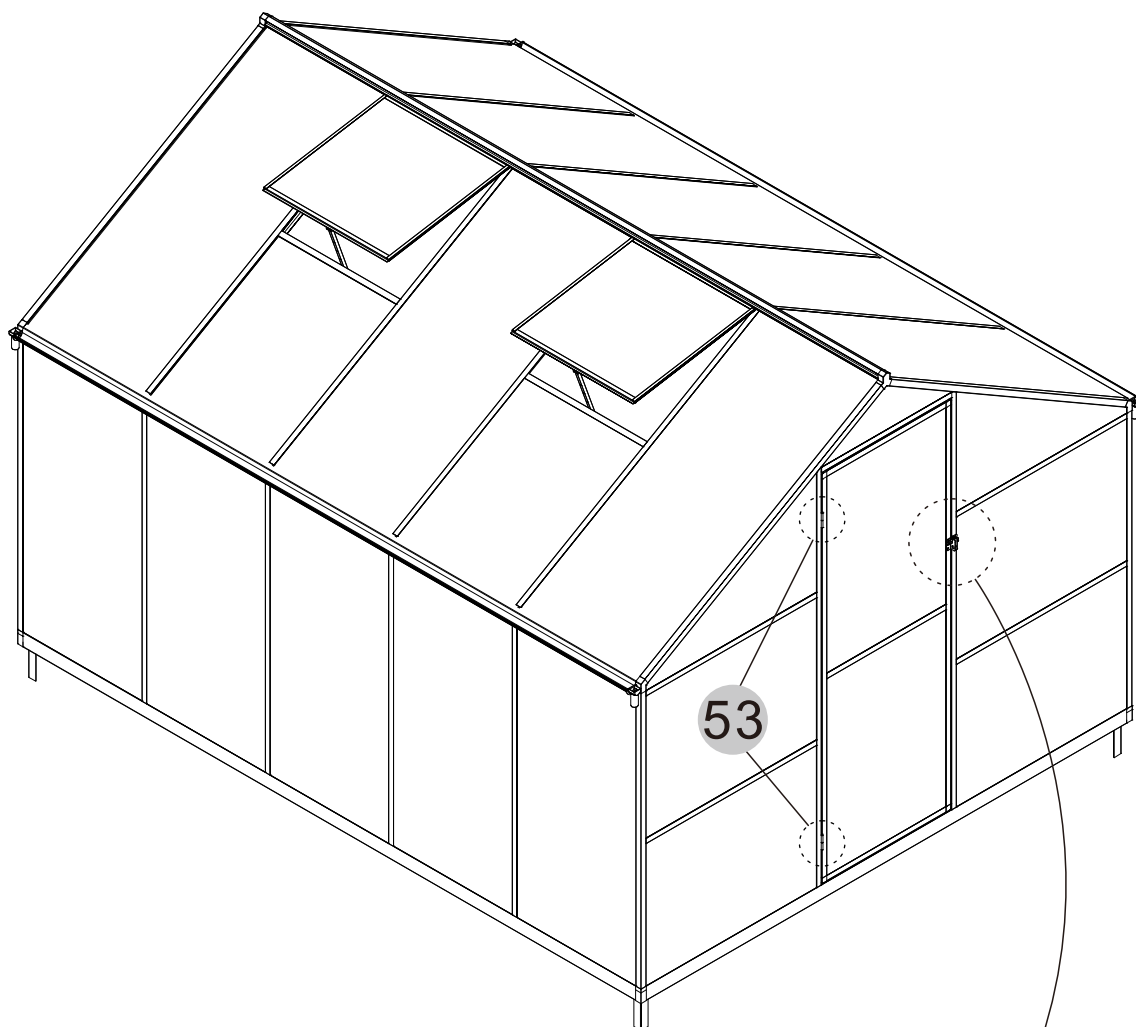




	A23	x8
	H18	x16

M6x20


H7









54

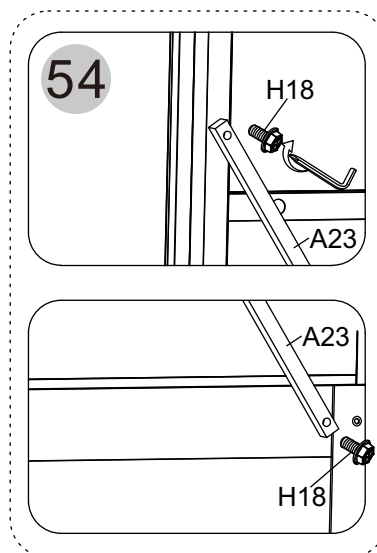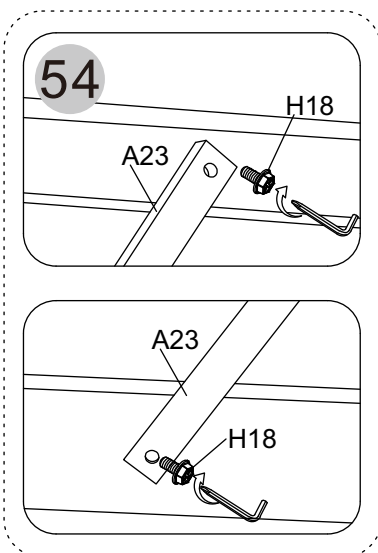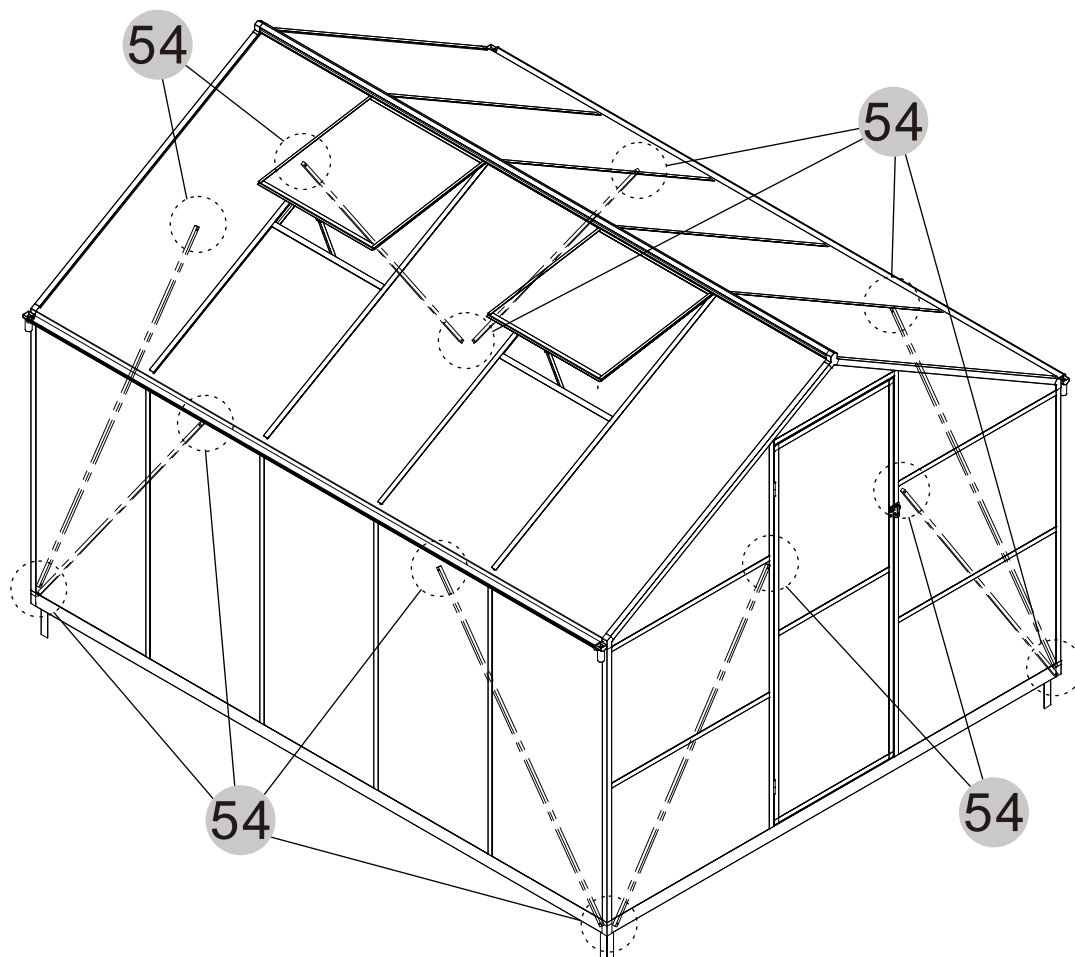

	A25	x4
	A26	x8
	M6x12	H8
	H21	x12



55-59

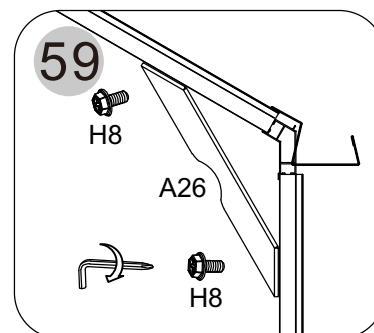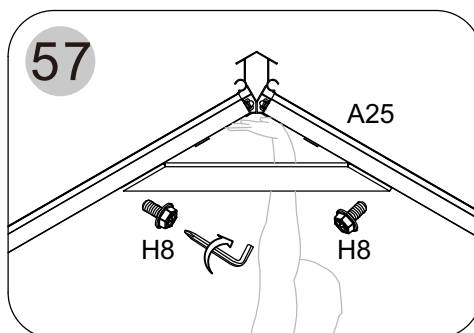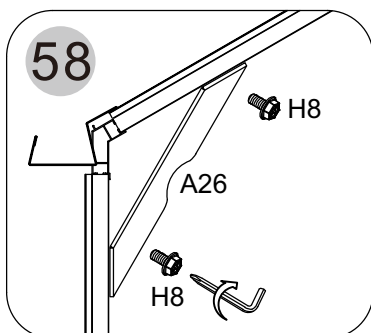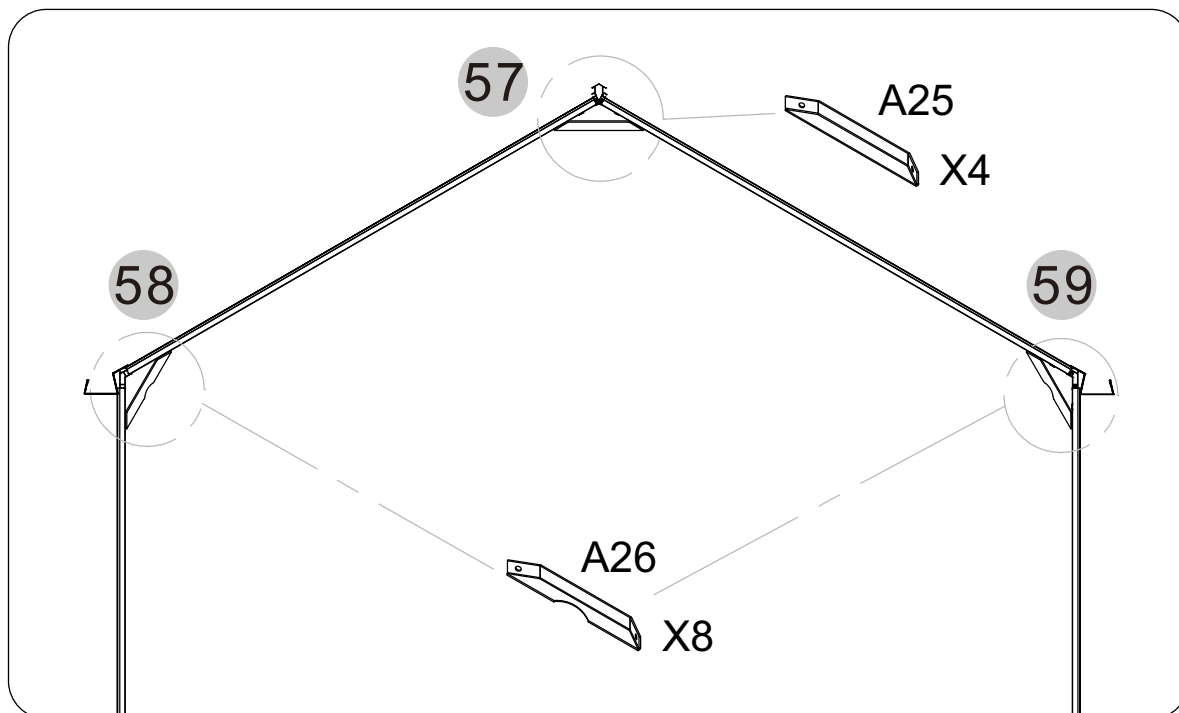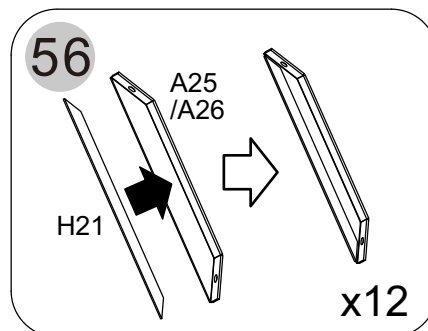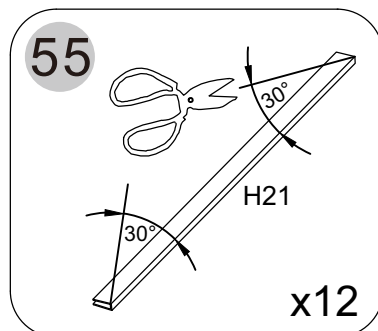

Check and tighten all screws to ensure that the greenhouse is sturdy.