


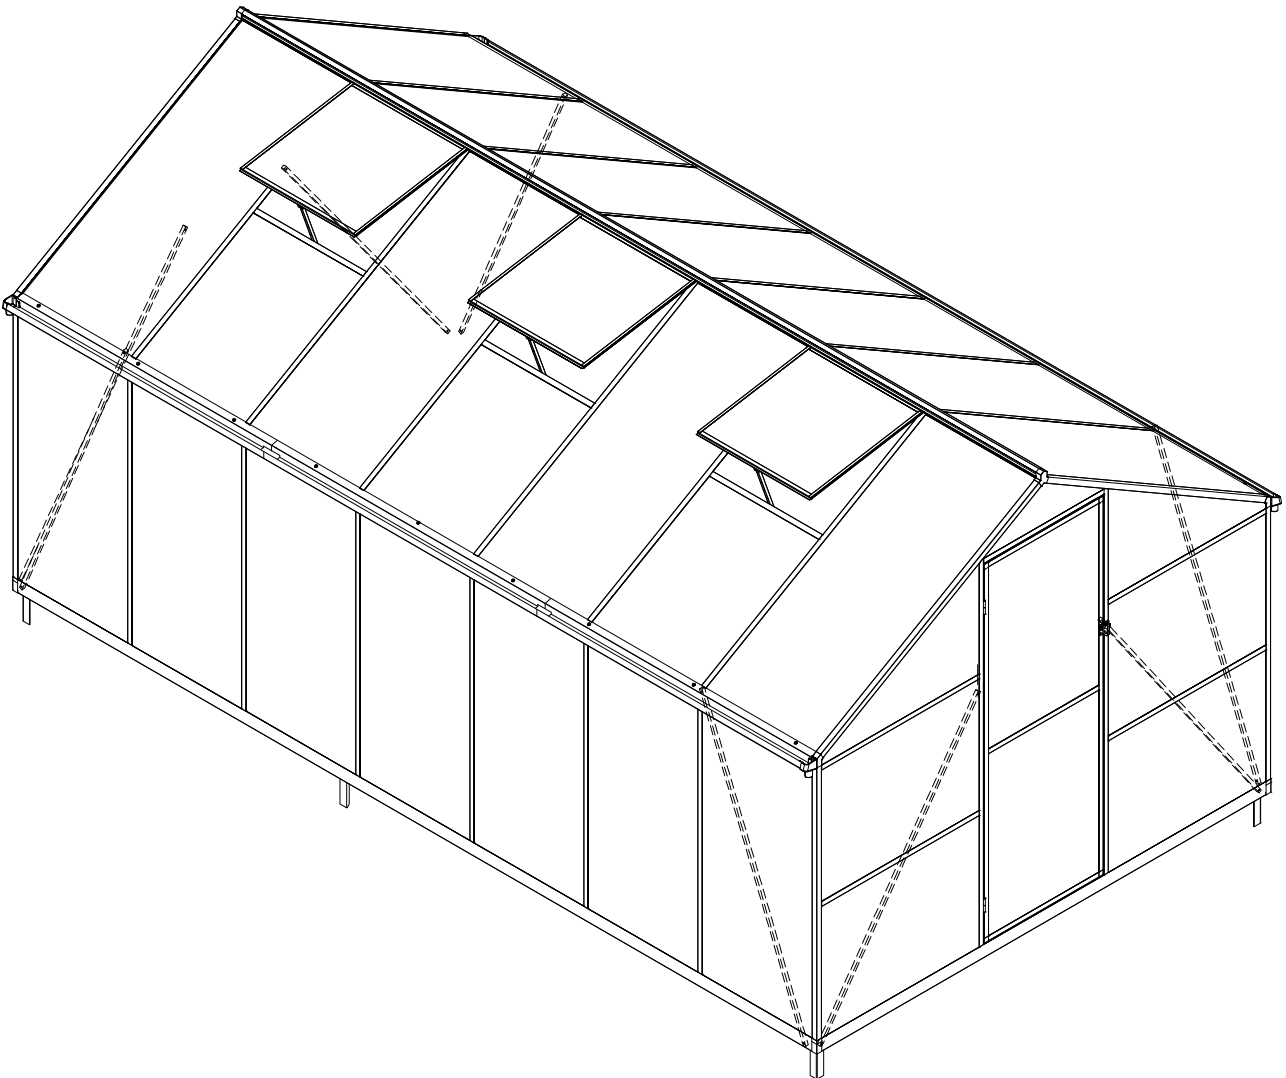
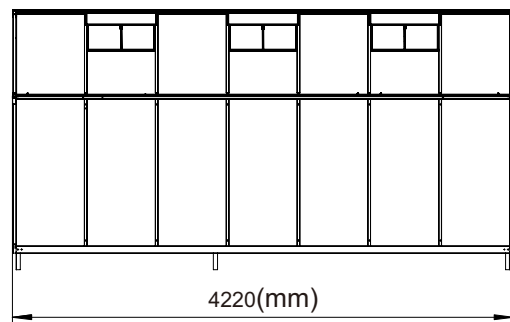


Nordgro Greenhouses











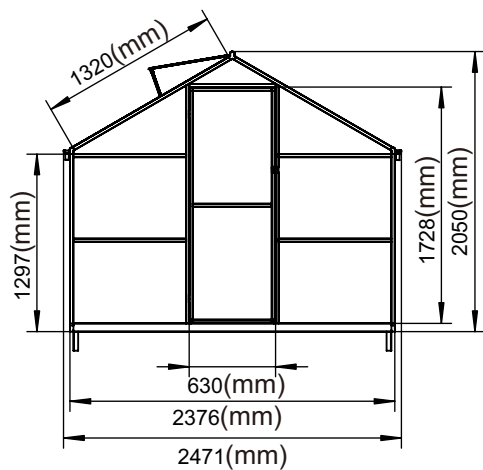











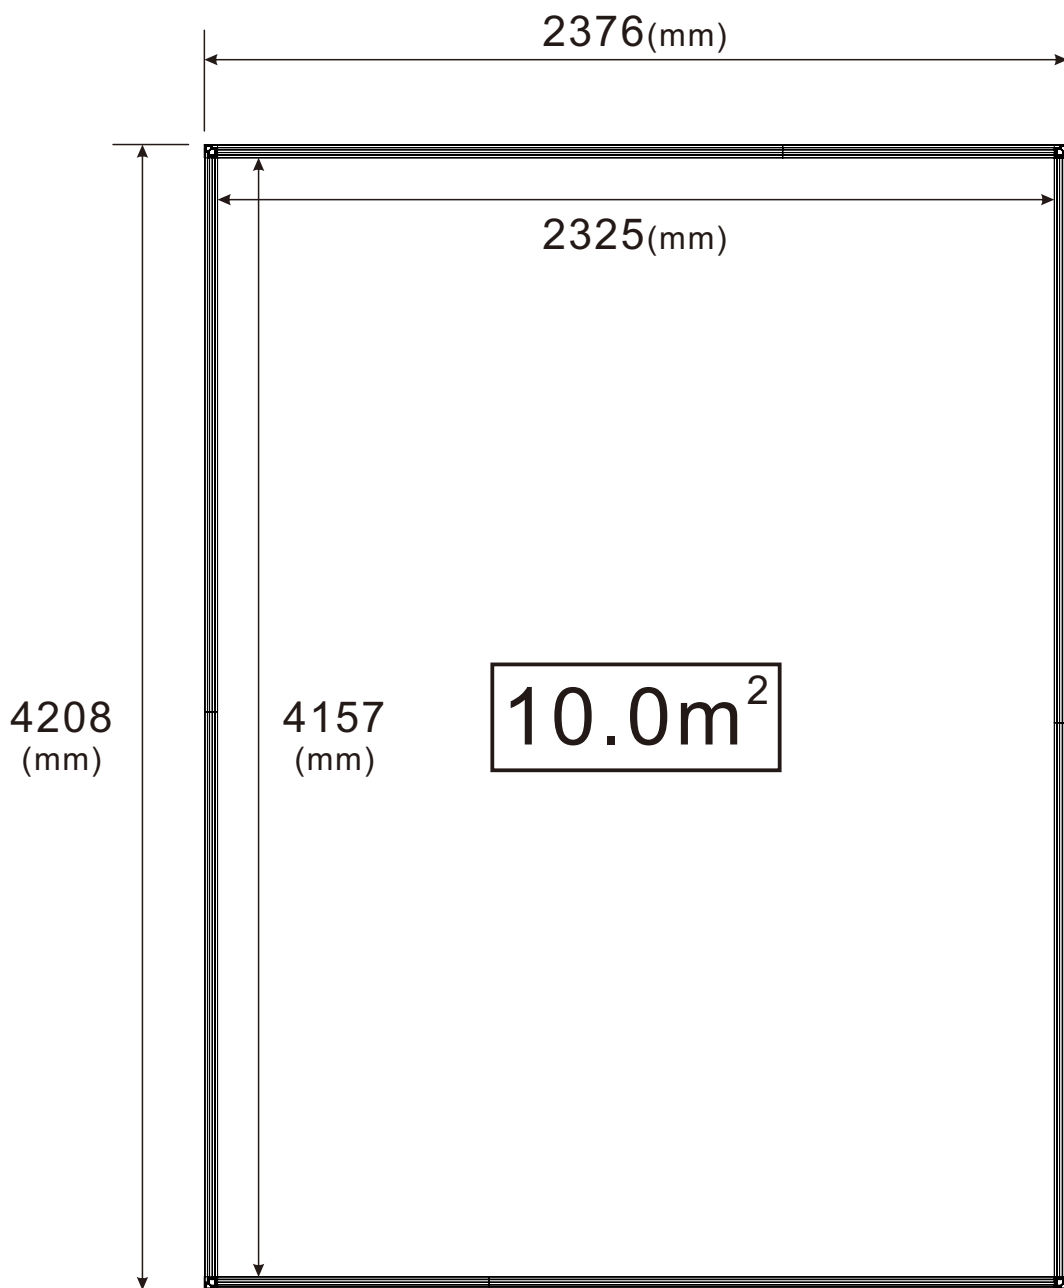


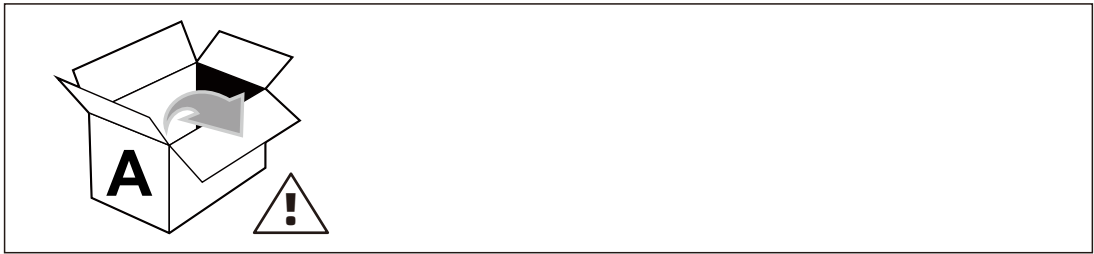

A1-1		x2
A1-2		x2
A2-1		x2
A2-2		x2
A2-3		x2
A3-1		x2
A3-2		x2
A3-3		x2
A4-1		x2
A4-2		x1

A5-1		x2
A5-2		x2
A6-1		x1
A6-2		x1
A7-1		x1
A7-2		x1
A8-1		x1
A8-2		x1
A9		x1
A10-1		x3

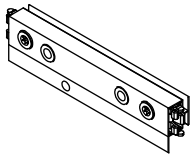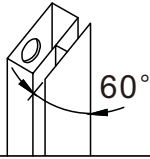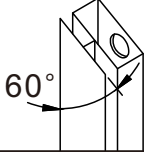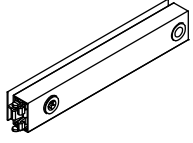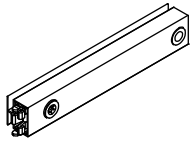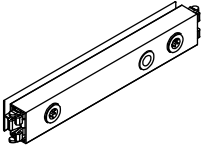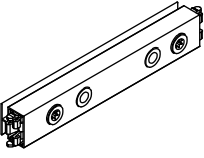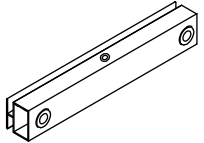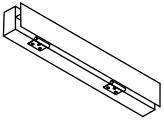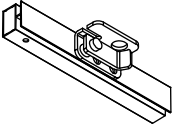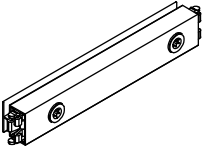A10-2		x3
A11-1		x1
A11-2		x1
A12		x4
A13		x4
A15		x12
A16		x6
A17		x3
A18-1		x1
A18-2		x1
A19		x2

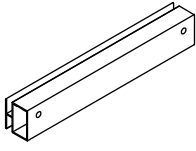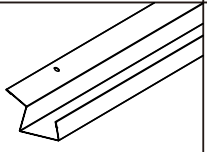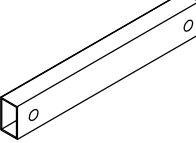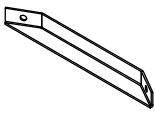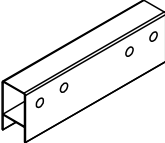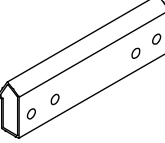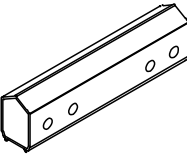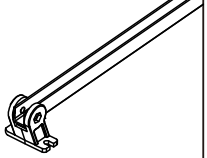
A20		x2
A21		x6
A22		x2
A23		x8
A24		x4
A25		x6
A26		x12
A27		x6
A28		x4
A29		x2
A30		x3

H1		x4
H2		x2
H3		x2


H4		x2
H5		x2

H6		x34	M6x30
H7		x1	
H8		x84	M6x12
H9		x50	M6
H11		x14	ST4x8
H12		x8	ST5x10
H13		x24	ST5x16

H14		x1	
H15		x1	
H16		x3	
H17		x6	
H18		x32	M6x20
H19		x4	
H20		x3	M4x40
H21		x18	

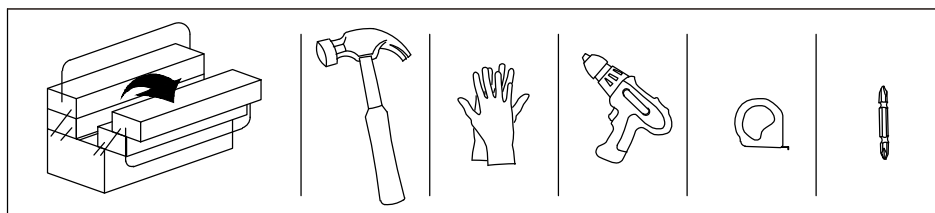


Not included in package.


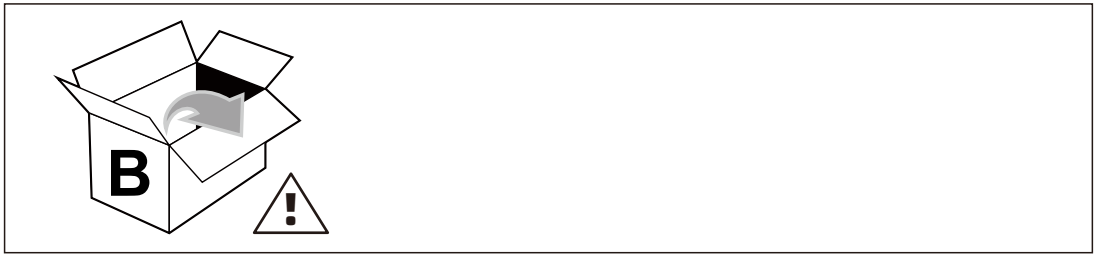


B1		4
B2		4
B3		14
B4		11
B5		3
B6		3
B7-1		1
B7-2		1

B8		1
B9-1		1
B9-2		1
B10		1
B11		3

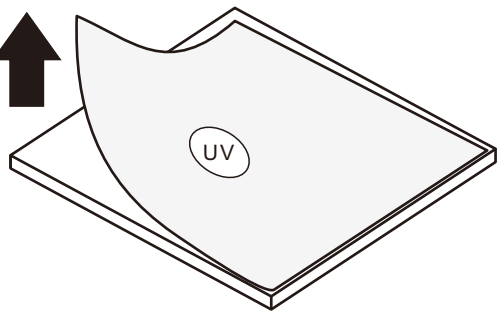


UV-Label side to be installed outside;
Film on both sides to be peeled off
before installation.

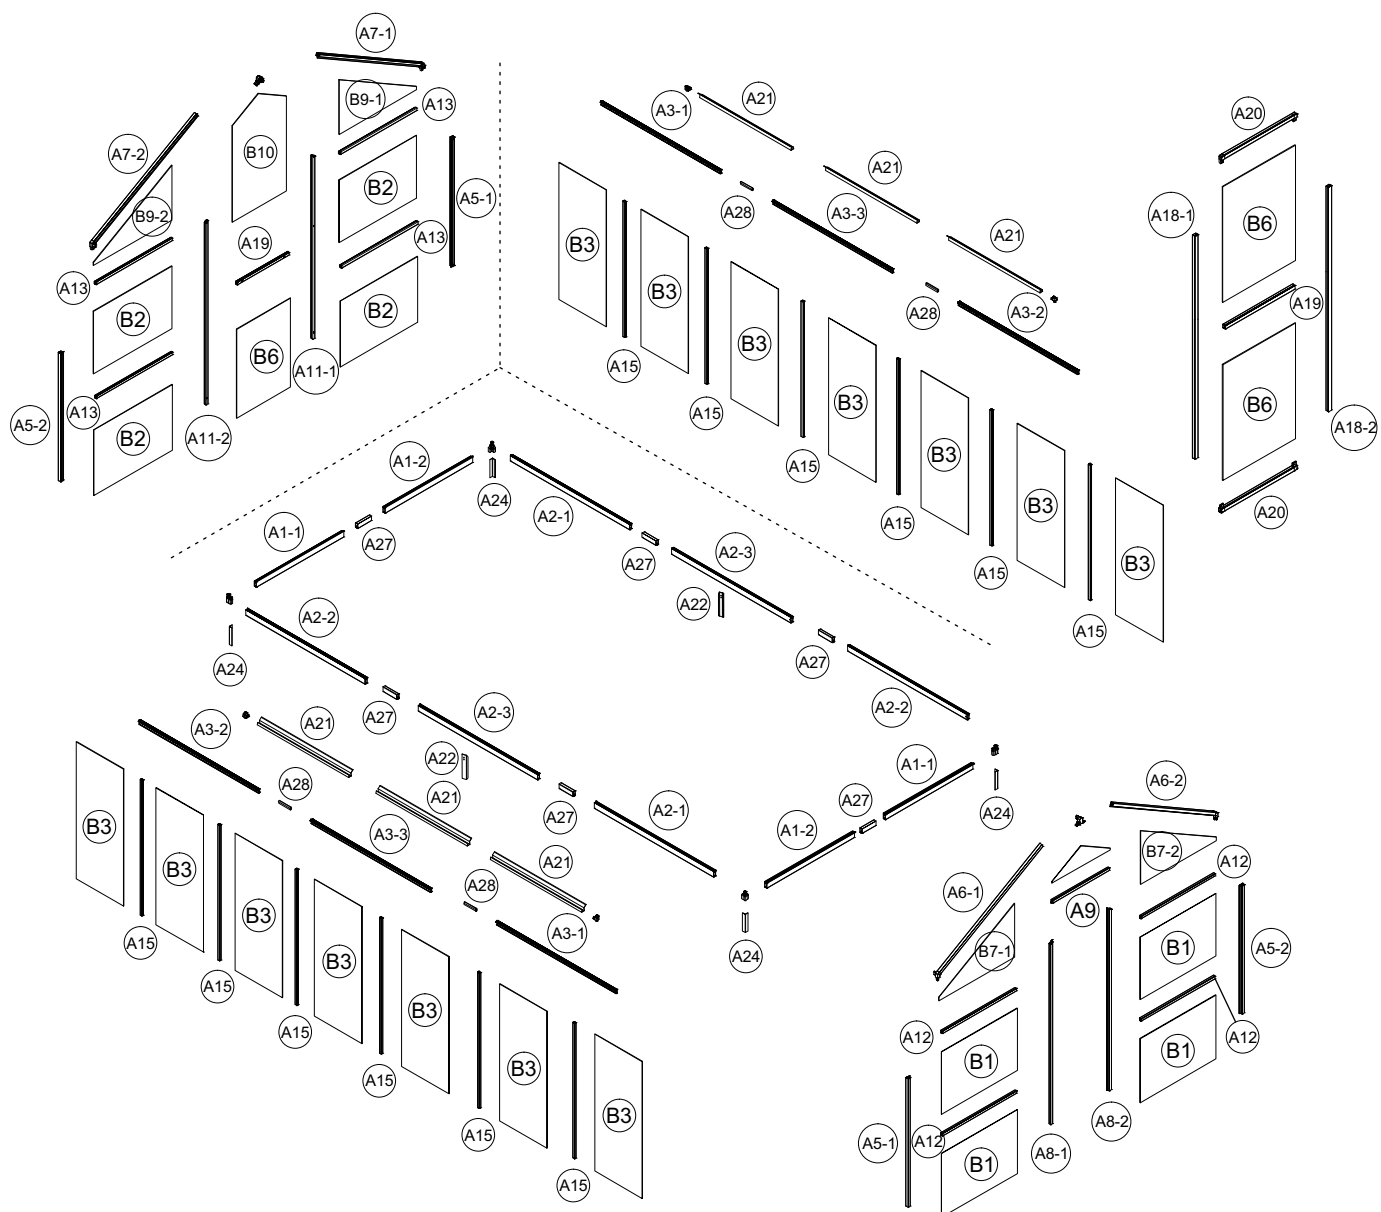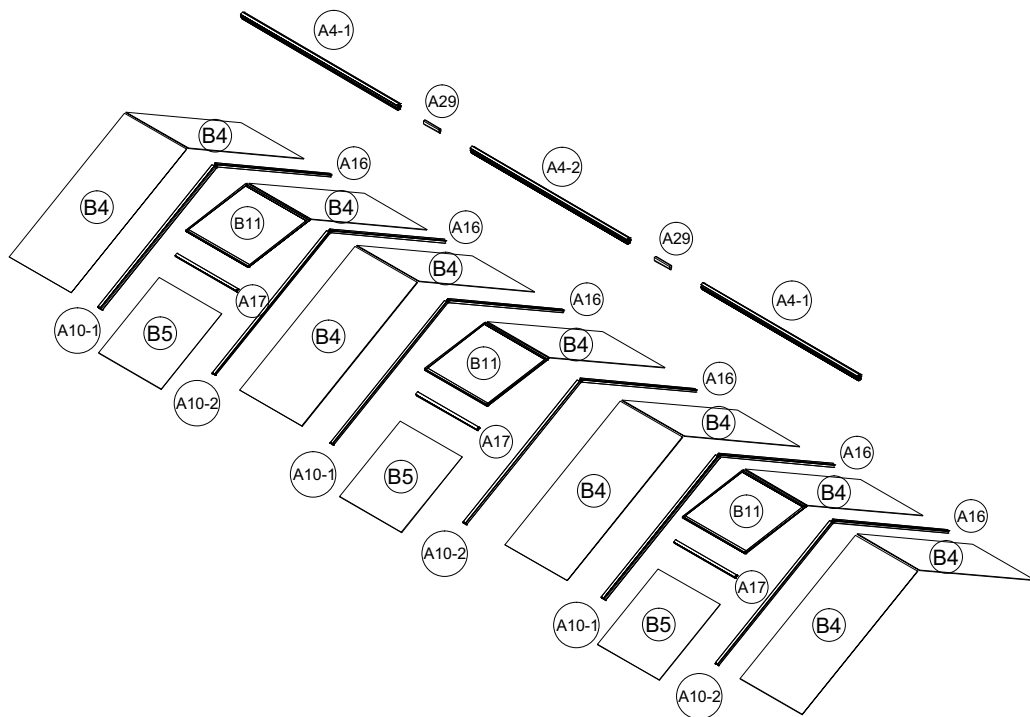



1

	A1-1	x2
	A1-2	x2
	A2-1	x2
	A2-2	x2
	A2-3	x2
	A27	x6


	M6x30	H6	x24
	M6	H9	x24

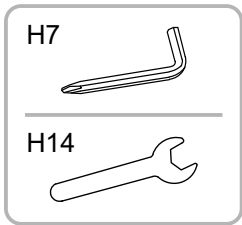




Please merge the fittings until there is no gap before tightening the screws.

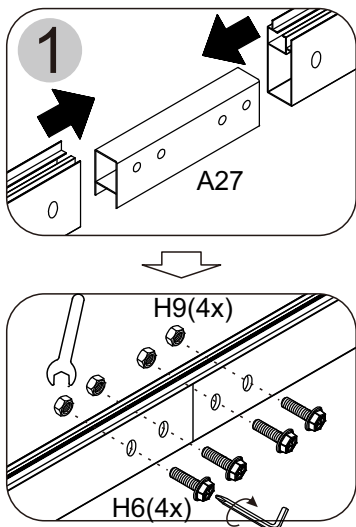
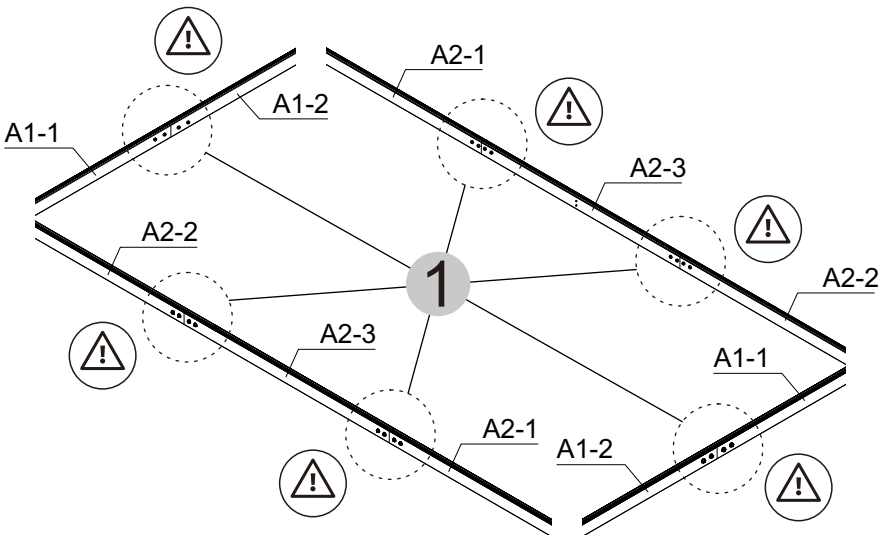


	H1	x4
 M6x12	H8	x12
	A22	x2
	A24	x4



2-3

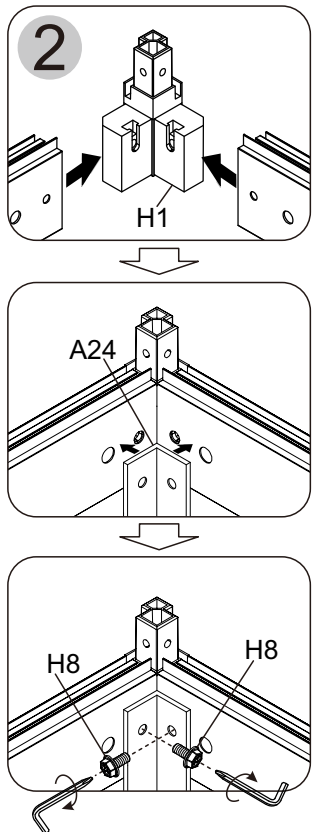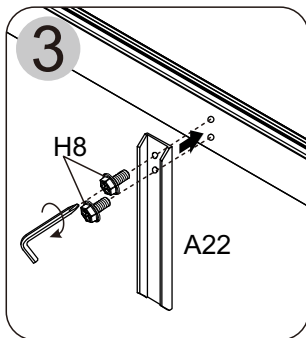
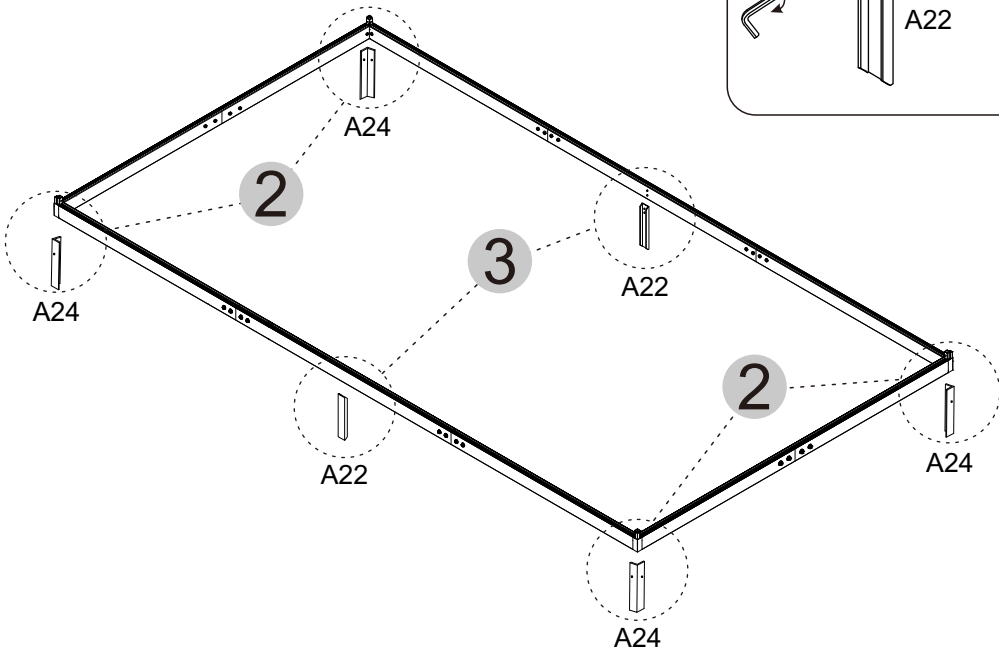


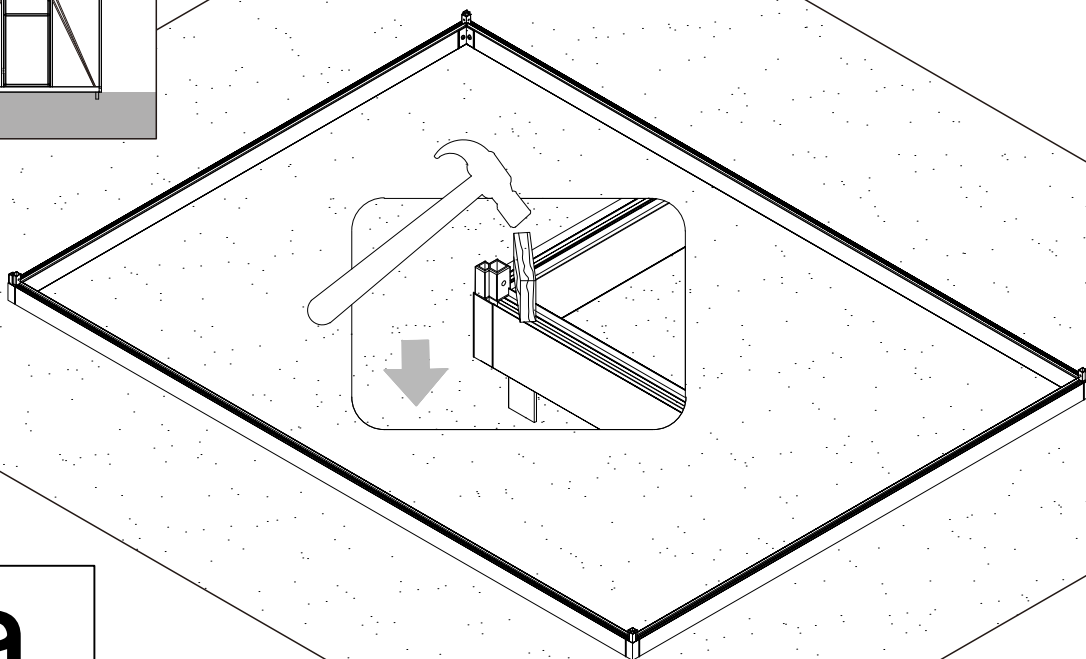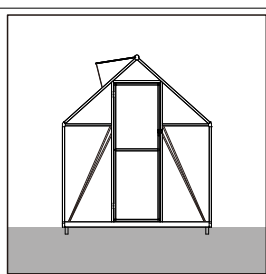

a


4

b

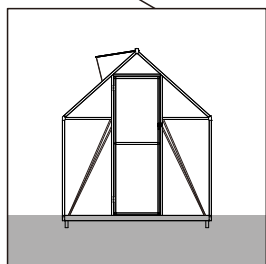
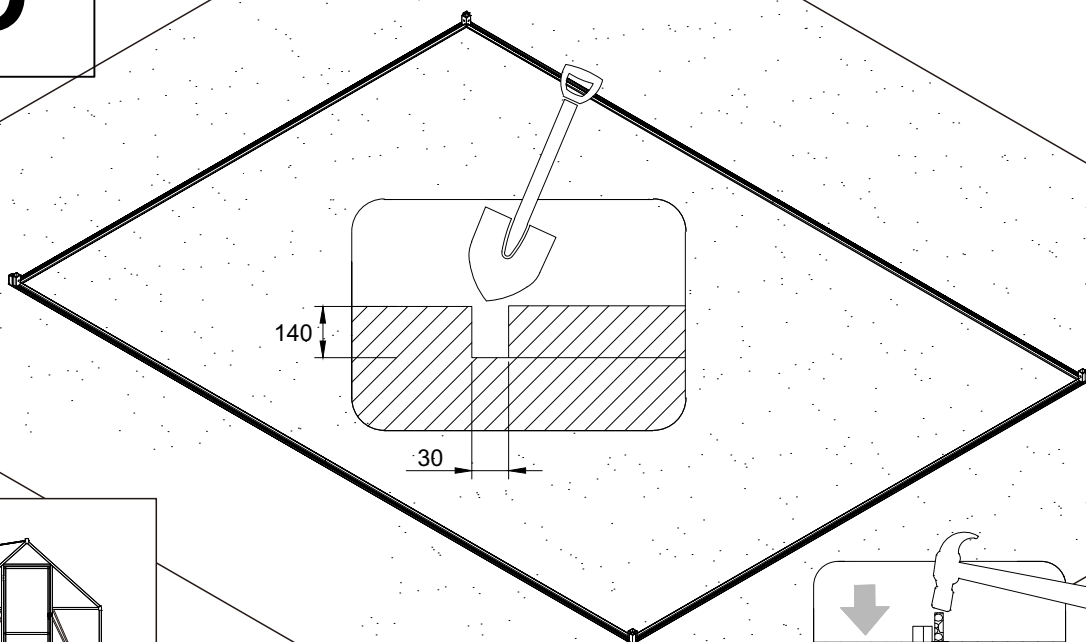


	A5-1	x2
	A5-2	x2
	H8	x4

M6x12

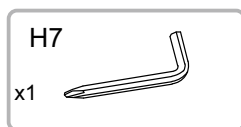


5

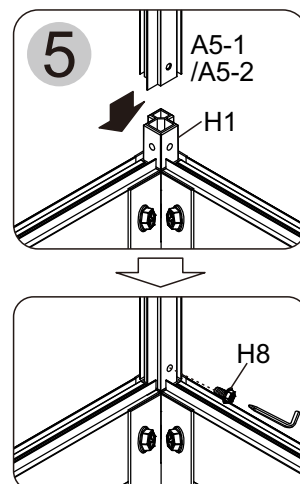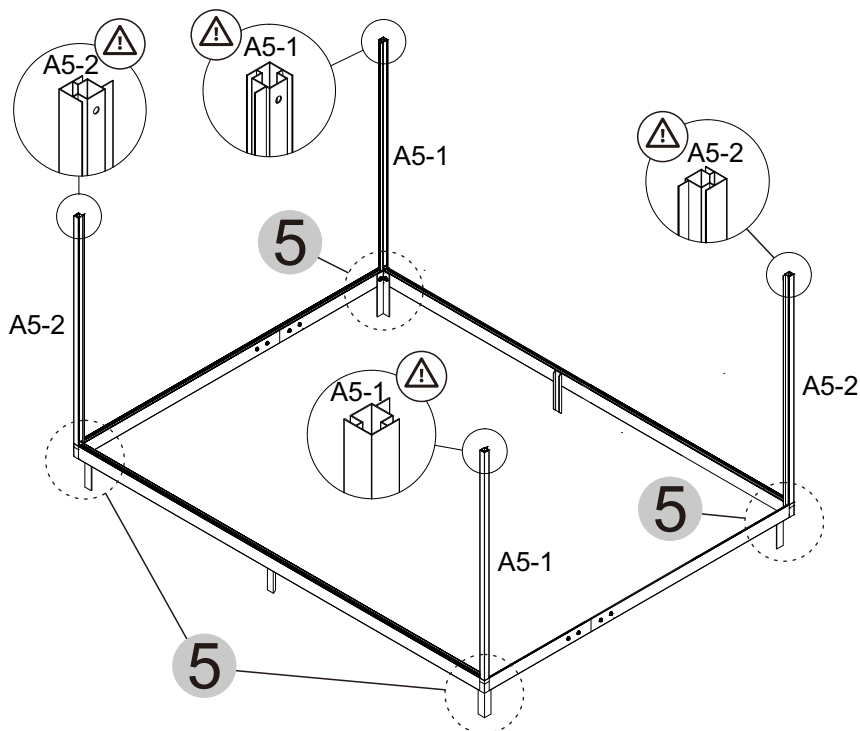


Please note the A4 orientation.




	A8-1	x1
	A8-2	x1


60°






	B1	x2
---	----	----












6-7

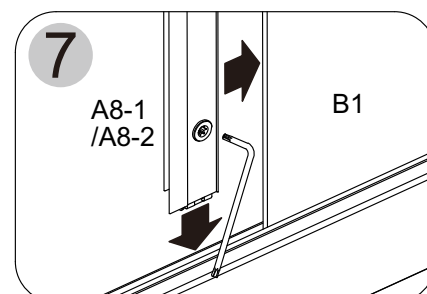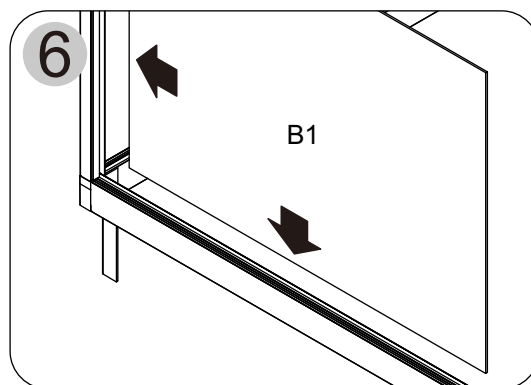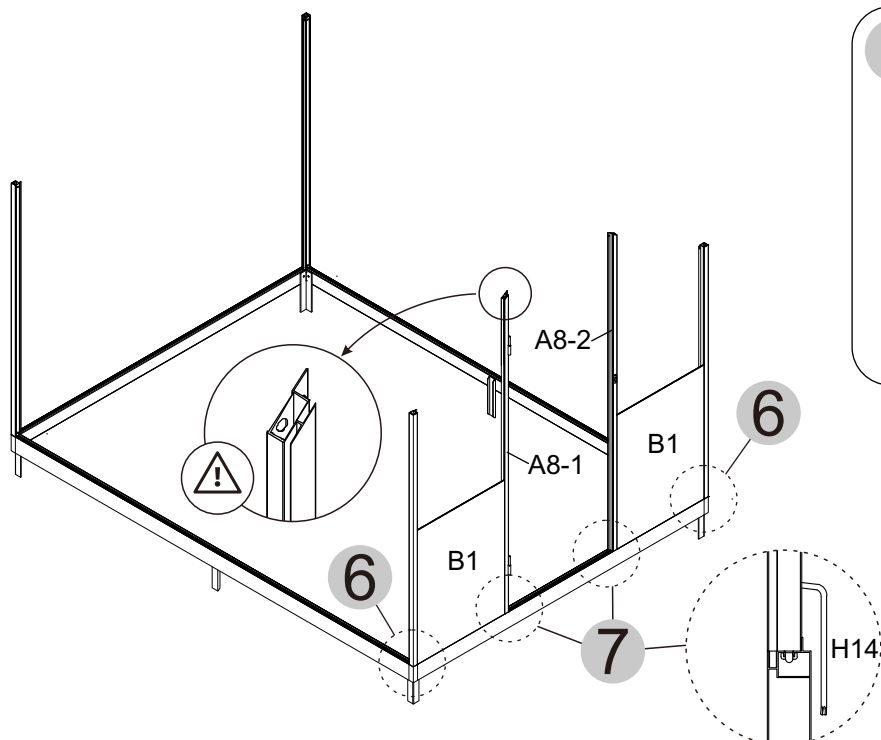

	A12	x2
 M6x12	H8	x2
	B1	x2

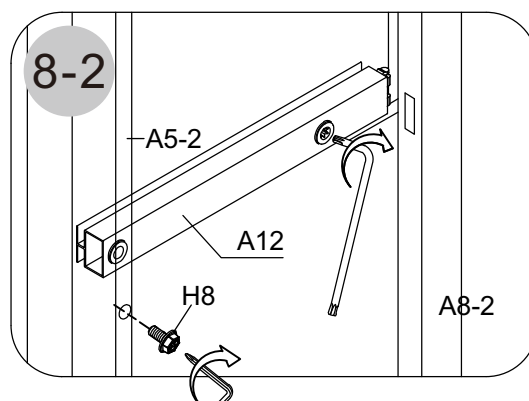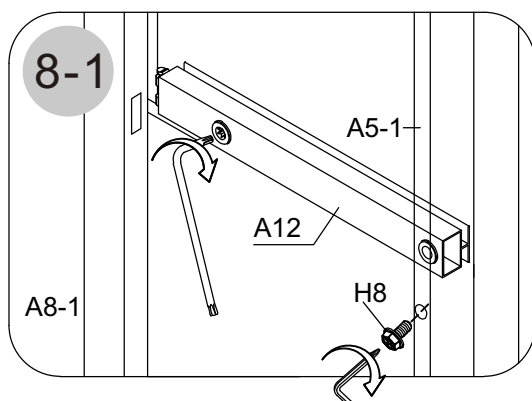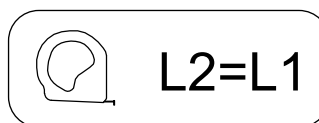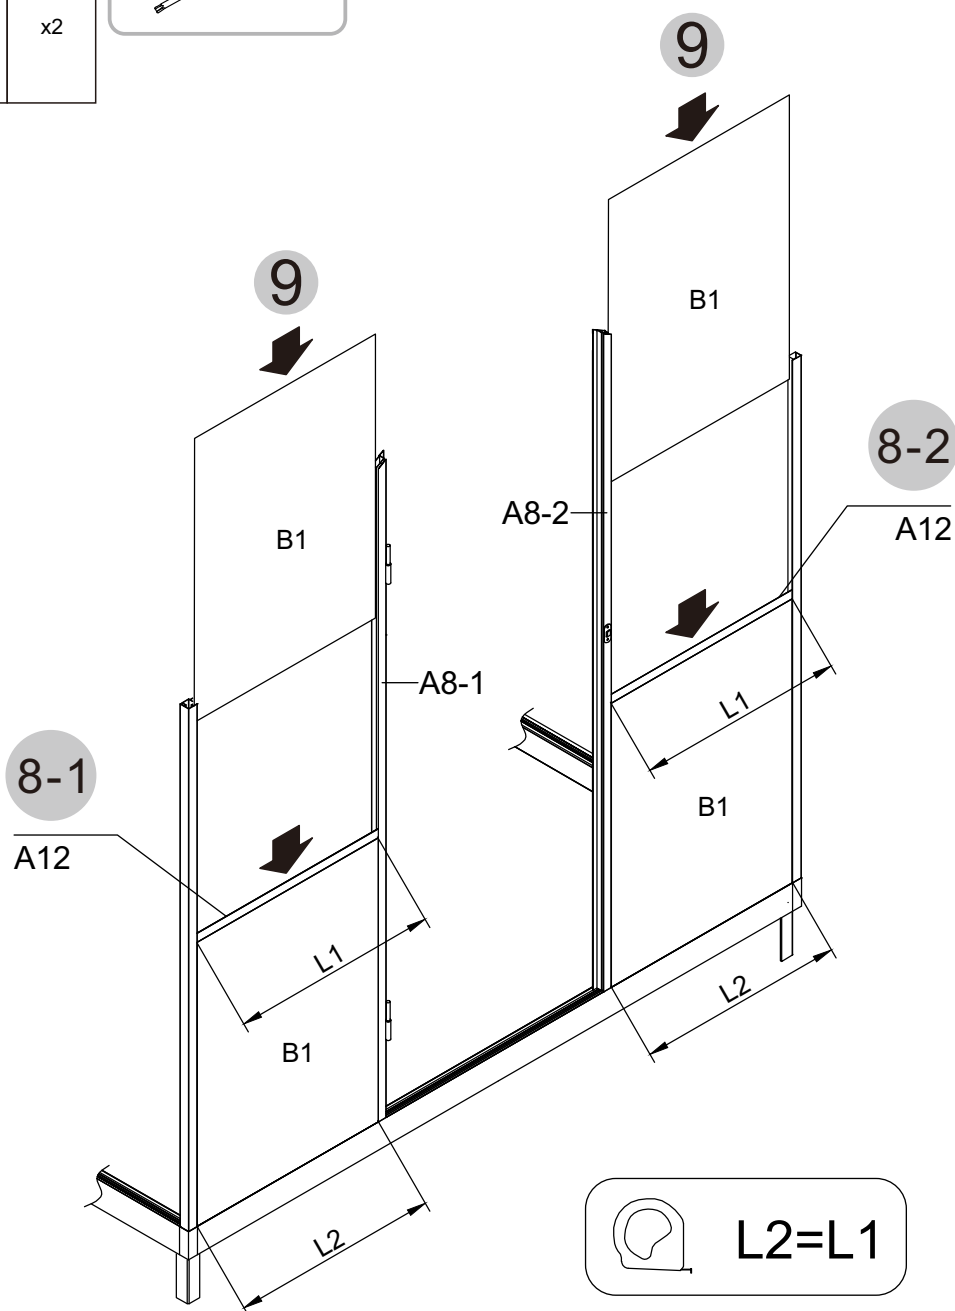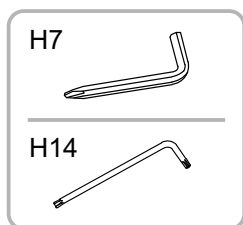

	A9	x1
	A12	x2
 M6x12	H8	x4
	B7-1	x1
	B7-1	x1

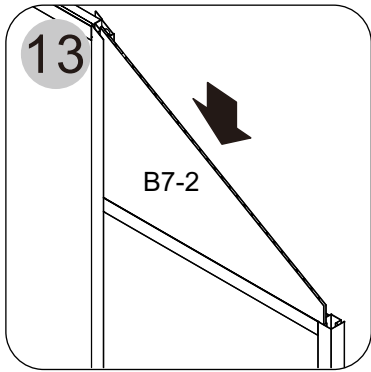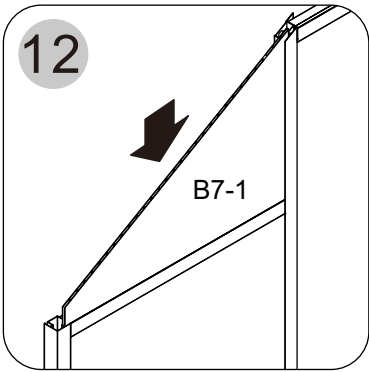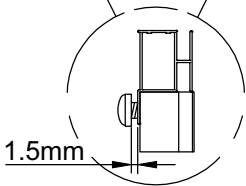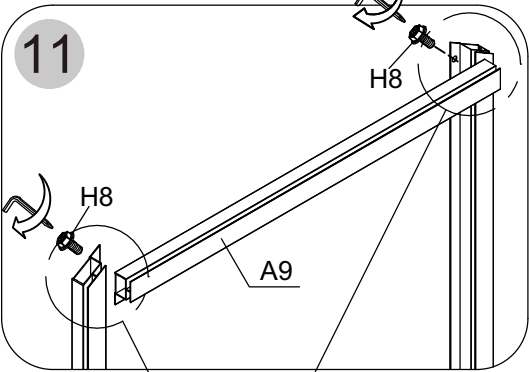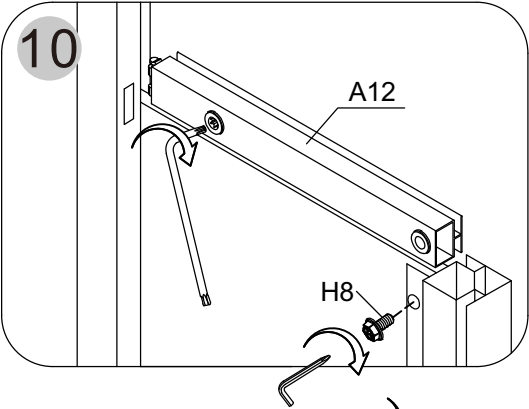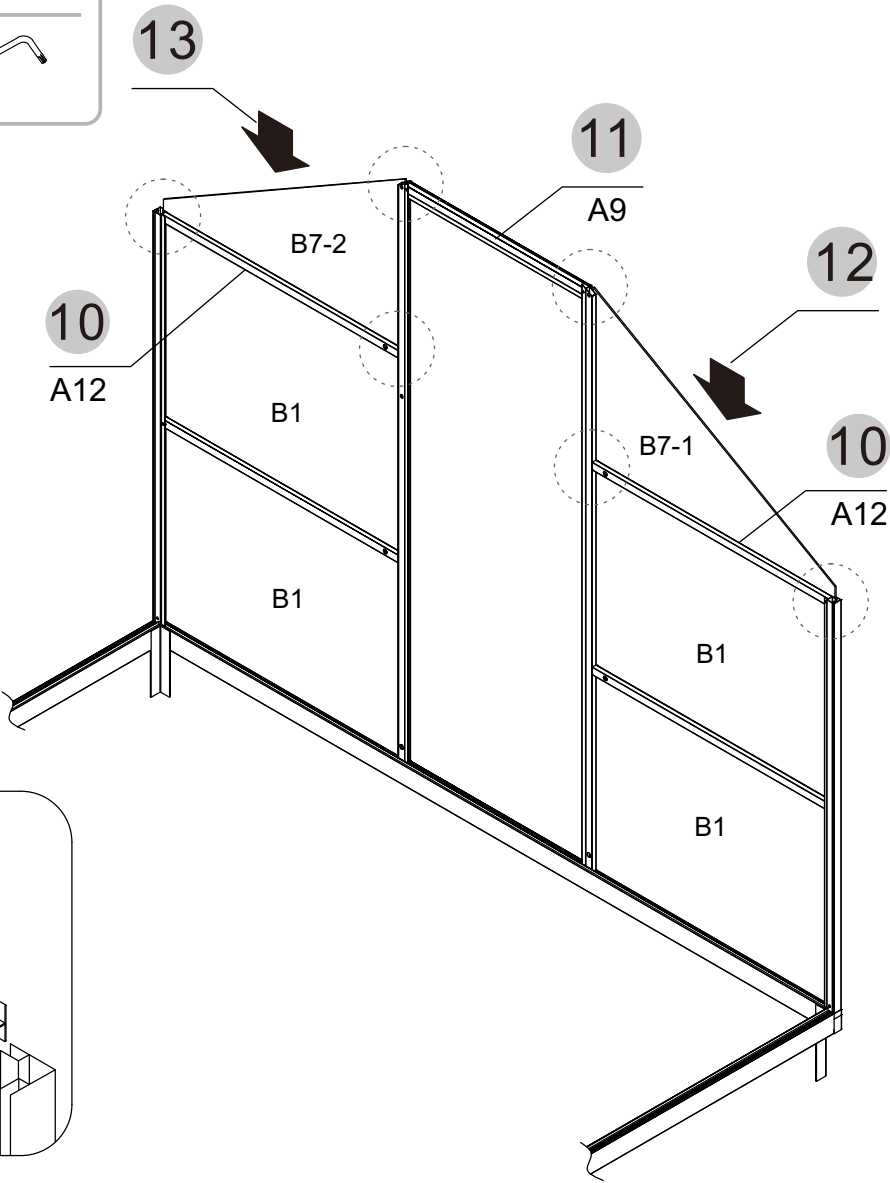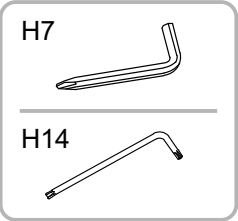


Do not tighten H8 screw well in Step 10 until Step 15 is done successfully.







	A6-1	x1
	A6-2	x1
	H2	x1
	H3	x1
	H8	x4

M6x12

	B8	x1
--	----	----

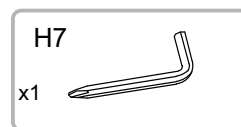


14-16

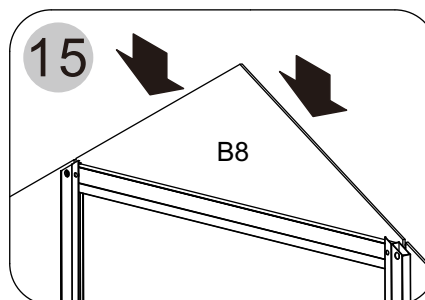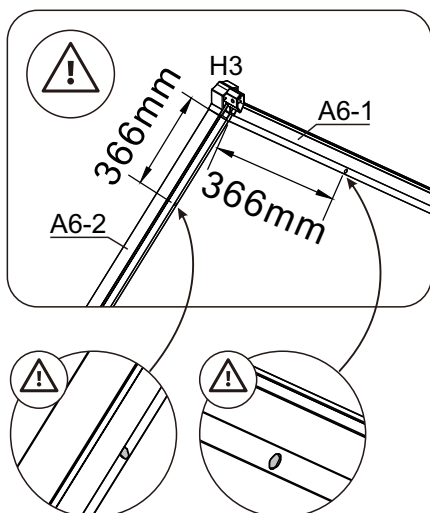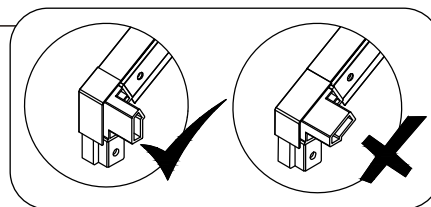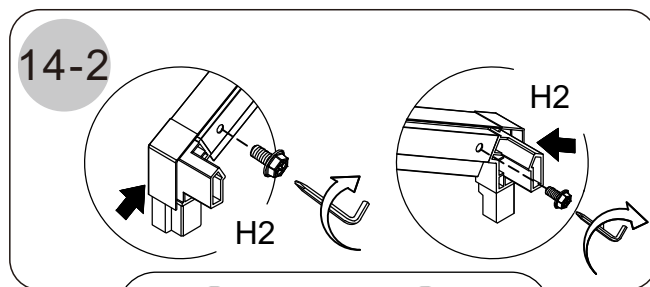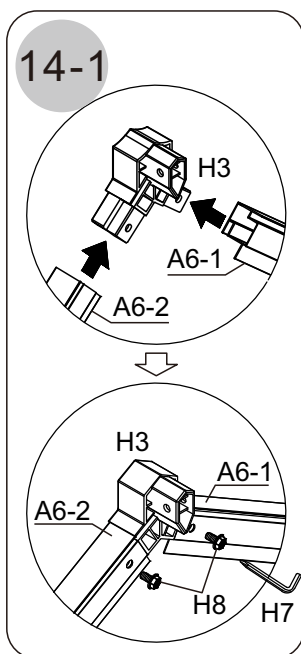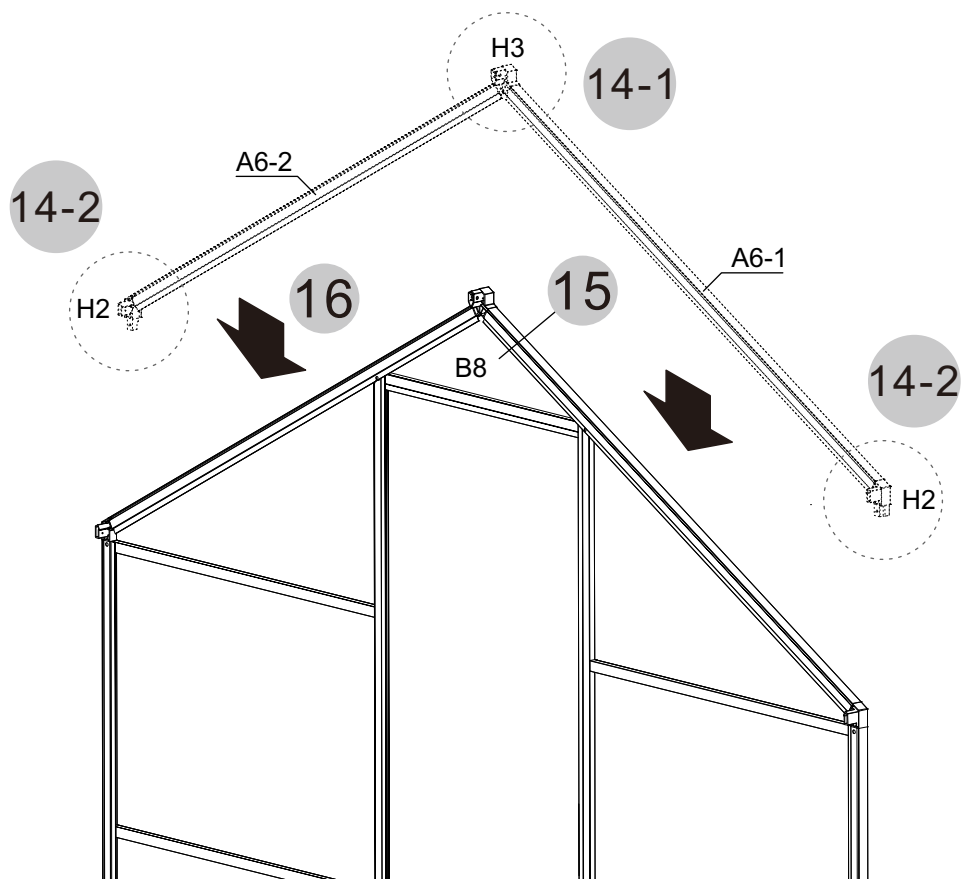

	H8	x4
--	----	----


H7	
x1	

17


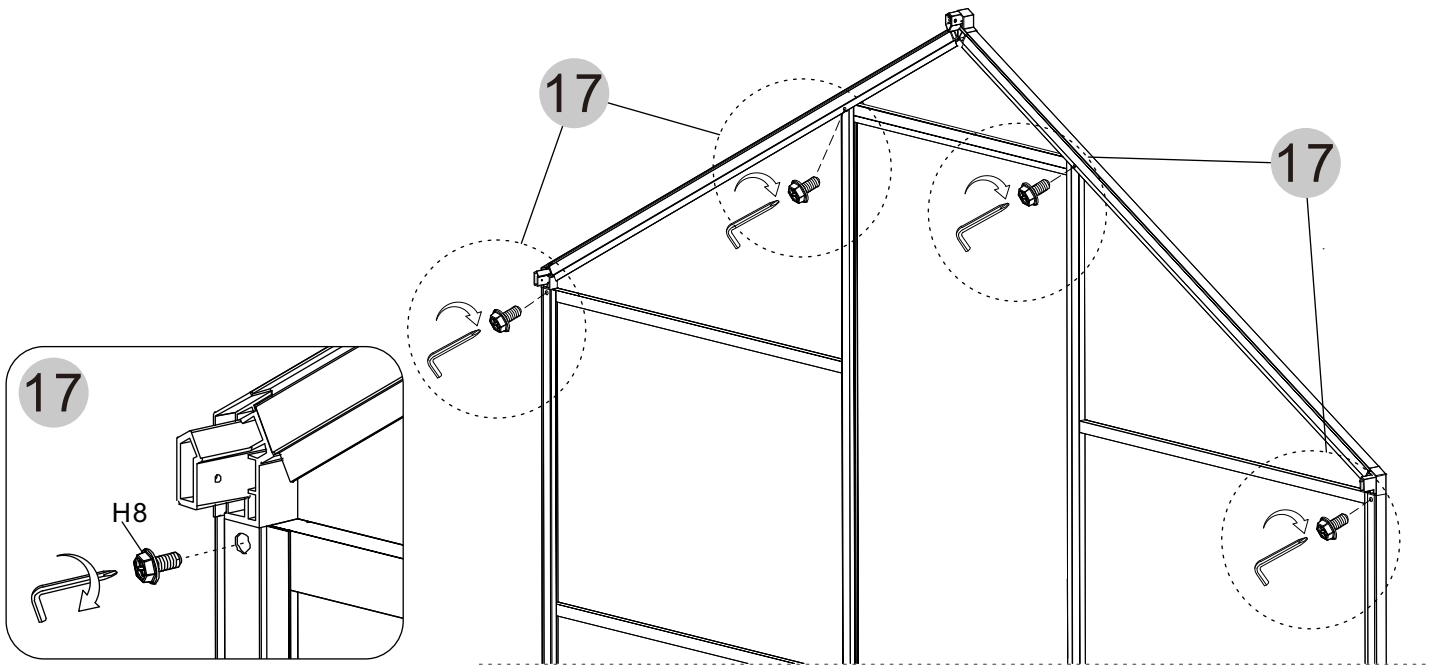


	A11-1	x1
	A11-2	x1


	B2	x2
---	----	----


H14	
-----	--






18-19

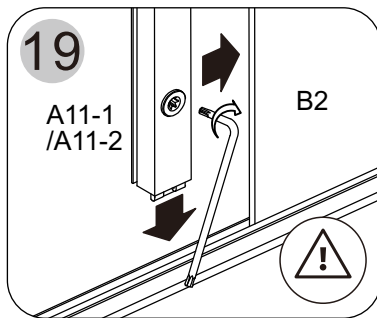
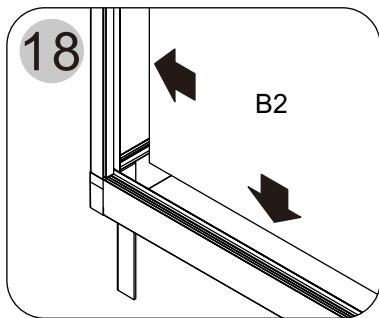







Please press the plate into place before locking it.

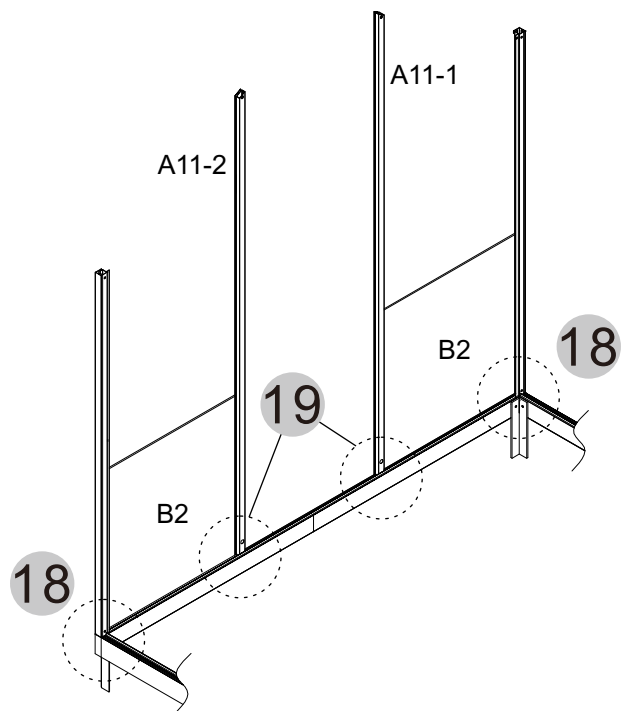

	A13	x2
	A19	x1
	H8	x2
	B6	x1

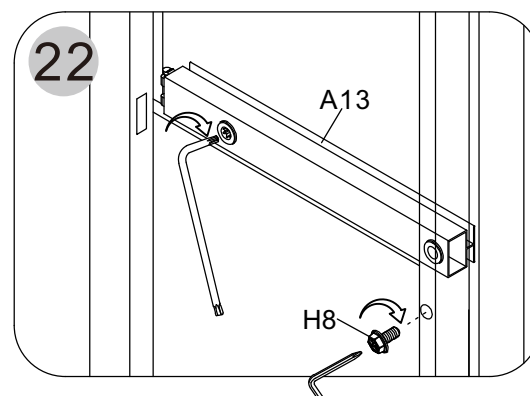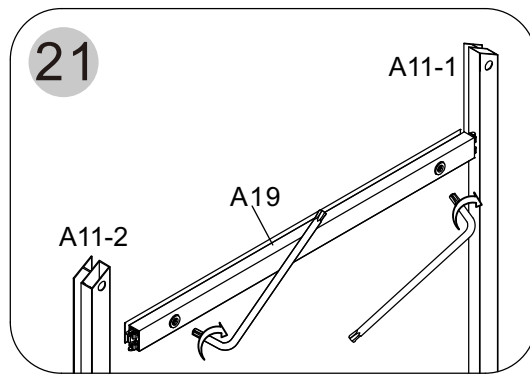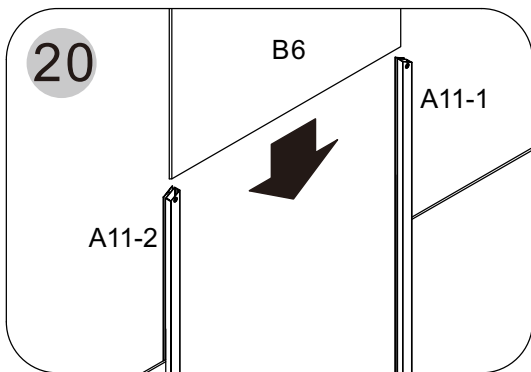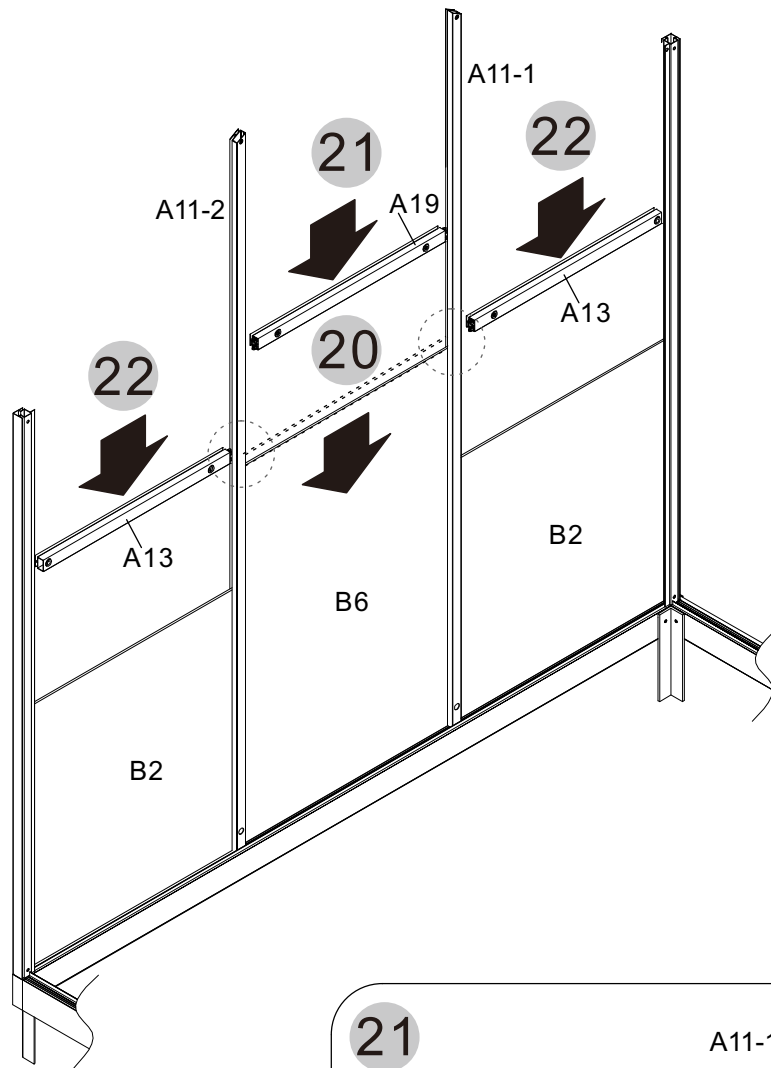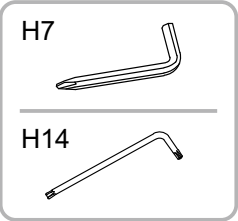

	A13	x2
	H8	x2
	B2	x2
	B10	x1

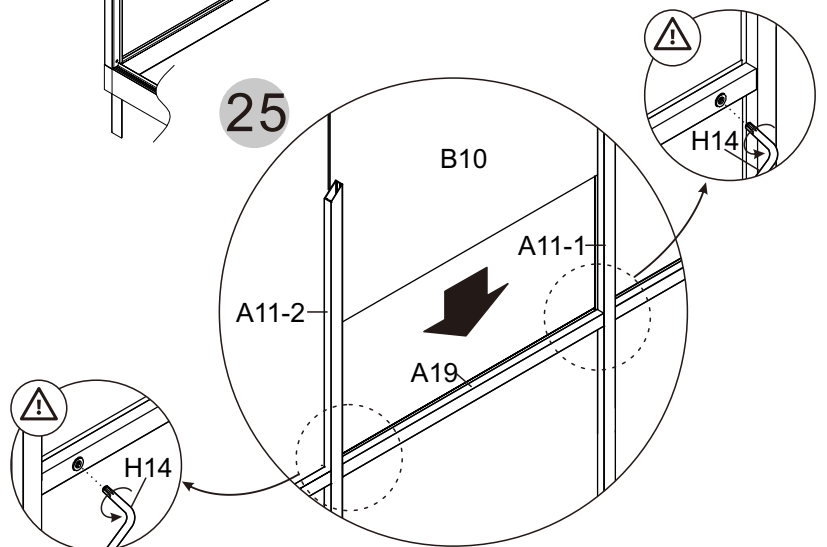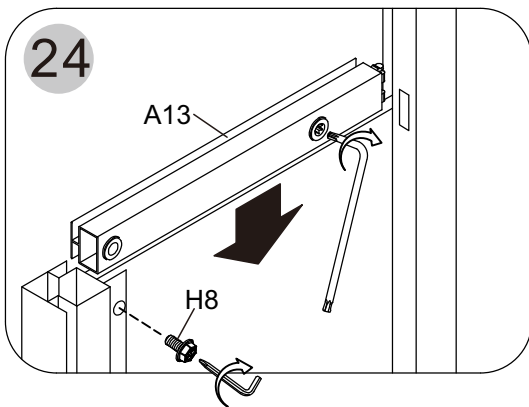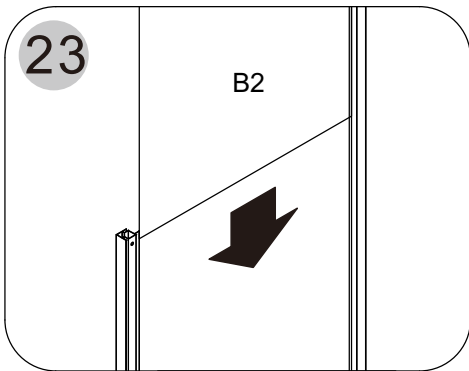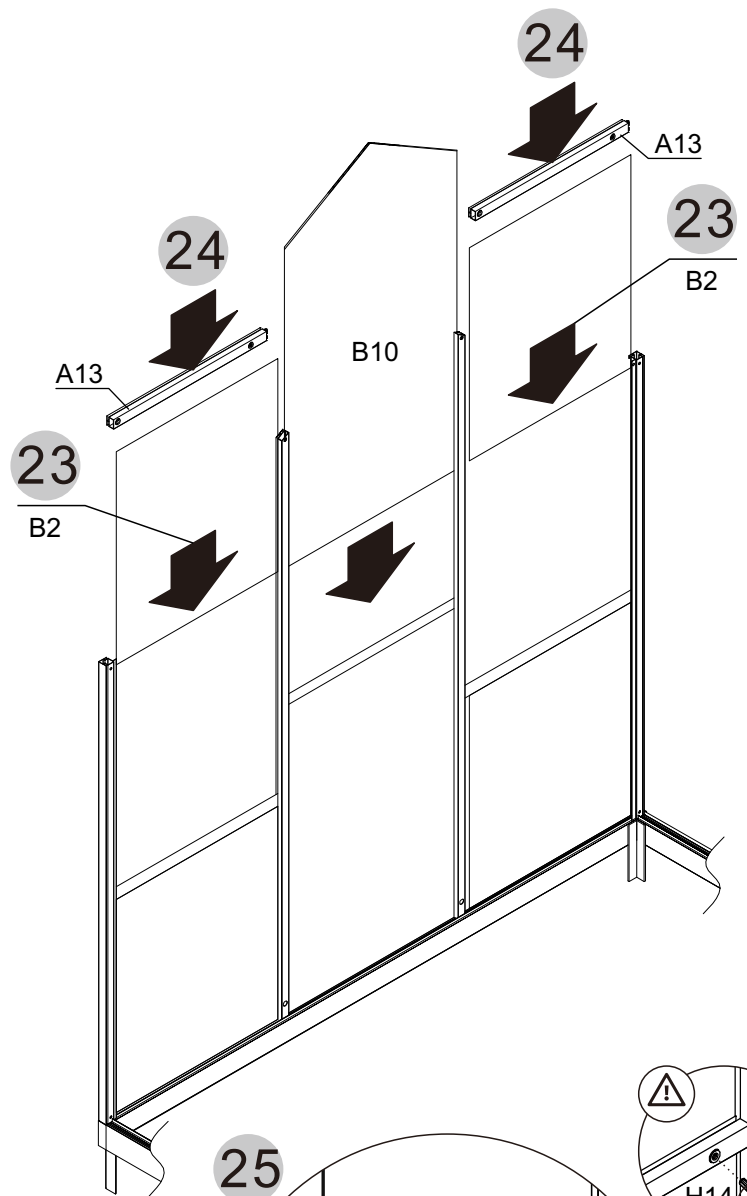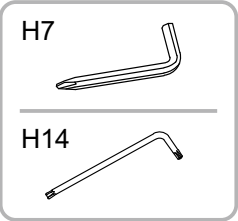


For better B10 installation, loose screws a bit, insert B10 and then tighten the screws again.





	A7-1	x1
	A7-2	x1
	H2	x1
	H3	x1
	H8	x8

M6x12

	B9-1	x1
	B9-2	x1








26-28

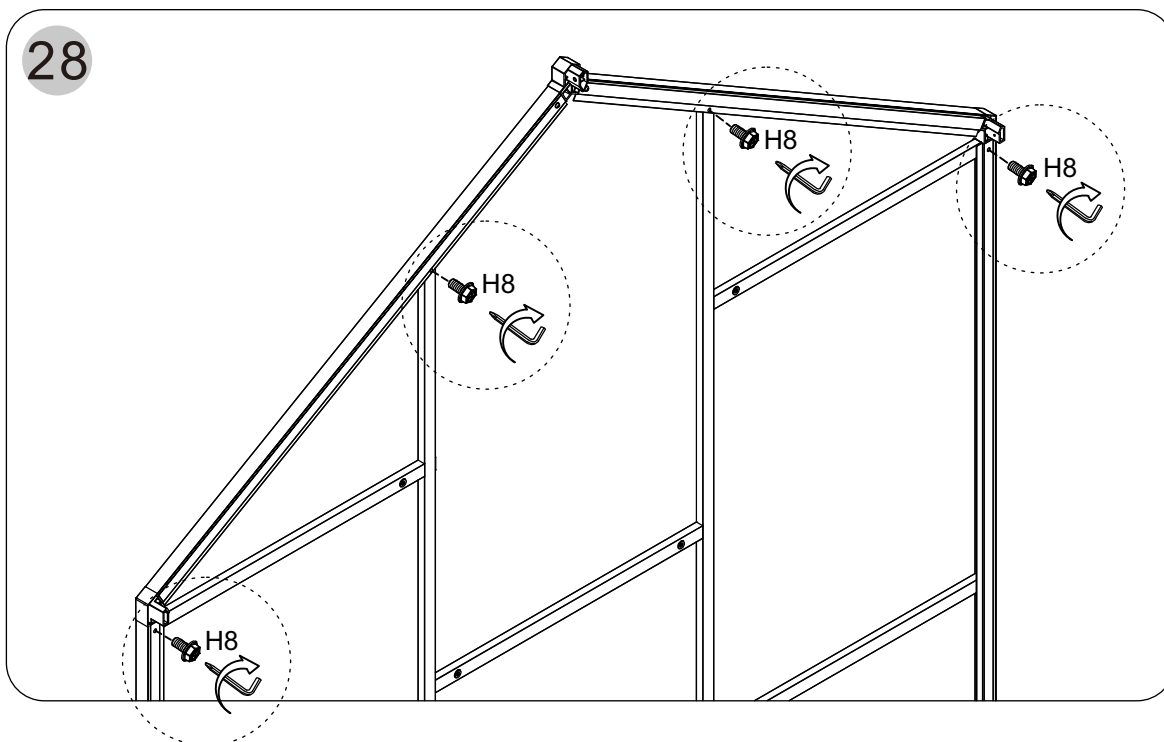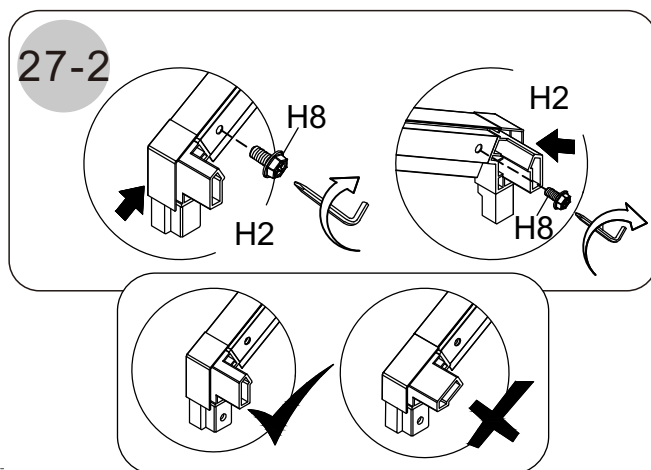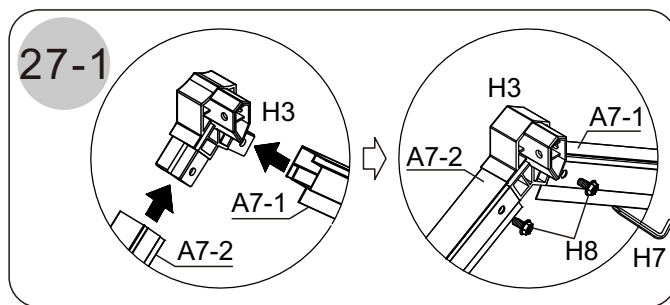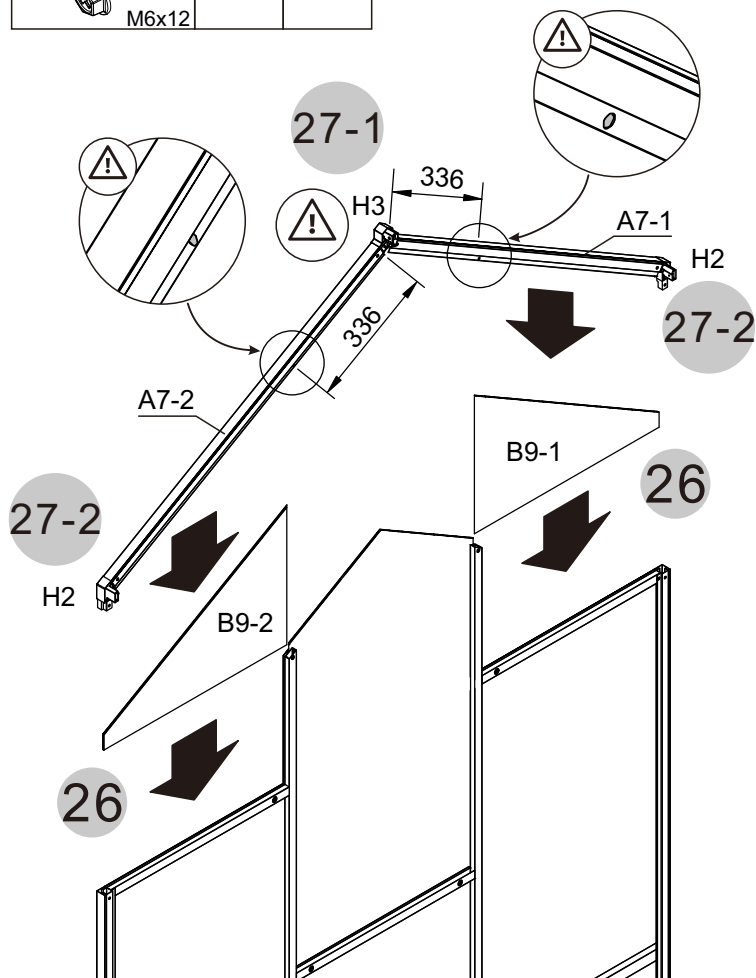

	A30	x3
	H6	x2
	H9	x2
	H11	x6
	H12	x4

	H17	x6
	B11	x3


H7	
H15	

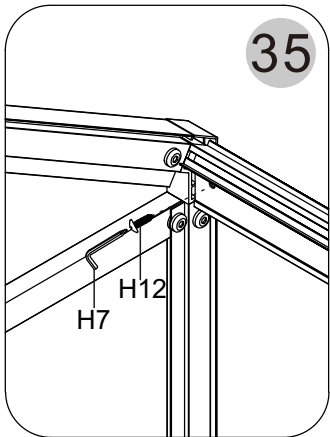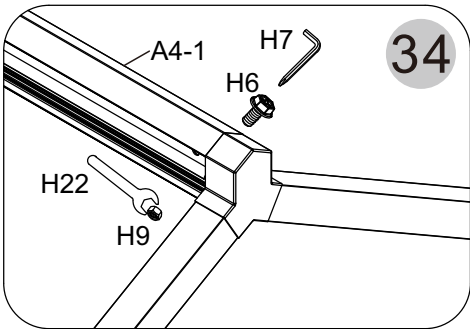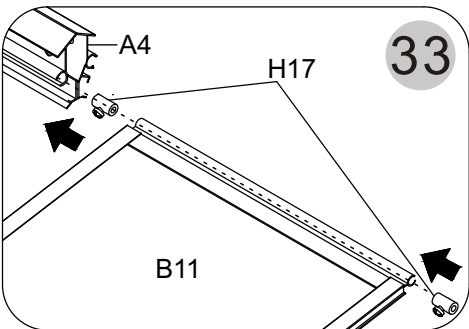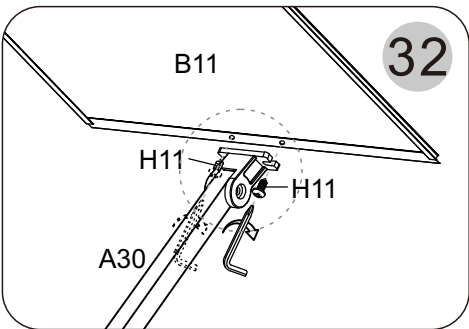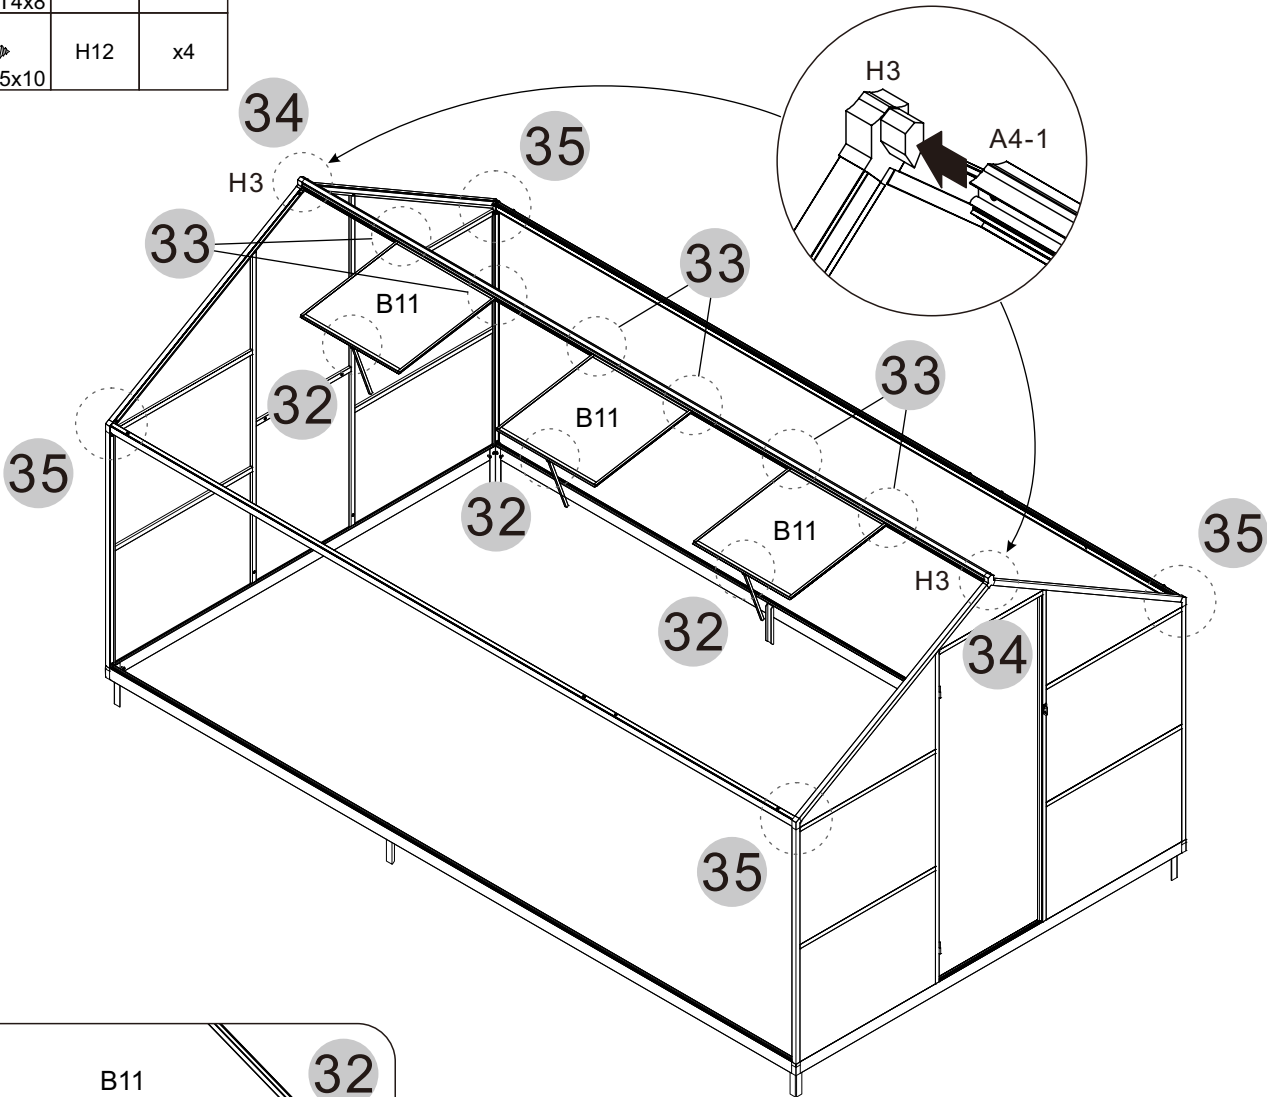




	A15	x12
	B3	x14






36-38

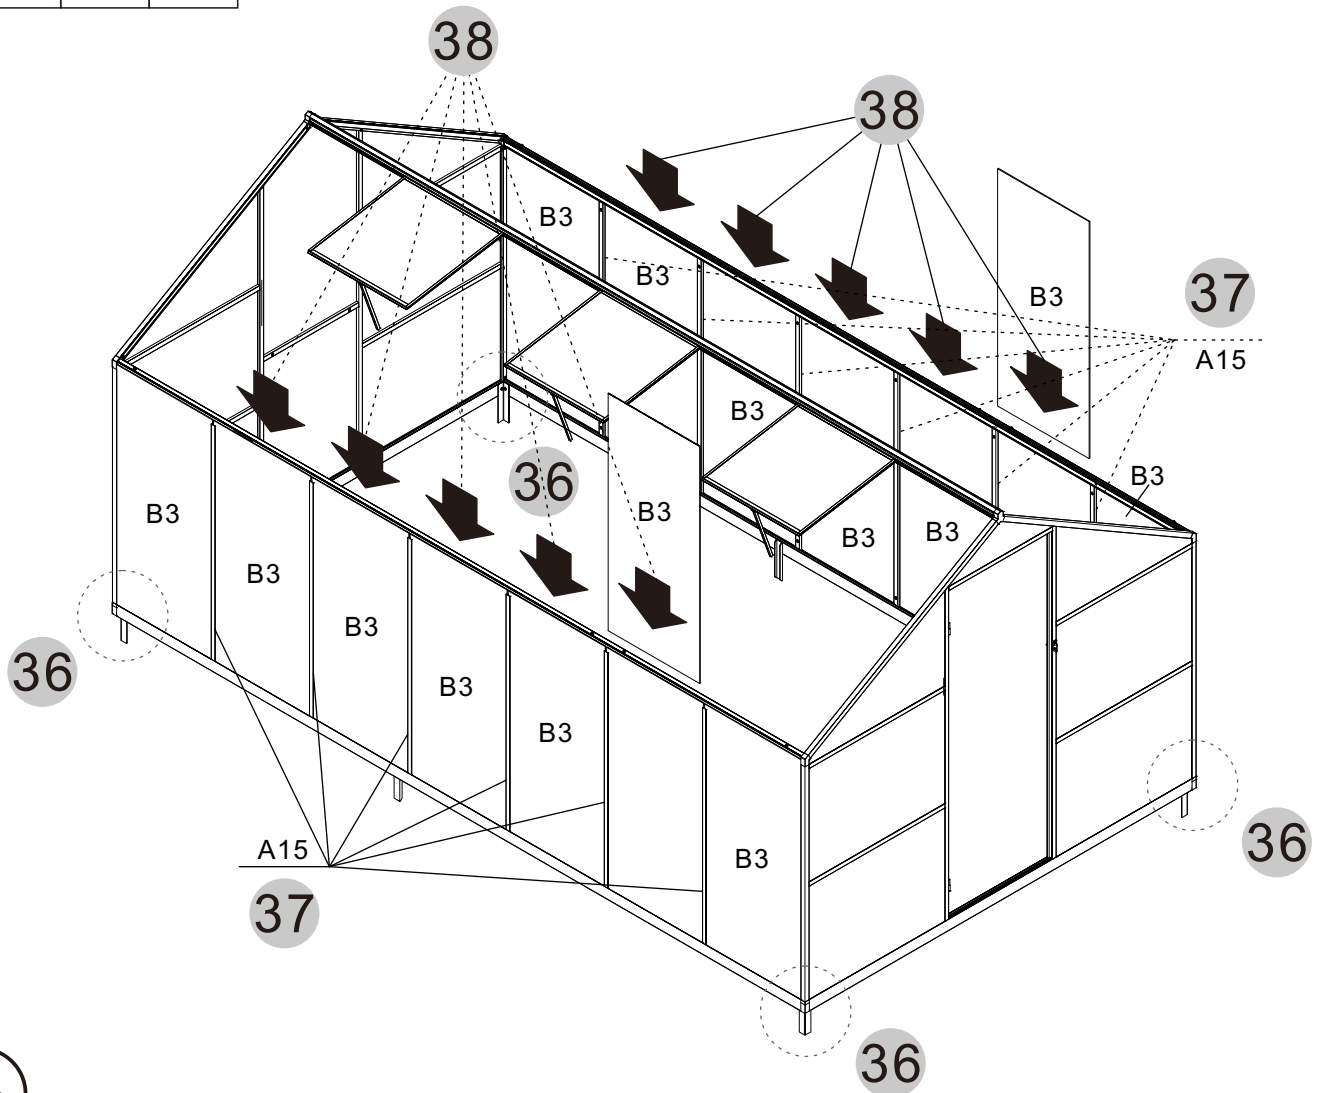


Please install both sides first and then the center.


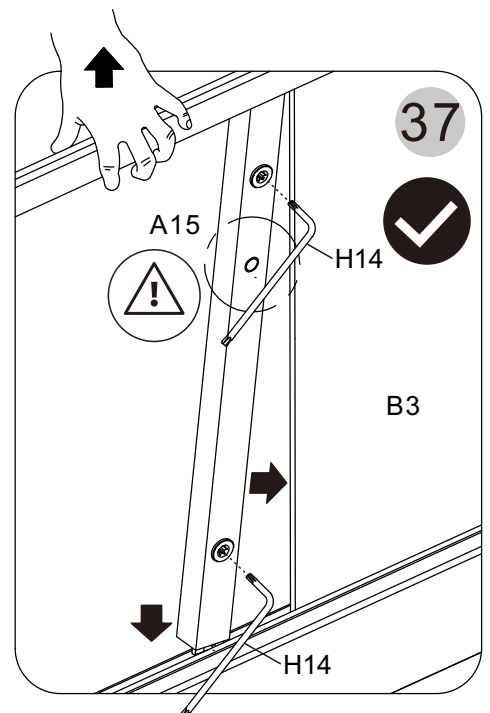
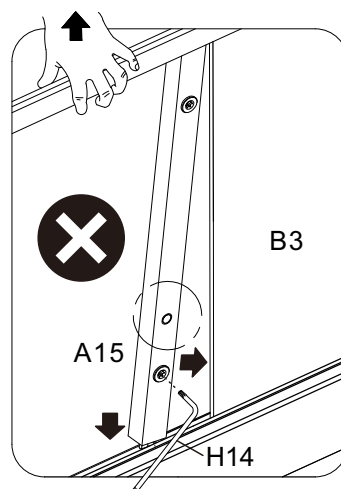
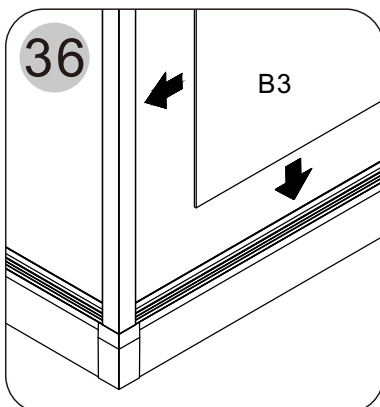



	A10-1	x3
	A10-2	x3
	A16	x6
	A17	x3
 M6x12	H8	x6
	B4	x11


	B5	x3
--	----	----

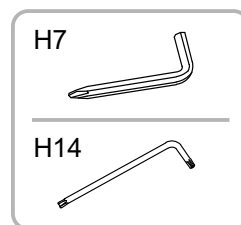








39-42

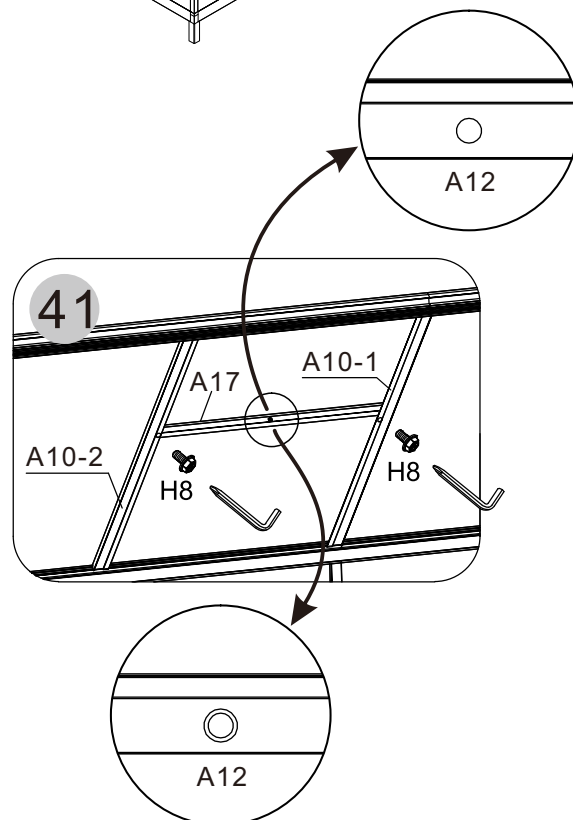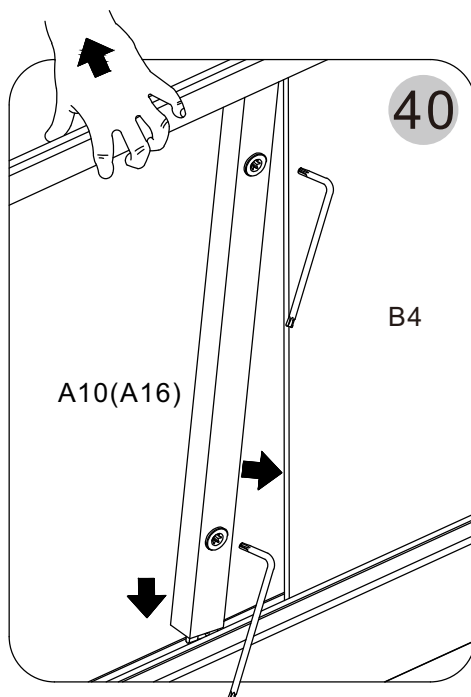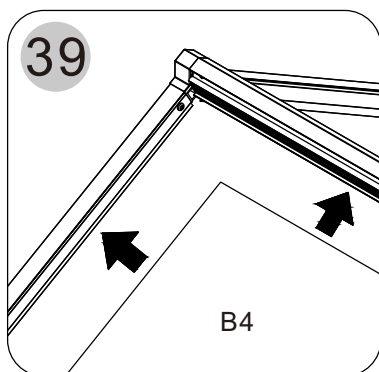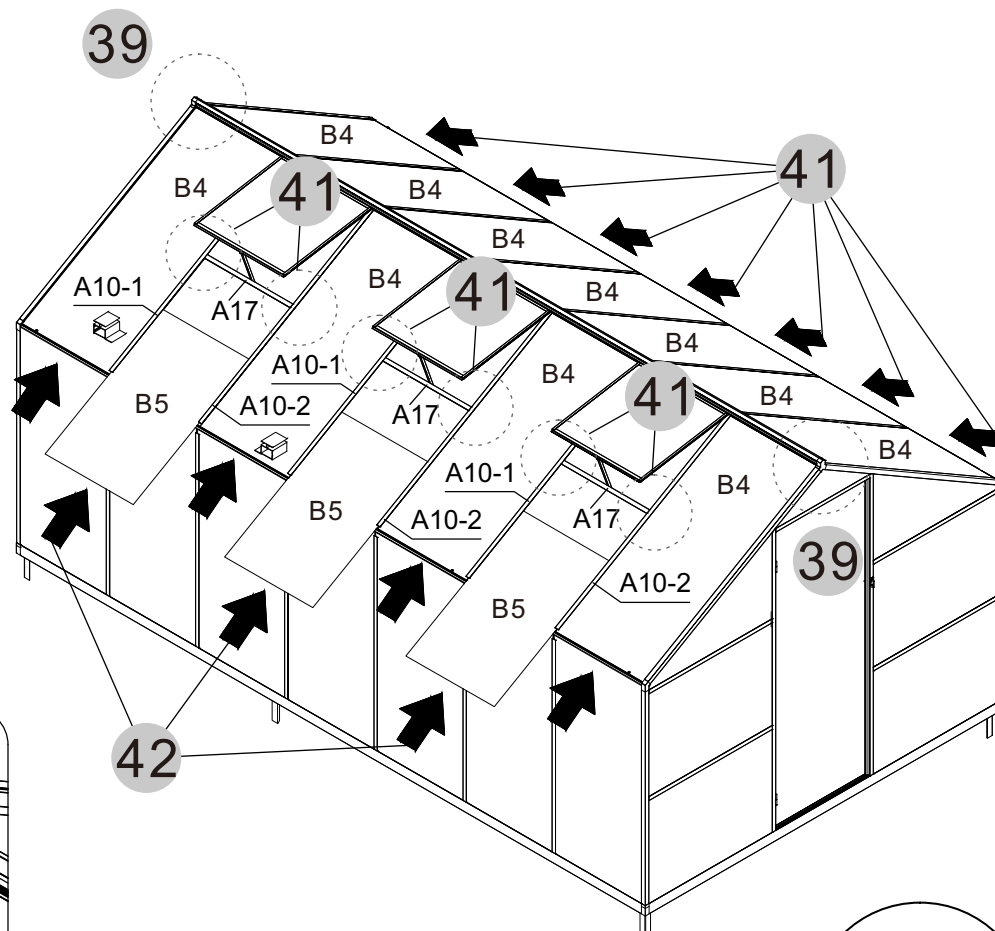


	A21	x6
	H5	x2
	H12	x4
	H13	x24
	H19	x4







43-46

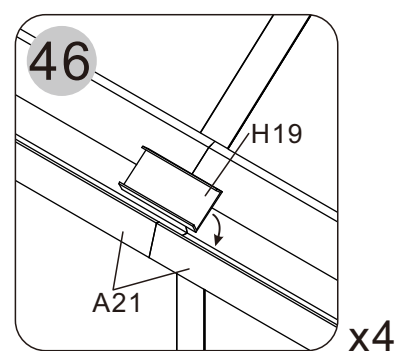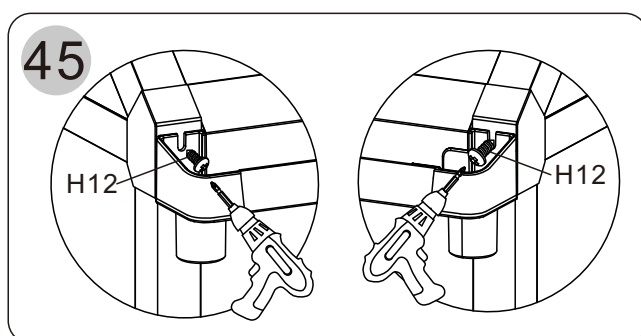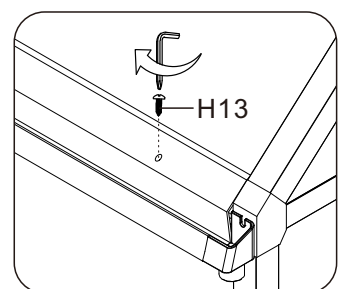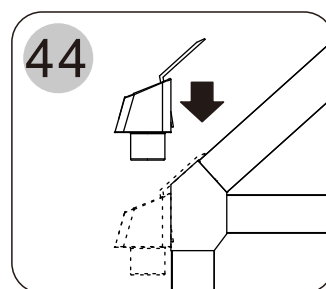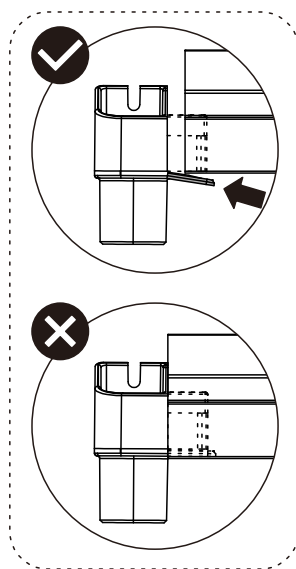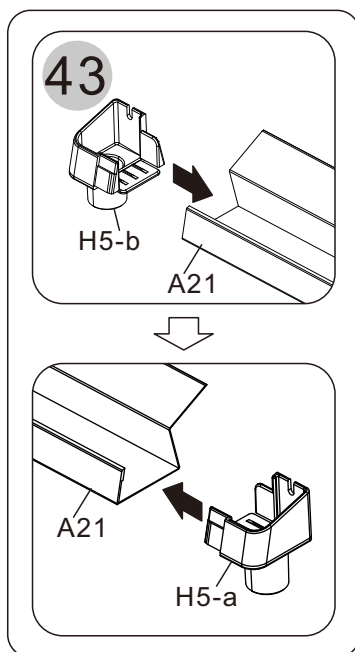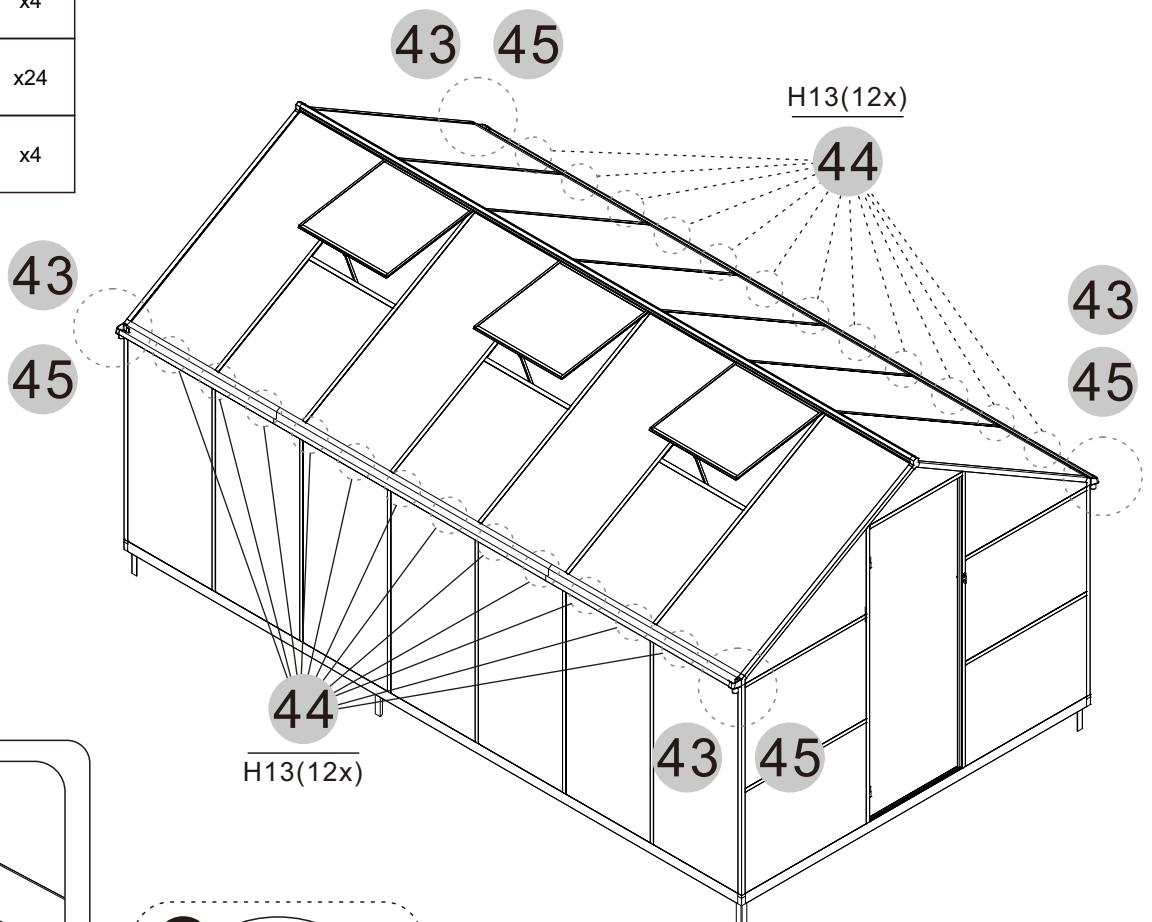



	H16	x3
	M4x40	x3






47-48

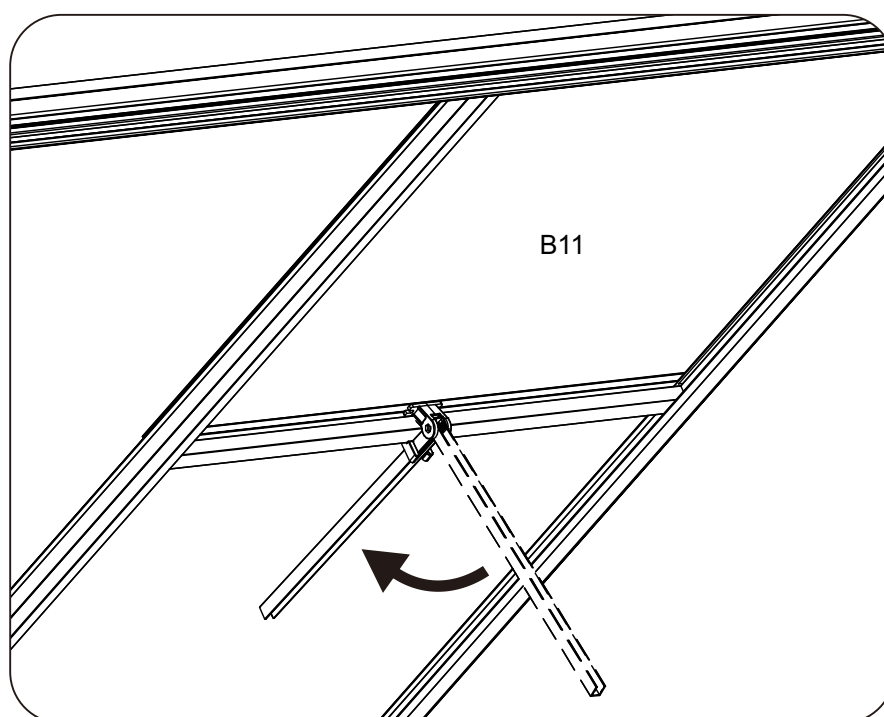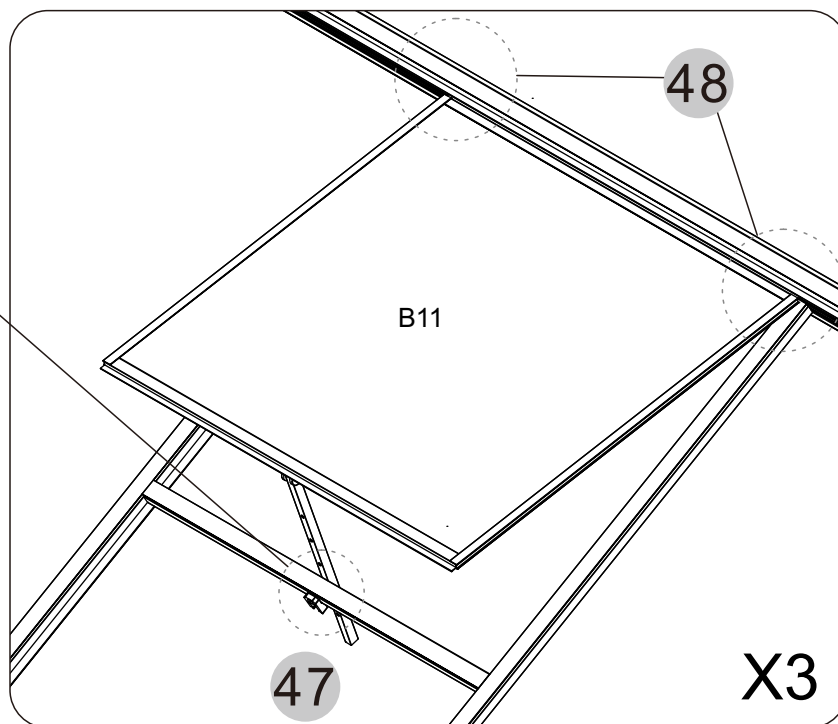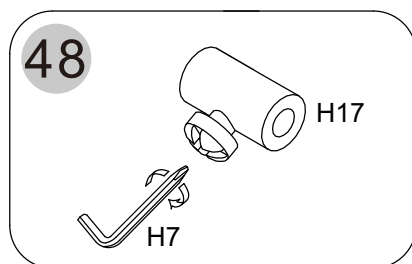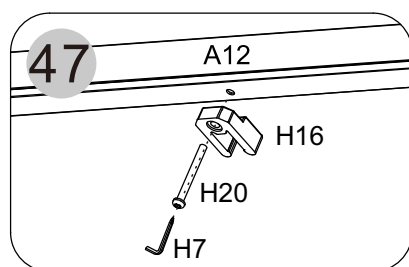



	A18-1	x1
	A18-2	x1
	A19	x1
	B6	x2








49-50

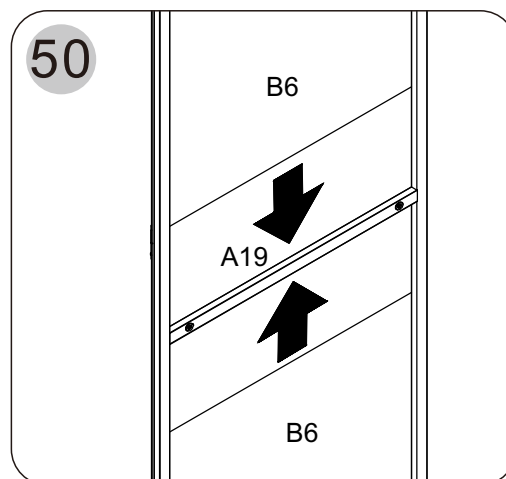
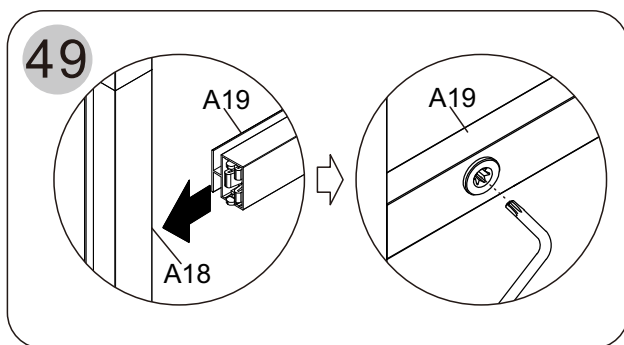
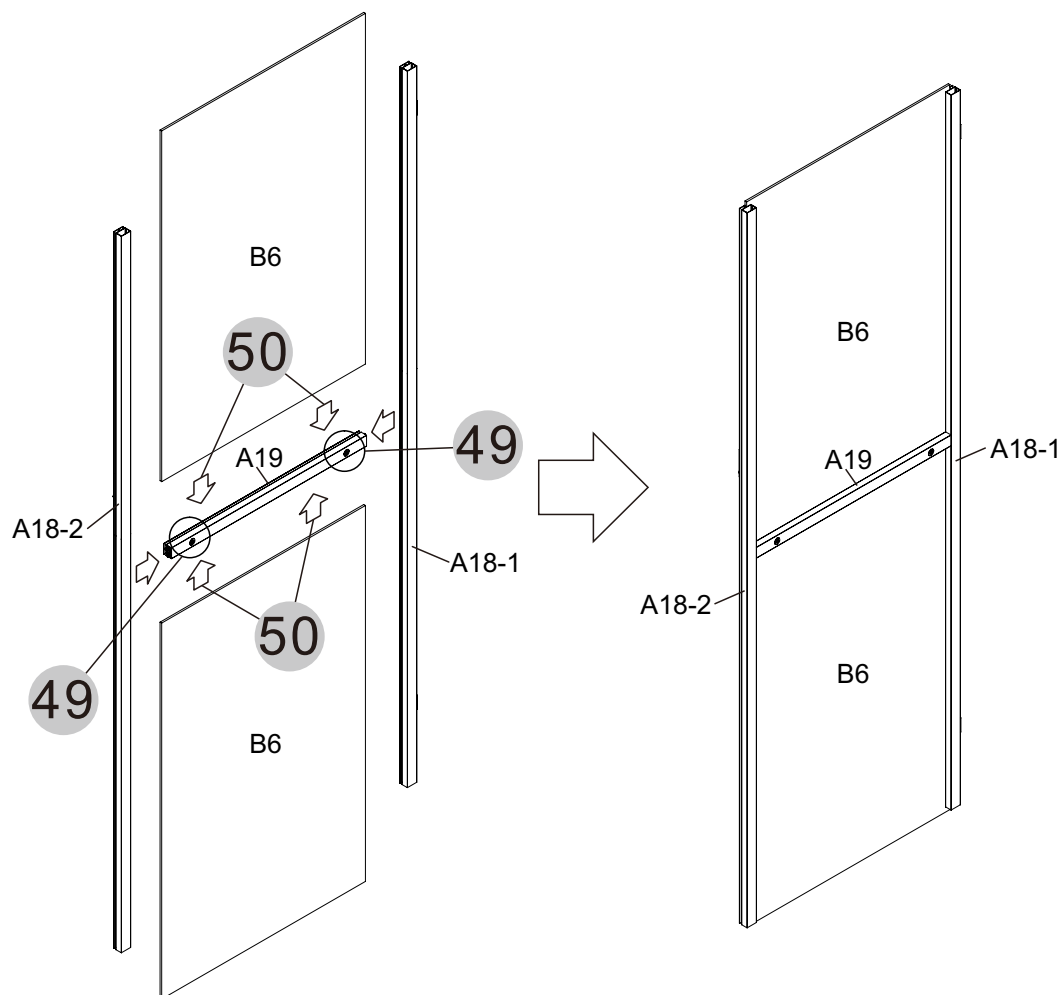


	A20	x2
	H4	x2
	H11	x8

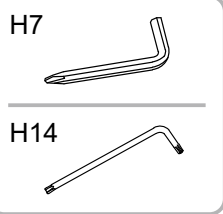


51-53

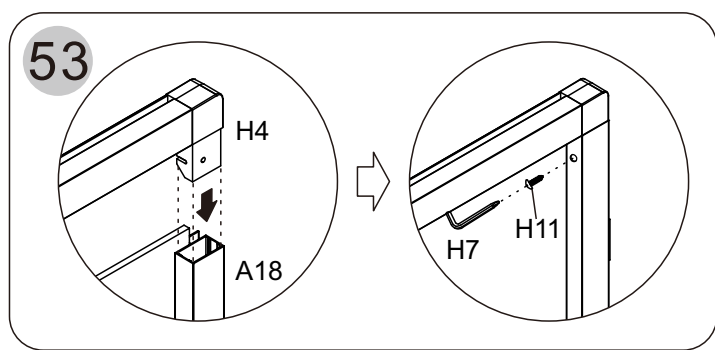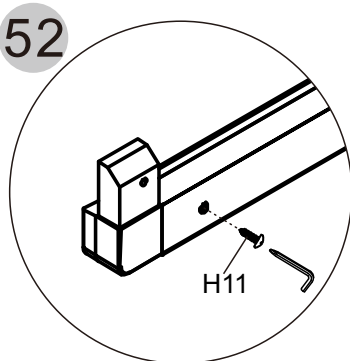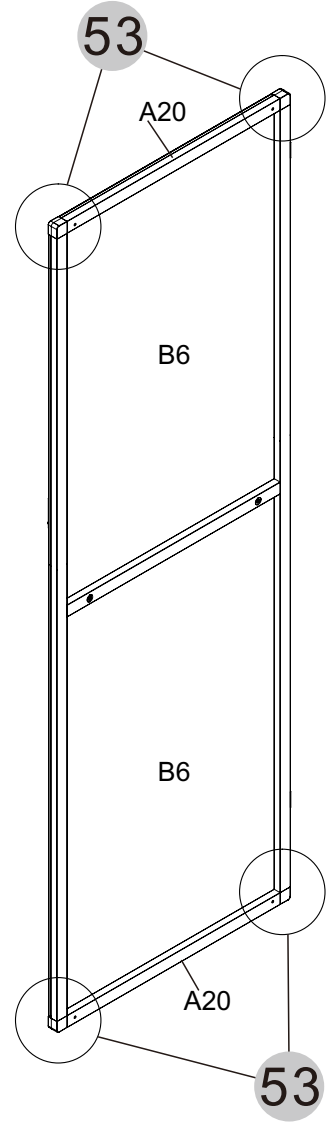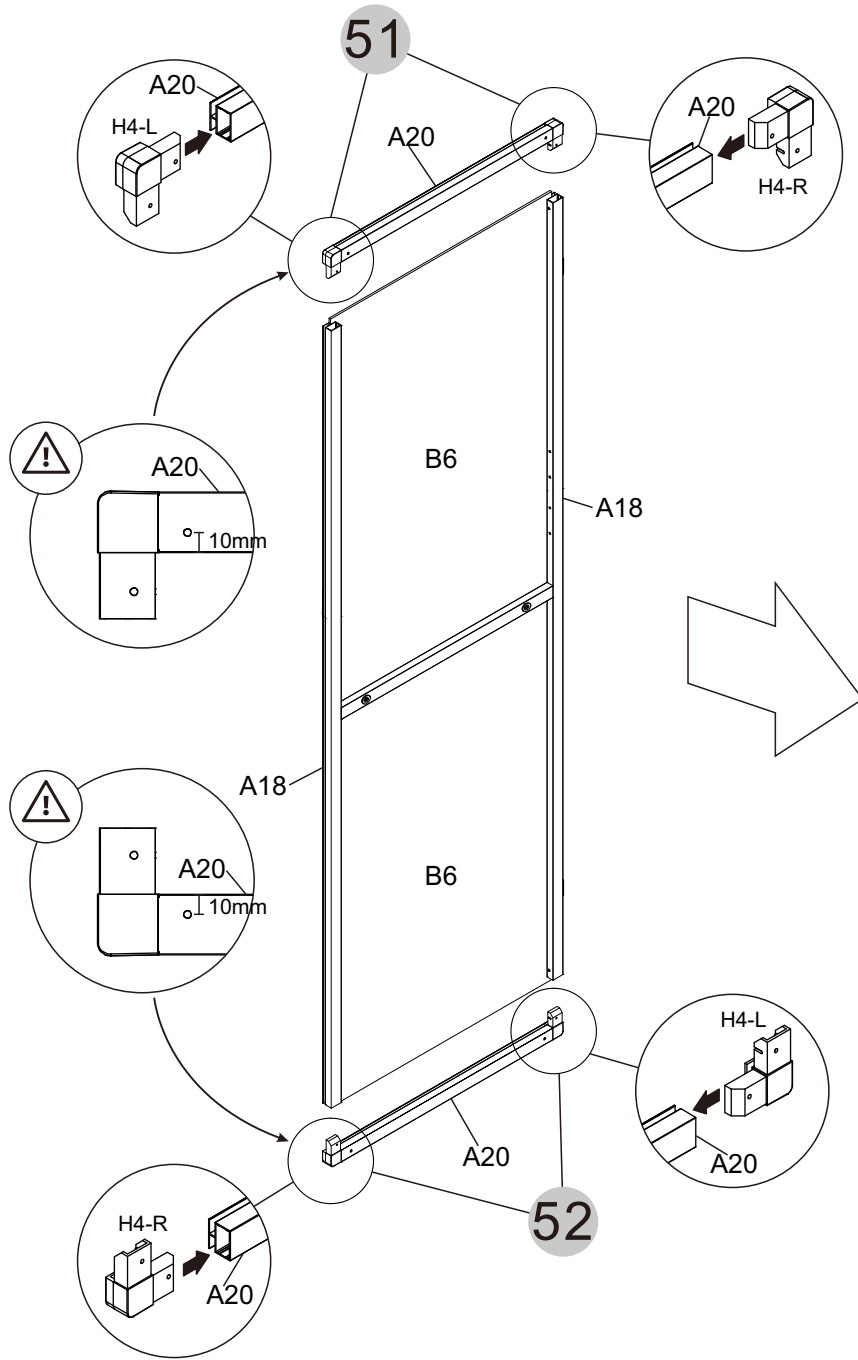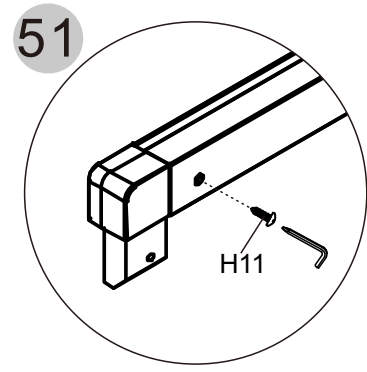

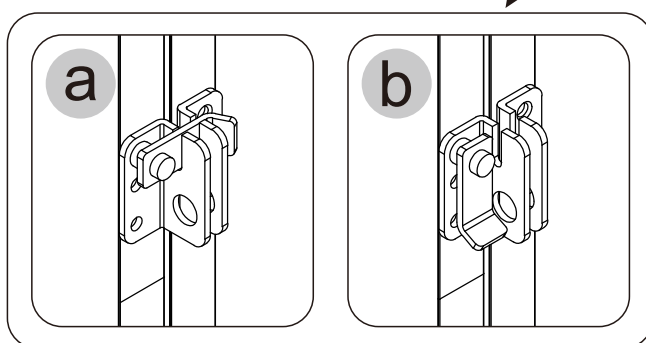
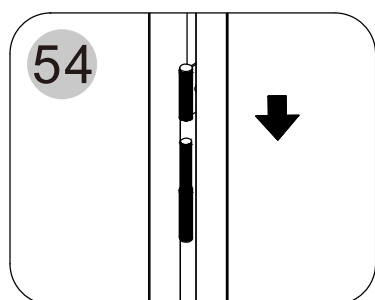
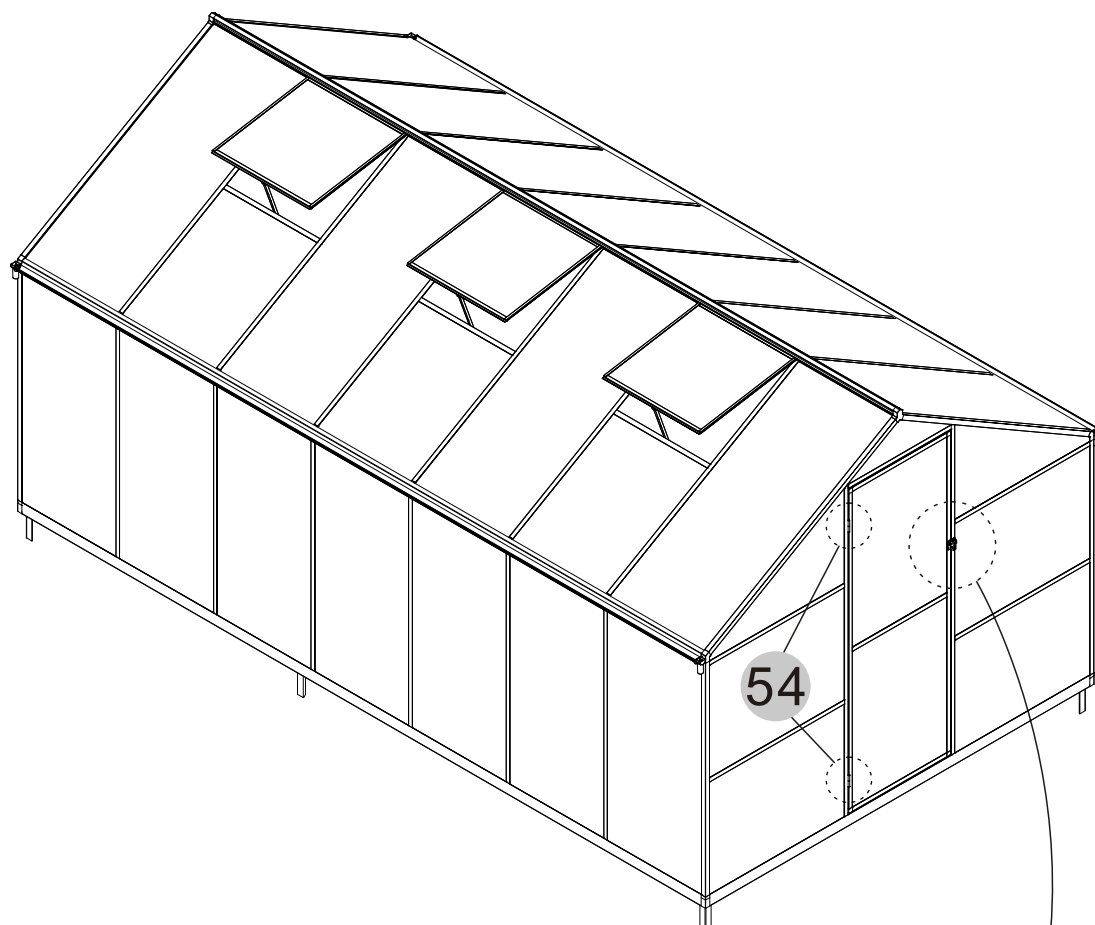


	A23	x8
	H18	x16


M6x20









55

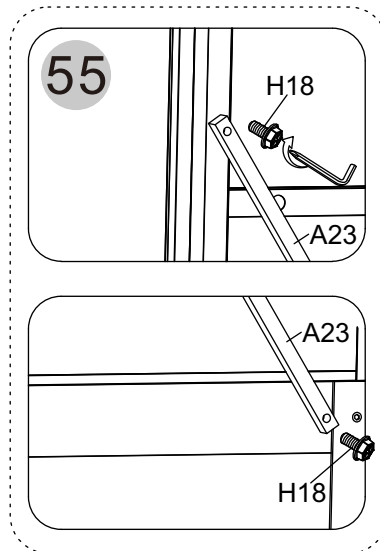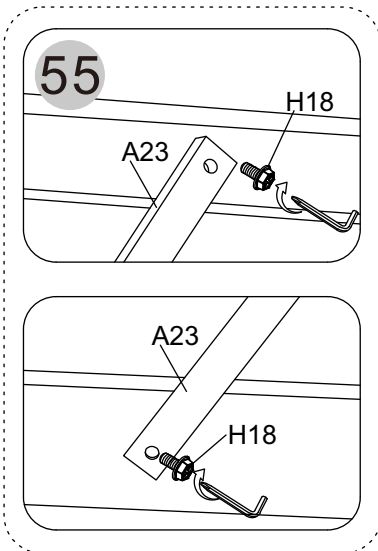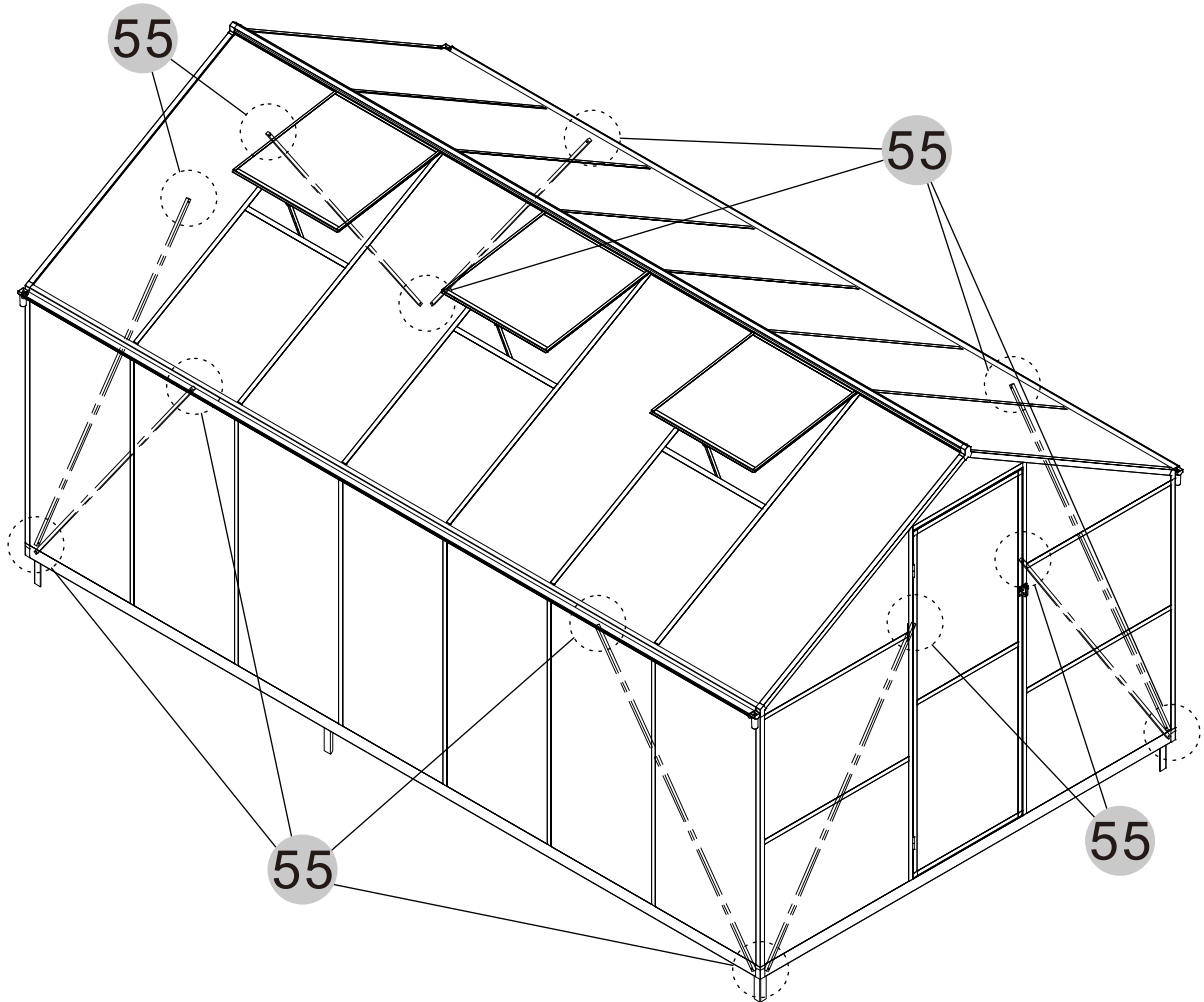

	A25	x6
	A26	x12
 M6x12	H8	x36
	H21	x18



56-60

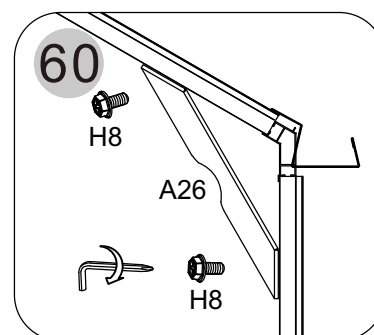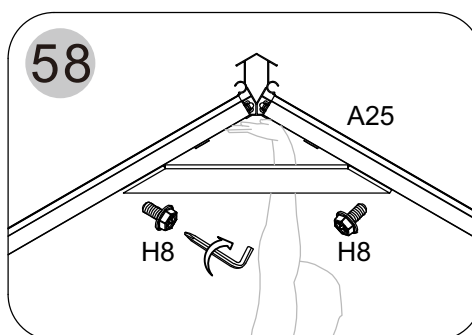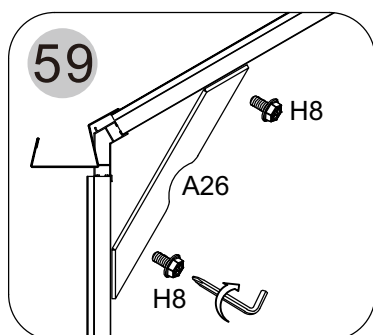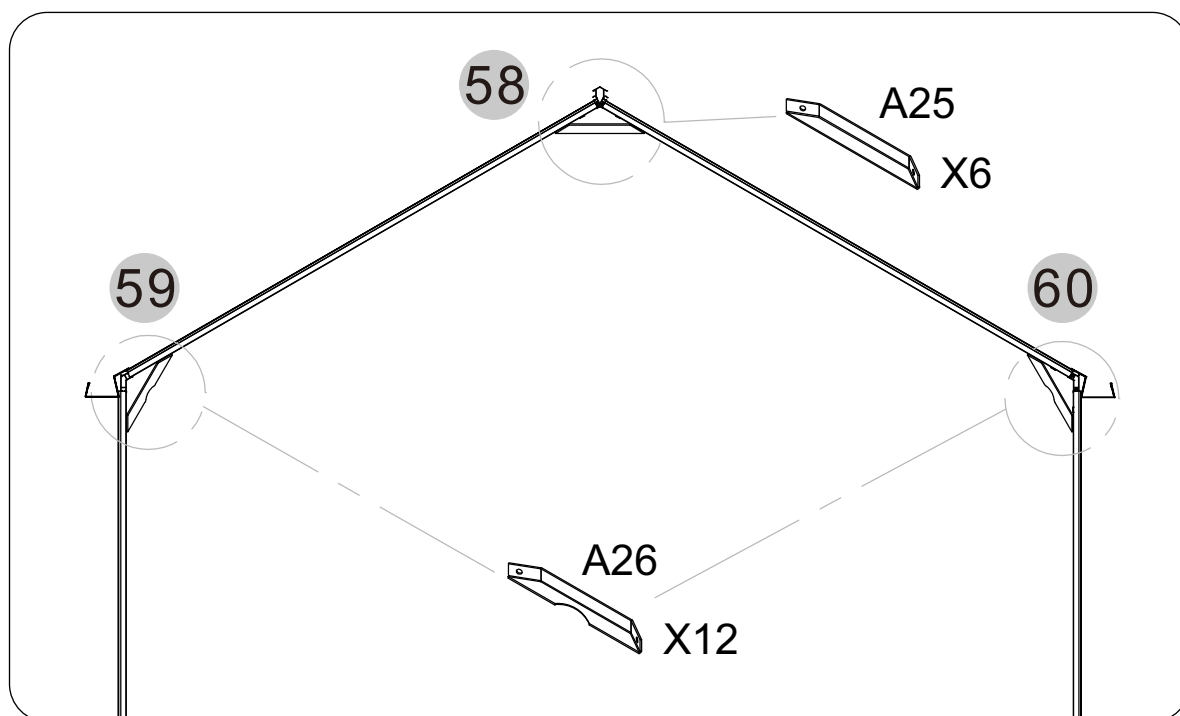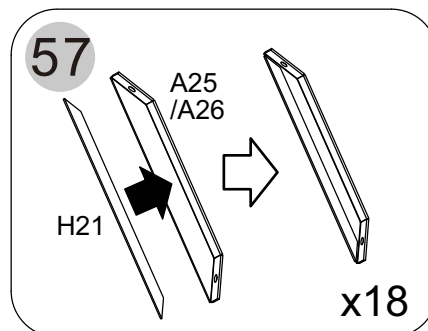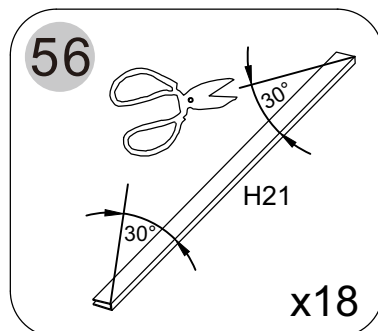

Check and tighten all screws to ensure that the greenhouse is sturdy.